



GF11036A

Magnavox (TYPE 1) Ignition Coil Installation Instructions

The spark plug wire towers are numbered to corresponding engine cylinders as shown below. There are 6 primary terminals on the underside of this coil; 3 positive (+), and 3 negative (-). Viewed from the bottom, the negative terminals are on the odd numbered side, with the positive terminals on the even numbered side.

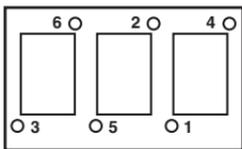

Coil - Top View

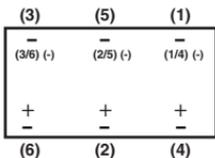

Coil - Bottom View


The ignition module has 6 female terminals :

The 3 positive terminals are connected by the 3 branched Blue wire

The 3 individual wires must be connected to the negative terminals

as shown below for the correct firing order: Coils 1/4 = Yellow/Black

Coils 2/5 = Green/ Black Coils 3/6 = Blue/Black (single lead)

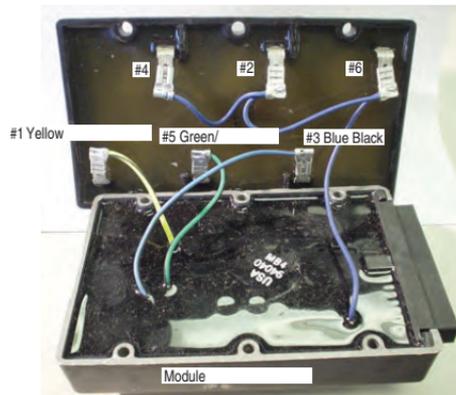

Attach the module wires as shown to the coil. Be careful to not flex the terminals more than necessary to avoid breaking them. Once all terminals are connected, fold them over so they lay flat against the bottom of the coil. Install the coil to the module.

Standard provides the best in replacement ignition parts equipment.