

## GF6322 ALT. B

### MIXTURE CONTROL SOLENOID

- A. With ignition off, remove connector.
- B. Remove mixture solenoid screws (3). FIG. 1
- C. Carefully remove solenoid using a slight twisting motion.
- D. **CAUTION:** Coat new o-ring seal with light engine oil. Make sure new gasket is installed on solenoid. FIG. 3
- E. Align solenoid with recess in bottom of bowl and to prevent distortion or damage to seal, install with a twisting motion.
- F. Install solenoid attaching screws (3).
- G. **CAUTION:** Connect pink wire on right hand terminal as noted in FIG. 2. If incorrect, reverse the wires using the proper tool.

**NOTE:** A System Performance Check should be performed after any repairs to the Computer Command Control system.

