



650000B

INSTALLATION INSTRUCTIONS

1. Disconnect battery cable before installing solenoid.
2. Remove original solenoid and the return spring.
3. Replace solenoid using included hardware as needed.

NOTE: Hardware is provided to fit the three starter versions pictured. Select the proper hardware and install. Not all hardware will be used.

4. Connect battery cable to battery.

