

**Installation Instructions**

- Disconnect negative battery cable.
- Replace the old starter switch with the new one.
- Connect positive battery cable to "B" terminal.

- Connect starter motor cable to "M" terminal.
- Connect ignition switch lead to "S" terminal.
- Connect coil lead to "I" terminal if applicable.

If original switch has only 3 terminals - B, M & S, do not use "I" terminal.

- Connect negative battery cable.

WARNING

This solenoid grounds through its base. It is very important that the mounting surface is free of paint and rust. Mounting bolts must be rust-free and torqued to specifications. Inspect and clean all body and battery grounds. Failure to do so can lead to contact welding, starter damage, and premature solenoid failure. DO NOT OVERTIGHTEN NUTS. THIS WILL CAUSE INTERNAL DAMAGE AND PREMATURE FAILURE OF COMPONENT.

Learn more about electrical parts on our website.