## **Recommended Initial Settings**

- 1. Band Selector A-H
- 2. RF Power set 5 O'clock
- 3. Talkback set to 11 O'clock
- 4. Mode set to AM
- 5. ANL & Noise Blanker set to NB+
- 6. Color and Dimmer set to the middle position
- 7. Volume Control
- 8. Squelch set where ever you like
- 9. Mic Gain wide open or turn down if needed
- 10. RF Gain wide open or back off slightly
- 11. Echo Volume set where ever you like
- 12. Echo Timing set where ever you like

