

2011-2015 Mercedes GL Class, ML Class

Air Suspension Compressor

170M-20


Installation Guide



ALWAYS SUPPORT THE VEHICLE ON SAFETY STANDS.



Removal & Installation Procedure

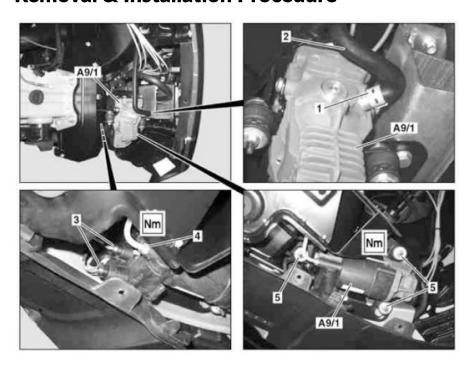

- 1. Switch off ignition.
- 2. Reaise vehicle using lift until the rear wheels are clear of the ground.
- 3. Remove front section of fender liner in right front fender.
- 4. Release clip (#1) and detach intake hose (#2).
- 5. Disconnect electrical connectors (#3).
- 6. Detach pressure linne (#4) from Airmatic compressor unit (A9/1).
- 7. Unscrew nuts (#5) and remove Airmatic compressor unit (A9/1).
- 8. Replace Airmatic relay.
- 9. Install in reverse order.