

# 2000-2006 BMW X5


Air Suspension to Coil Spring Conversion Kit Rear Pair

250BW-30-R






ALWAYS SUPPORT THE VEHICLE ON SAFETY STANDS.

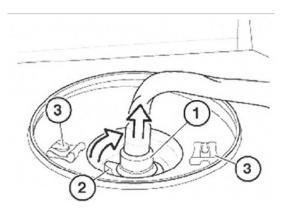

7. Remove locking clip (#1) from the bottom of the air spring and remove air spring assembly.

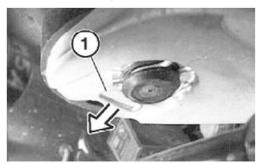

# **Conversion Spring Installation**




A spring compressor may be needed to compress the spring for installation.

#### THE WARRANTY WILL BE VOID IF INSTRUCTIONS ARE NOT FOLLOWED EXACTLY. DO NOT WORK UNDER A VEHICLE SUPPORTED BY A JACK.


### ALWAYS SUPPORT THE VEHICLE ON SAFETY STANDS.


## **Rear Air Spring Removal**

1. Open trunk, unlock luggage compartment floor trim panel (#1) and handle (#2). Remove from vehicle.

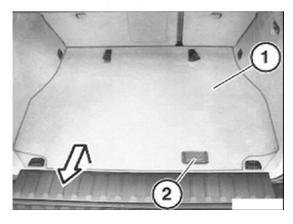

- 2. Raise vehicle.
- 3. Remove rear wheels.
- 4. Remove side members on driver side (#1) amd (#2) to access reservior.

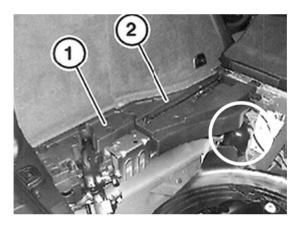


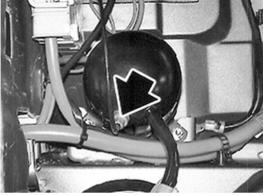

- 5. Carefully loosen the air fitting to deflate the air spring assemblies.
- 6. Disconnect the top of the air spring by pressing the quick coupler (#1) down, press retaining ring (#2) together and detach the air line. Remove retaining clips (#3). (Above pictured on next page)

THE WARRANTY WILL BE VOID IF INSTRUCTIONS ARE NOT FOLLOWED EXACTLY. DO NOT WORK UNDER A VEHICLE SUPPORTED BY A JACK.

#### ALWAYS SUPPORT THE VEHICLE ON SAFETY STANDS.

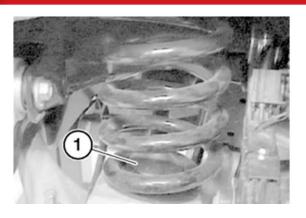



### **Important!**

Spring pads must be positively seated in the take-up locator/frame side member or on the wheel carrier to prevent the coil spring from springing out of the centering mount.

### After installation:

Check headlight adjustment, correct if necessarv.

Note: Warning light Removal Only Available when converting All 4 Wheels with Purchase of part number 250BW-37 Warning Light Remover.

