

ALL PARTS ARE TO BE INSTALLED BY A CERTIFIED ASE TECHNICIAN



1997 - 2006 Ford Expedition
2002 Lincoln Blackwood
1998 - 2006 Lincoln Navigator

Air Suspension Compressor

53F-20

Installation Guide




Revision 2317

BEFORE YOU BEGIN THE REMOVAL OR INSTALLATION, PLEASE READ ALL OF THE INSTRUCTIONS THOROUGHLY!

THE WARRANTY WILL BE VOID IF INSTRUCTIONS ARE NOT FOLLOWED EXACTLY. DO NOT WORK UNDER A VEHICLE SUPPORTED BY A JACK.

ALWAYS SUPPORT THE VEHICLE ON SAFETY STANDS.

1. Disconnect and Remove Battery

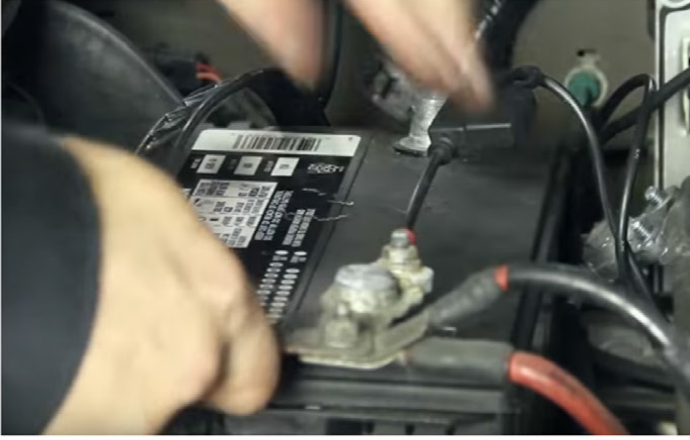


2. Remove Washer Fluid Reservoir and Rest it On the Battery Tray.




3. Air Suspension Compressor is Located Below Washer Fluid Reservoir.



4. Disconnect Connector of Compressor.

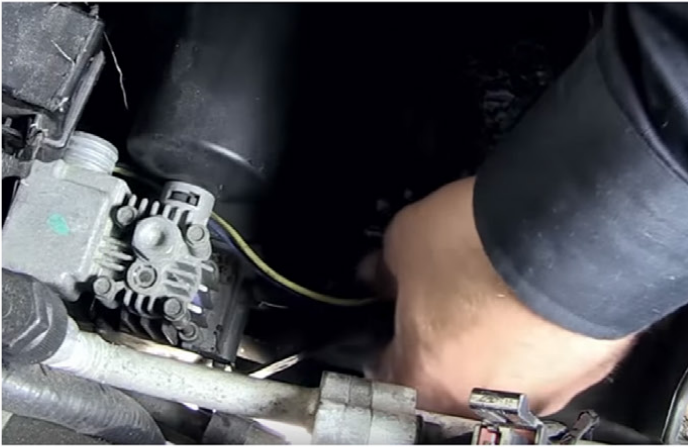

5. Unbolt Compressor From Vehicle

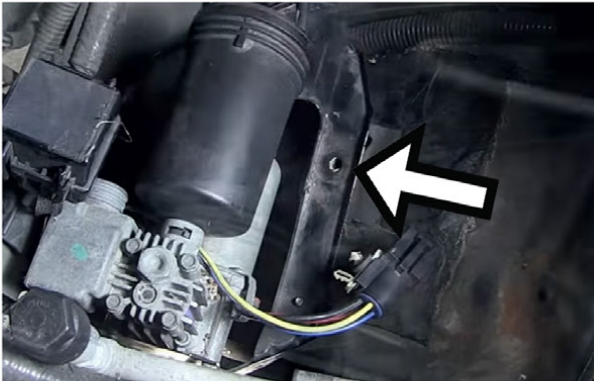

6. Disconnect Intake Air Lines From Compressor. Push in Air Line Connectors to Release.





BEFORE YOU BEGIN THE REMOVAL OR INSTALLATION, PLEASE READ ALL OF THE INSTRUCTIONS THOROUGHLY!

THE WARRANTY WILL BE VOID IF INSTRUCTIONS ARE NOT FOLLOWED EXACTLY. DO NOT WORK UNDER A VEHICLE SUPPORTED BY A JACK.

ALWAYS SUPPORT THE VEHICLE ON SAFETY STANDS.

7. Unbolt Bracket From Compressor.

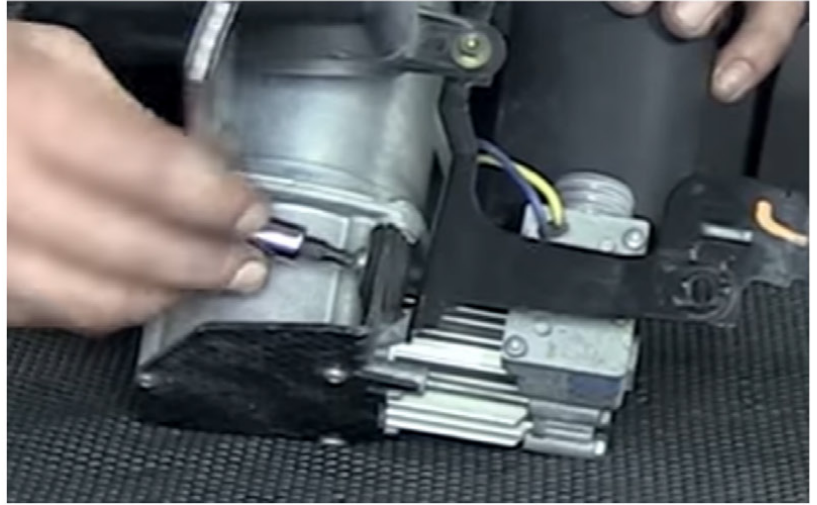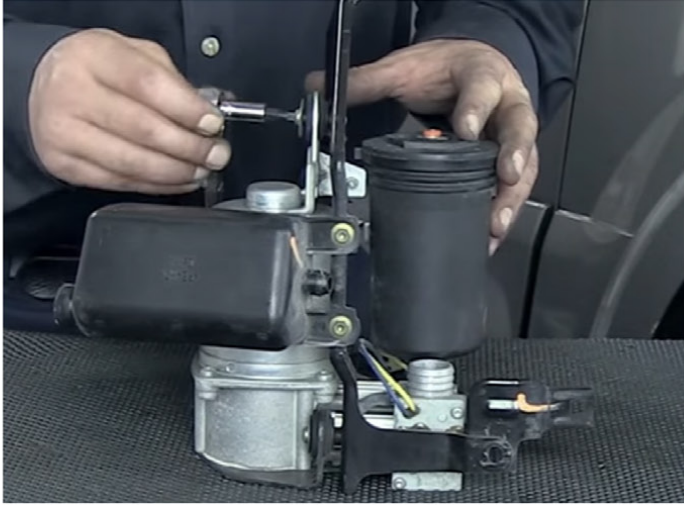

8. Transfer Bracket to New Compressor and Install Bolts.



9. Install In Reverse Order.

10. Reconnect Battery.

ALL PARTS ARE TO BE INSTALLED BY A CERTIFIED ASE TECHNICIAN

Learn more about suspension parts on our website.