



***For ALL Your Air Suspension Needs!!!***

**1995-2002**

## ***Lincoln Continental***

**39F-15-RL**

**39F-15-RR**

***Rear Air Springs***

 




**For ALL Your Air Suspension Needs!!!**

**WARNING:**

**BEFORE YOU BEGIN THE REMOVAL OR INSTALLATION, READ ALL INSTRUCTIONS THOROUGHLY! THE WARRANTY WILL BE VOID IF INSTRUCTIONS ARE NOT FOLLOWED EXACTLY. DO NOT WORK UNDER CAR UNDER A VEHICLE SUPPORTED BY A JACK. ALWAYS SUPPORT THE VEHICLE ON SAFETY STANDS.**

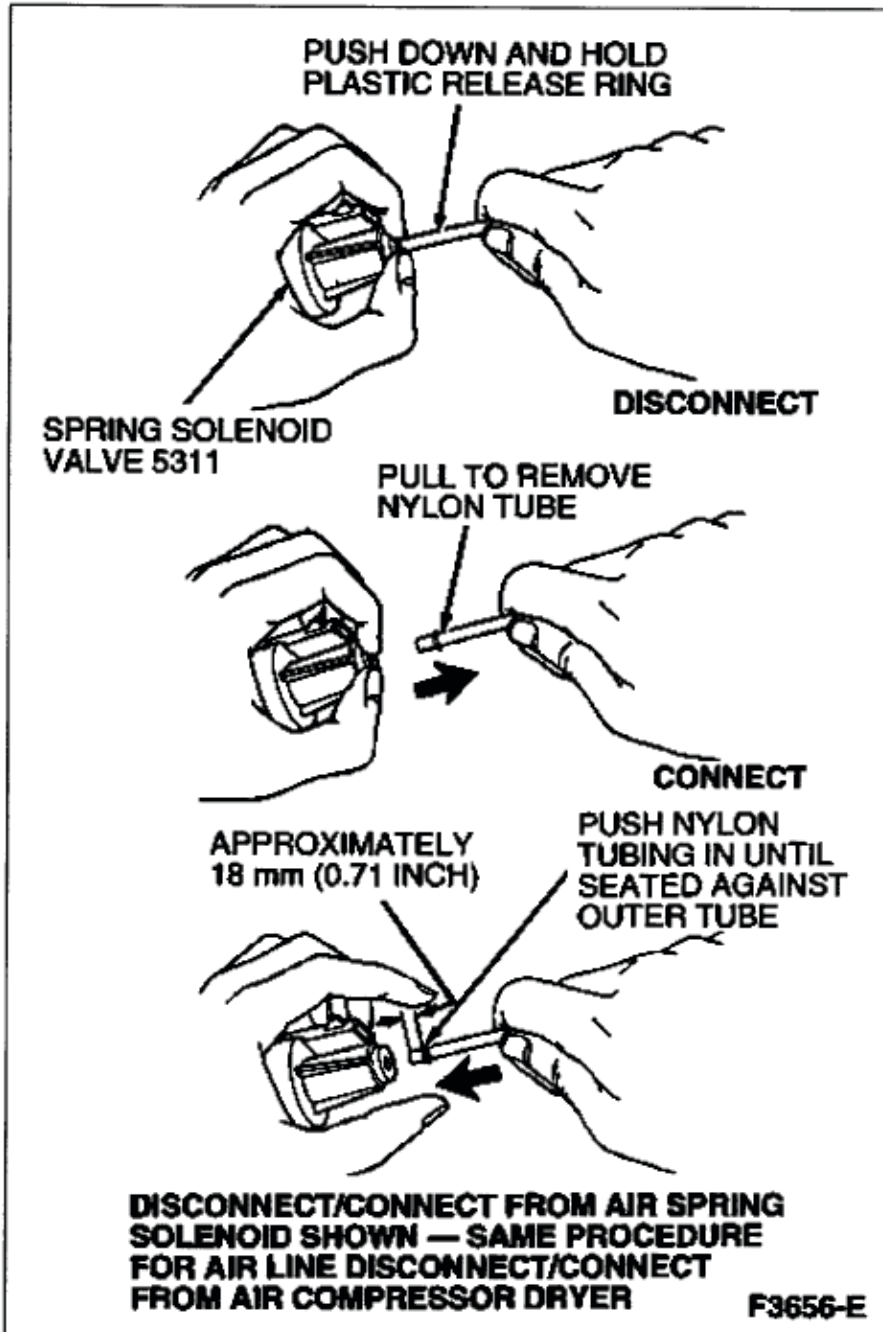



**For ALL Your Air Suspension Needs!!!**

**WARNING:**

 
**BEFORE YOU BEGIN THE REMOVAL OR INSTALLATION, READ ALL INSTRUCTIONS THOROUGHLY! THE WARRANTY WILL BE VOID IF INSTRUCTIONS ARE NOT FOLLOWED EXACTLY. DO NOT WORK UNDER CAR UNDER A VEHICLE SUPPORTED BY A JACK. ALWAYS SUPPORT THE VEHICLE ON SAFETY STANDS.**

## **REAR AIR SPRING INSTALL**

### **REMOVAL**

**WARNING: Do not remove an air spring under any circumstances when there is pressure in the air spring. Do not remove any components supporting an air spring without either exhausting the air or providing support for the air spring to prevent vehicle damage or personal injury.**


1. **NOTE: The vehicle must be positioned on a suitable lifting device prior to deflating the air suspension system. Deflate the air suspension system.**
2. **Raise and support the vehicle.**

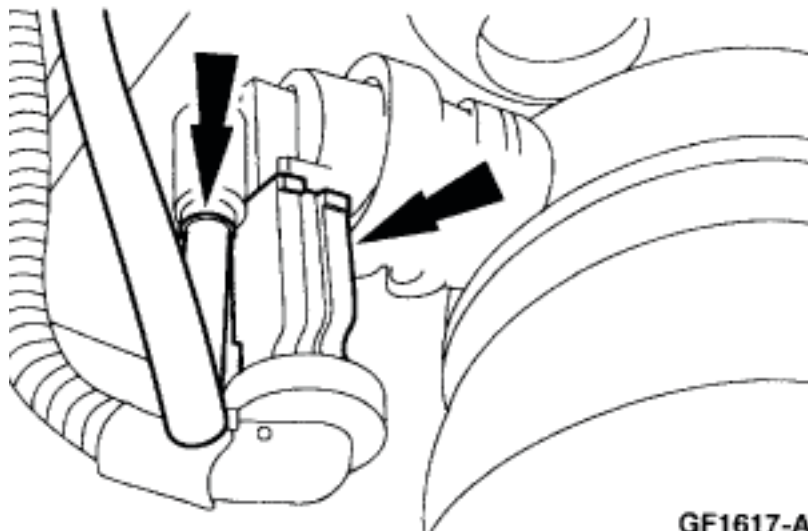


GF1617-A

## REAR AIR SPRING INSTALL

 3. **Disconnect the air spring solenoid electrical connector and air line.**  
\* **Compress the quick connect locking ring and pull out the air line.**

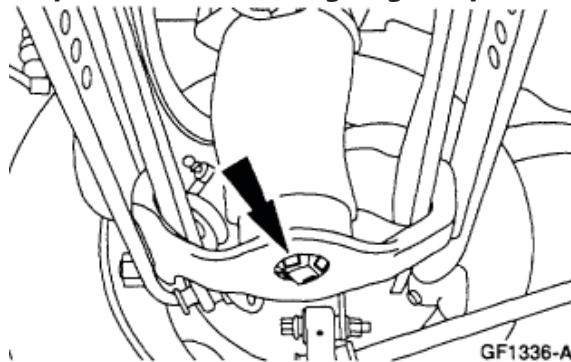

 4. **Lift the bottom of the air spring upward while depressing the locking tabs on the bottom of the air spring seat.**

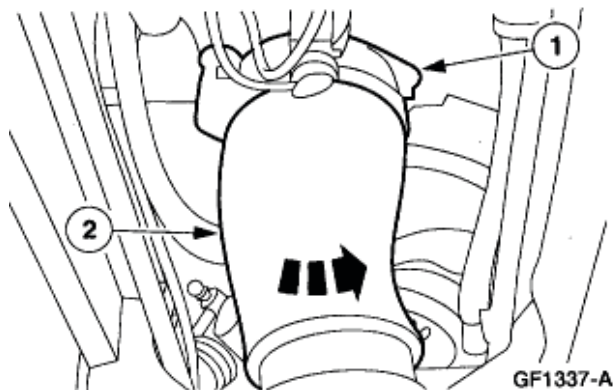

5. **Remove the air spring.**  
1 **Depress the locking tabs.**  
2 **Rotate and remove the air spring.**

### INSTALLATION

1. **To install, reverse the removal procedure.**