Installation Instructions T-Connector



Passat

▲ WARNING



ALWAYS read and follow all warnings and instructions included with purchase before beginning installation. Keep for future reference.

DO NOT exceed lower of towing manufacturing rating (including in your vehicle owner's manual) or specific amperage ratings stated on product.

ALWAYS read, understand and follow all warnings and instructions printed on tow vehicle's battery.


ALWAYS wear safety glasses and use all safety precautions during installation.


118721-037

Rev. A


6/22/2016



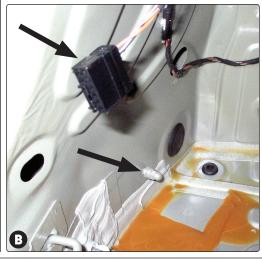

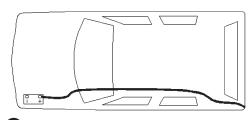



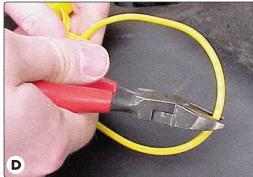



ENGLISH

TOOLS REQUIRED:

Trim Panel Remover, 10mm Socket & Ratchet or 10mm Wrench, Drill (3/32" Drill Bit), 1/4" Socket, Wire Crimpers, Wire Cutters, Philips Head Screwdriver, Test-probe

- Open trunk and remove threshold panel. Partially remove the corner felt trunk liner, on both sides, exposing the vehicle's taillight wiring harness
- 2. Beginning on the driver's side, separate the vehicle's wiring connectors, being careful not to break the locking tabs. Insert the T-Connector end, with the yellow wire, between the vehicle wiring connectors and lock into place. All connector surfaces should be clean and free of dirt.
- Route the T-Connector containing the green wire below the threshold cover to the passenger's side taillight housing. Repeat step 2 for the passenger's side using the T-Connector containing the green wire.
- 4. Locate a suitable grounding point near the connector such as an existing ground stud or drill a 3/32" hole and secure the white wire using the eyelet and screw provided 3. (Do not drill into vehicle floor or bed.) Clean dirt and rustproofing from area.

A CAUTION

Verify what is behind any surface prior to drilling to avoid damage to the vehicle and/or personal injury. Do not drill into any exposed surfaces.

- Locate a flat surface in an out of the way place and mount the T-Connector's black box-module, to prevent damage or rattling.

▲ WARNING

If routing the wire thru a grommet and along the exterior of the vehicle, be careful to avoid any hot pipes, heat shields, the fuel tank or any other points that may pinch or break the wire.

7. Disconnect the vehicle's Negative (-) battery cable. If not removed, remove the fuse from the yellow fuse holder (provided). After cutting the fuse holder wire ①, attach the ring terminal and secure to the vehicle's Positive (+) battery cable. Connect the other end of the fuse holder to the black 12 ga. wire, using the yellow butt connector (provided) ③.

A WARNING

Read and follow all warnings and cautions printed on the tow vehicle's battery. All connections must be complete for the T-Connector to function properly. Test and verify installation with a test light or trailer once installed. For initial test, reset vehicle electrical system by temporarily removing the key from the ignition.

- Secure the remainder of the T-Connector harness with the cable ties provided, to prevent damage or rattling and being careful to avoid any areas that would pinch, cut or melt the wire.
- Reinstall the plastic trim panels, threshold, storage covers, floor covering and other items that may have been removed during installation, being careful not to pinch or cut the wires

NOTE

Store 4-Flat connector in rear cargo area when not in use.



▲WARNING

Overloading circuits can cause fires. DO NOT exceed stated product ratings. Read vehicle's owner's manual & instruction sheet for additional information.