



Installation Instructions

T-One® T-Connector



Subaru Ascent

⚠ WARNING



ALWAYS read and follow all warnings and instructions included with purchase before beginning installation. Keep for future reference.

DO NOT exceed lower of towing manufacturing rating (including in your vehicle owner's manual) or specific amperage ratings stated on product.

ALWAYS read, understand and follow all warnings and instructions printed on tow vehicle's battery.

ALWAYS wear safety glasses and use all safety precautions during installation.

118790-037



TOOLS REQUIRED:

Trim Panel Remover, 10mm Socket & Ratchet or 10mm Wrench, Drill (3/32" Drill Bit), 1/4" socket, Philips Head Screwdriver, Test-probe

1. Open the vehicle's rear tailgate. On the driver's side, remove access panels, threshold, trunk floor panels and trays. Set aside all items removed being careful not to damage parts. **A B**
2. Locate the vehicle's 8-pin connector located behind the rear interior trim panel. Insert the 8-Pin Tow-Plug Adapter and lock into place. **C**
3. Using a trim panel remove tool carefully pull back the interior trim panel on Driver's side. On the driver's side, locate existing ground stud. Loosen bolt, place screw eyelet on stud and re-tighten bolt.

⚠ CAUTION

Make sure all other ground connections are secure when removing and reattaching the ground stud. **D**

⚠ WARNING

All connections must be complete for the T-One® T-Connector to function properly. Test and verify installation with a test light or trailer once installed. For initial test, reset vehicle electrical system by temporarily removing the key from the ignition.

4. All connections must be complete for the T-One® T-Connector to function properly. Test and verify installation with a test light or trailer once installed. For initial test, reset vehicle electrical system by temporarily removing the key from the ignition.

NOTE

Store 4-Flat connector in rear cargo area when not in use.



⚠ WARNING

Overloading circuits can cause fires. **DO NOT** exceed stated product ratings. Read vehicle's owner's manual & instruction sheet for additional information.