

Installation Instructions

Electric Trailer Brake Control Wiring Adapter



Subaru Ascent

⚠ WARNING



ALWAYS read and follow all warnings and instructions included with purchase before beginning installation. Keep for future reference.

DO NOT exceed lower of towing manufacturing rating (including in your vehicle owner's manual) or specific amperage ratings stated on product.

ALWAYS read, understand and follow all warnings and instructions printed on tow vehicle's battery.

ALWAYS wear safety glasses and use all safety precautions during installation.

Rev. A



ENGLISH

TOOLS REQUIRED:

Trim Panel Remover

⚠ CAUTION

Plug brake control adapter into mating receptacle on backside of brake control before attaching to the vehicle connector.

1. Make sure the vehicle is off with the keys removed from the ignition.
2. Locate the vehicle's electric brake control harness. The harness will be located underneath the dash and left of the steering column, taped to another harness near the emergency brake pedal. There will be a 4-pin connector that mates with the one on the adapter. ⓐ.
3. Plug the brake control adapter into the vehicle's electric brake control harness connector. Follow all brake control manufacturer's installation instructions.
4. Locate a routing path for the adapter to exit the bottom of dash.

⚠ WARNING

Complete the installation per the electric brake control manufacturer's instructions and mount the unit as directed. Perform test procedures as instructed.



⚠ WARNING

Overloading circuit can cause fires. DO NOT exceed lower of towing manufacturer rating or:

- Max. 3 AXLES: 6 BRAKES (16 amps)

Read vehicle's owners manual & instruction sheet for additional information.