 
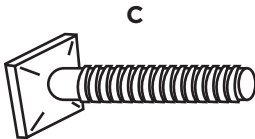
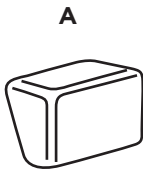


PARTS INCLUDED








part	description	part number	qty.
A	end cap	8533593	4
B	lockable knob	7530073	4
C	bolt	8530782	4
D	washer	951082054	4

WARNINGS / LIMITATIONS:


- The load you are carrying plus the weight of the roof rack must not exceed the maximum roof weight specified by the vehicle's manufacturer.
- Long loads such as, but not limited to, paddleboards, kayaks, surfboards, canoes, lumber, mattresses, and construction materials must be securely tied down at minimum to the roof rack and to the front of the vehicle.



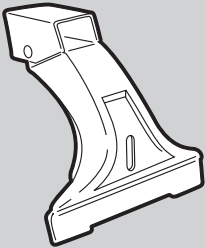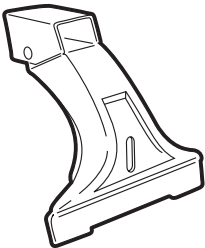 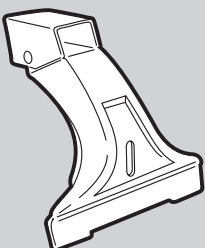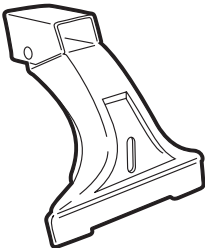Overloading the vehicle roof and/or failing to secure the load properly may result in loss of the load or the rack system, damage to the vehicle, and/or damage to other persons or property.

300	 foot	 bracket	
368	 foot	 bracket Lexus 250, 90-91 Toyota Camry 4dr wgn 87-91 Corolla Sedan 4dr, 88-97 Cressida 89-91	 bracket Sabb 90/99 900, 69-93
369	 foot	 bracket BMW 5-Series 4dr 89-95 BMW 5-Series wgn 92-96 Mercedes S-Class 280-560 thru-91	 bracket BMW 7-Series 88- Toyota Corolla 98- Chevrolet Prizm 98-
387	 foot	 bracket	

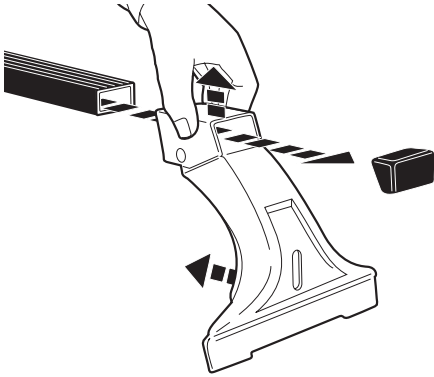
1



INSTALLATION:


- Slide the load bar through the feet. You may need to pivot the top of the foot and pull out the lever to allow the bar to slide through. Attach the end caps to the load bars.

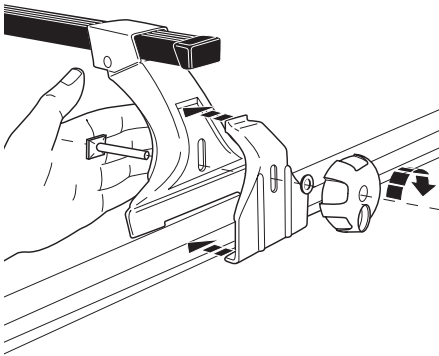2








- Open the car doors before attaching to the roof. Position the foot behind the car's rain gutter. Attach the bracket around the rain gutter by feeding the bolt through the foot, bracket and washer. Before you begin to tighten with the locking knob, make sure the load bars are positioned evenly in between the feet.

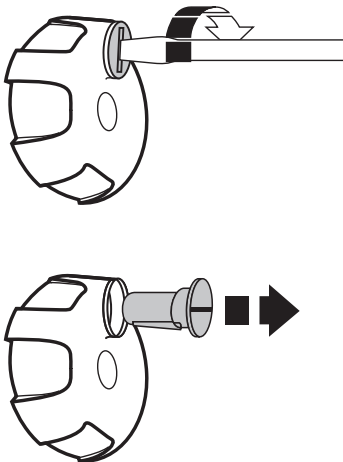3



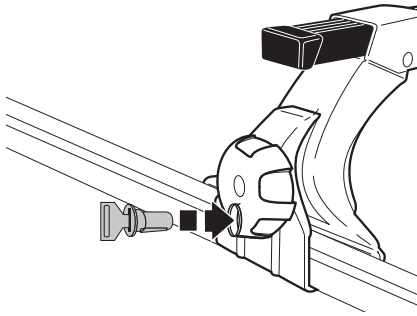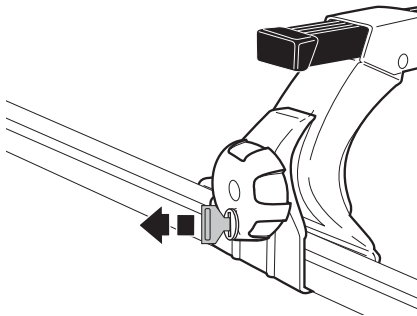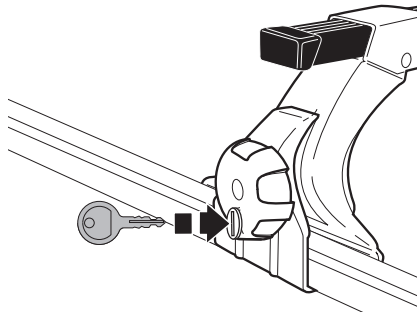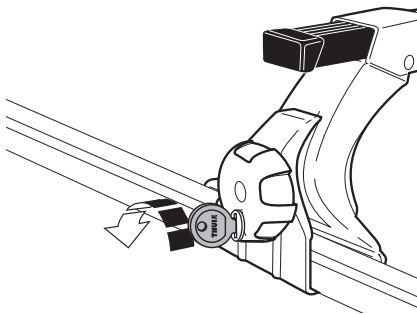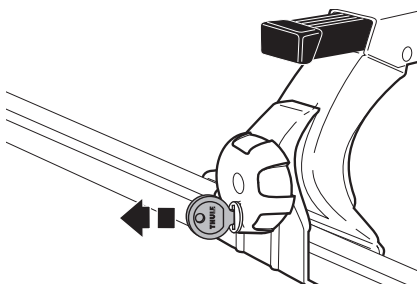- When using locking cylinders you must remove the plug in the locking knob. Using a screwdriver, turn the plug clockwise 1/4" turn, then pull the plug out. If you opt not to use lock cylinders, leave the plug in place.

4**A****B****C****D****E**

- Use the change key to install the lock cylinder. Once the cylinder is installed remove the change key and insert the lock key. Turn the key 180° counterclockwise to lock, the knob spins freely in the locked position.