


## BOX MOUNTING DIMENSIONS

Model	Name	Minimum Spacing	Maximum Spacing	Mounting Width	Rear Clearance	Mounting Points
611	Boxter	23 5/8"	37"	21 3/4"	19"	Variable Slot
689USXT	Spirit 1600	23 5/8"	39"	21 1/2"	24"	Variable Slot
688XT	Atlantis 2100	23 5/8"	37 1/2"	26 7/8"	26"	Variable Slot
687XT	Atlantis 1800	23 5/8"	37"	26 1/2"	20 1/2"	Variable Slot
686XT	Atlantis 1600	23 5/8"	35 1/2"	26 1/2"	17"	Variable Slot
685XT	Atlantis 1200	23 5/8"	36 3/4"	16 3/4"	20 1/2"	Variable Slot
605	Ascent 1700	23 5/8"	37"	19 1/8"	26"	Variable Slot
604	Ascent 1600	23 5/8"	35 5/8"	17 1/2"	16"	Variable Slot
603	Ascent 1500	23 5/8"	33 1/2"	21 5/8"	15"	Variable Slot
602	Ascent 1100	23 5/8"	37 1/2"	14 1/2"	24"	Variable Slot

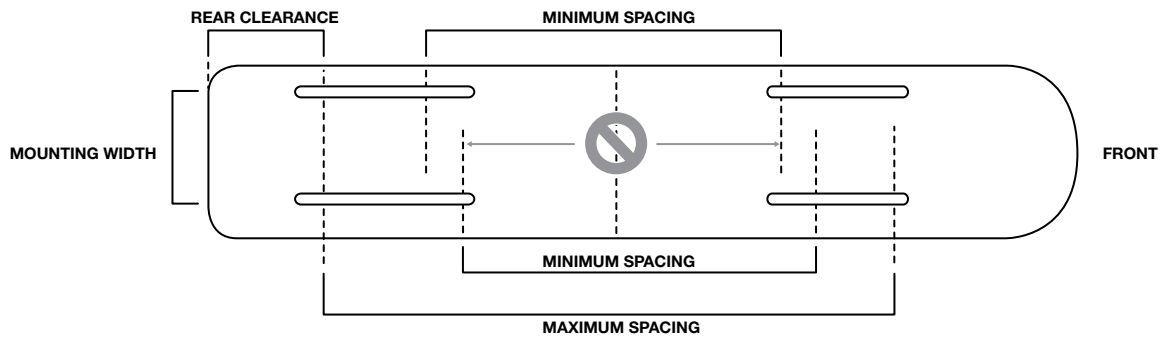

Model	Name	Minimum Spacing	Maximum Spacing	Mounting Width	Rear Clearance	Mounting Points
669ES	Mountaineer ES	23 5/8"	34"	20"	26"	Fixed Holes – 5
668ES	Frontier ES	23 5/8"	32 7/8"	13 3/4"	25"	Fixed Holes – 5
667ES	Excursion ES	23 5/8"	31"	24 1/8"	8"	Fixed Holes – 4
682	Sidekick	23 5/8"	32 1/16"	14 3/8"	7 1/2"	Fixed Holes – 4

