





part	description	part number	qty.
Α	Easy-Grip™ Mounting Hardware /	1401470000	4
в	Easy-Grip™ Sealing Strip /	1001071500	4
С	Lid Lifter /	14933	2
D	Tie Down Strap /	10169	2
Е	Key /	-	2
F	Lock Cylinder /	_	1

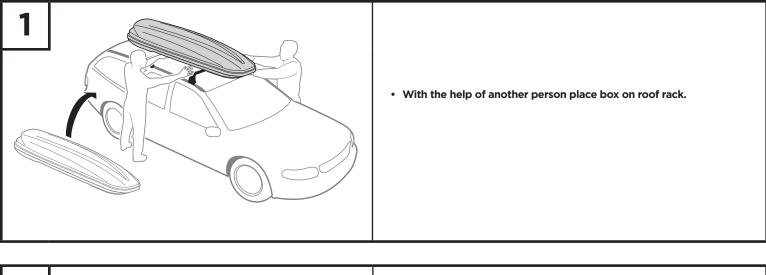


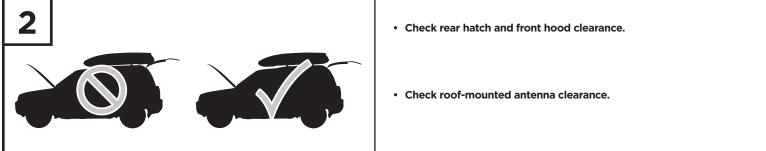


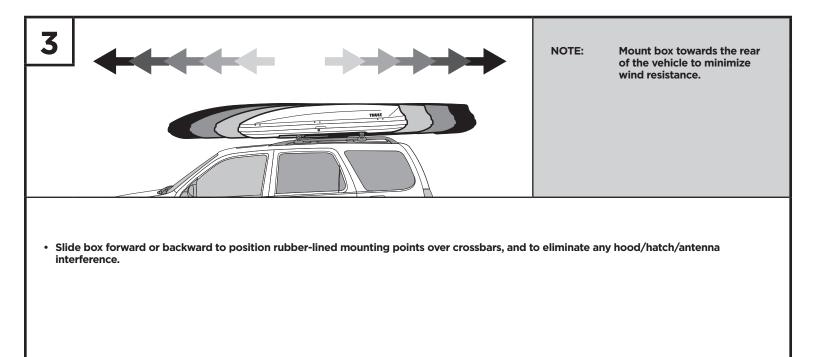


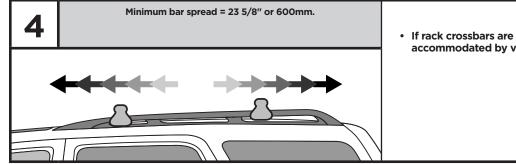


• If rack crossbars are adjustable, set to widest position which can be accommodated by vehicle and box's mounting points.

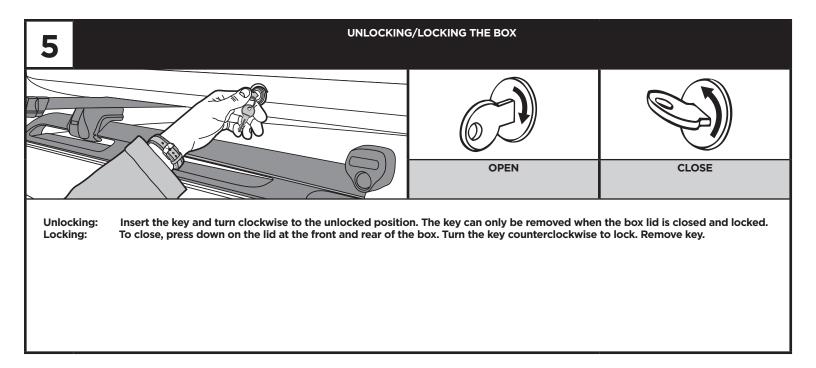


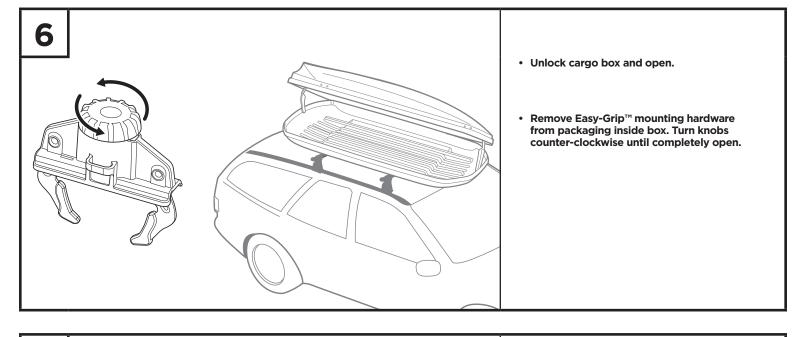

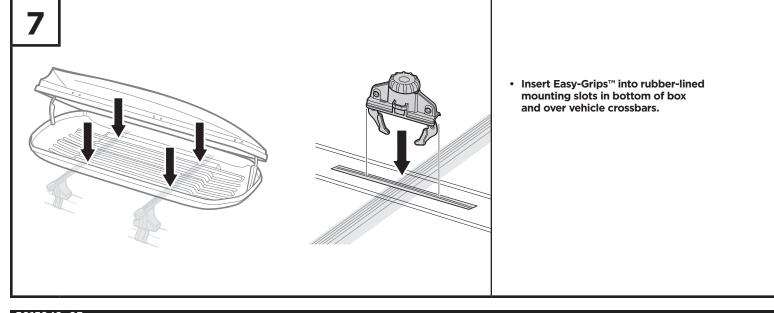

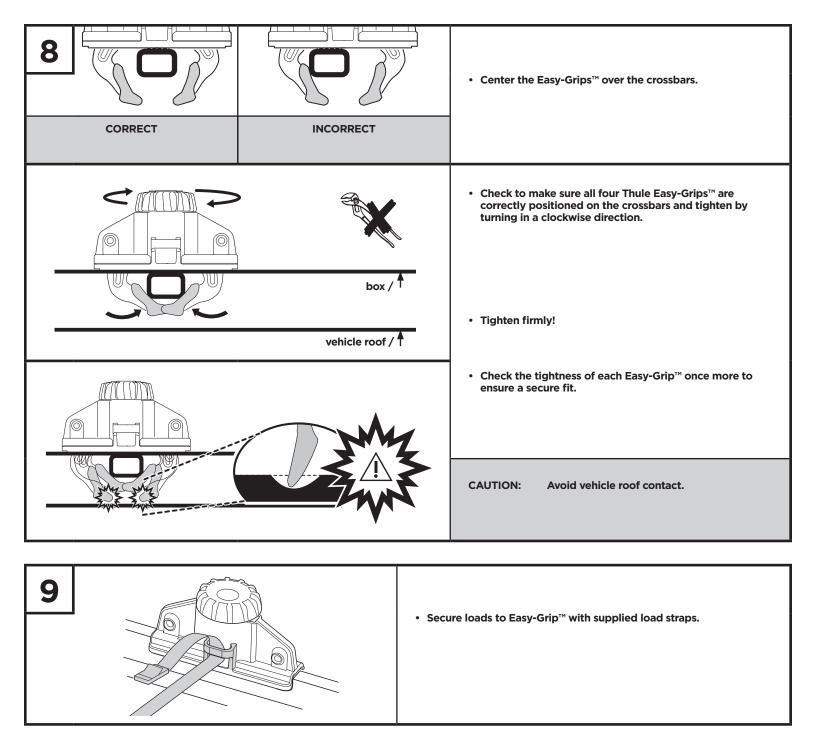

EXCHANGING LOCK CORES					
<ul> <li>In order to change the existing lock core to a different lock core number, follow steps 1–9 below.</li> </ul>					
	NOTE: Key in #4 through #8 is a Master Key.				

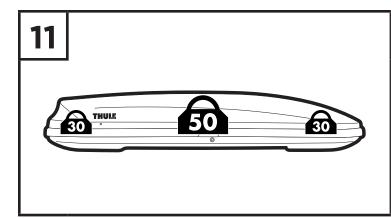

• Make sure that loads are evenly distributed inside the cargo box. Do not exceed the maximum permitted load of 110 lbs./50kg. for the box or the maximum permitted load for the roof as recommended by the vehicle manufacturer, as well of the maximum load of the load carrier.

MAINTENANCE
e cargo box should be carefully cleaned and maintained, particularly in the winter months.
r cleaning, use only water with a mild detergent which contains no additives (such as alcohol, chlorine or ammonia) as these could nage the surface of the cargo box.
e locks should be lubricated with graphite or similar dry lubricant.
x should be protected from exposure to the elements during prolonged periods of storage.
x and fittings should be inspected periodically for damage.

