BOV Kompact EM Universal Series BOV Kompact EM Universal Series TS-0223-1XXX V1.00 Rev A



IMPORTANT NOTES ON YOUR BOV

- Turbosmart accepts no responsibility whatsoever for incorrect installation of this product which is potentially hazardous and can cause serious engine damage or personal injury.
- The EM series BOV is designed for use as a factory replacement for a turbocharger that utilises an electronic diverter valve, this valve can be used on other applications as long as there is a control signal to actuate the BOV.
- Ensure the engine is cold prior to installation.

RECOMMENDATIONS

Turbosmart recommends that your Blow off valve (BOV) is fitted by an appropriately qualified technician

KIT CONTENTS

Please check that the following items have been provided in your EM Series BOV packaging

| Part | Description | Use |
|------|--------------------------|---|
| 1 | Turbosmart EM Series BOV | Main unit |
| 2 | 2x hose clamps | Mount BOV to inlet and outlet hoses |
| 3 | 1x Blanking plug* | Block off second outlet port *(Dual Port Variants only) * |
| 4 | Turbosmart Sticker | Turbosmart sticker |

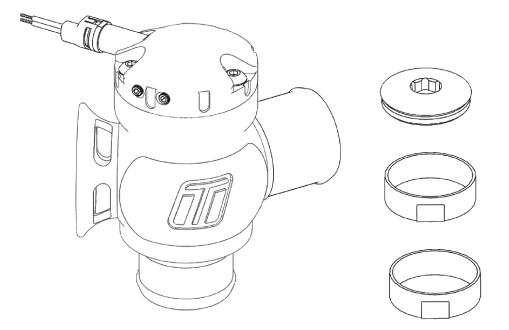


Figure 1 - Kit Contents

TOOLS REQUIRED - Hose clamp screwdriver

ABOUT YOUR EM SERIES BOV

Turbosmart has developed a unique "plug and play" diverter valve (or bypass valve) upgrade for your vehicle that is currently equipped with an electronic diverter valve. While we have developed this unit to be as simple as possible for you to install, we have not compromised on performance. This unit will not leak under elevated boost pressures and will still provide you with rapid response ensuring that all the OEM calibration strategies are not interfered with, providing you with maximum boost performance while the advanced strategies of the OEM's are retained.

The EM series BOV is available in two configurations, Dual Port and Plumb Back. The functionality of the BOV is still the same, there is no performance difference between the two units, it is a personal preference if the user wishes to utilise a classic vent to atmosphere sound or revert all bypass gasses back into the inlet tract of the turbocharger.

As the valve is completely controlled by the factory engine control unit, the factory diverter valve is almost silent, due to our construction, it is possible that your EM series will be much more audible. By being able to hear the unit actuate, occasionally the valve may be opening for a few seconds under the following events such as traction control, cruise control management, rapid gearchanges and varying throttle position changes, these are all coded as part of the torque management software in the OEM engine control unit, there is no adjustment available over these functions via our product. By hearing these events, it is not abnormal, it is completely normal for the EM series BOV to be considered "very active" as it is protecting your turbocharger from surge events or bypassing air for torque management purposes.

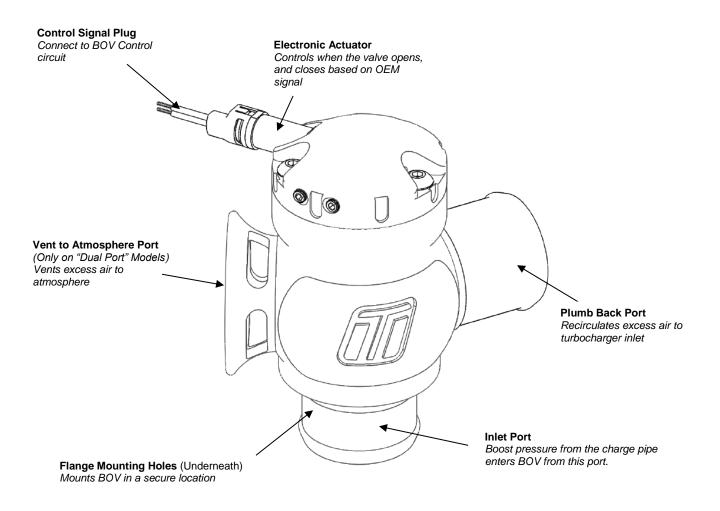


Figure 2 - EM Series BOV Overview



Identify diverter valve location


The diverter valve will be located on the charge pipe between turbo and throttle body, some applications have a hose to mount the diverter valve away from the charge pipe linking the plumb back hose into the turbocharger inlet pipe.

If the diverter valve cannot be located, seek assistance from your local specialist.

NOTE!

3

It may be required to remove auxiliary components to access the diverter valve, ensure you consult your local specialist or a service manual for correct disassembly procedures.

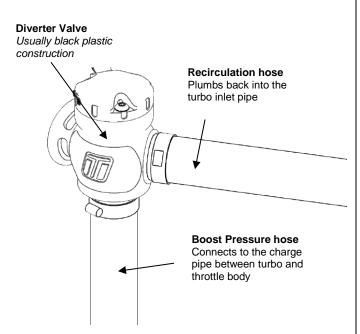


Remove the OEM diverter valve

Remove the electronic plug from the OEM diverter valve and unscrew any hose clamps and disconnect any hoses, Remove the BOV from any brackets, ensure you do not drop the OEM valve as permanent damage may occur to the plastic.



Mount your EM Series BOV

Slide hose clamps over inlet and recirculation hoses allowing some play between the clamp and the hose, press the BOV pressure hose and align BOV outlet with recirculation hose. Slide hose over outlet fitting and move hose clamps over the fitting close to the body of the BOV and tighten.

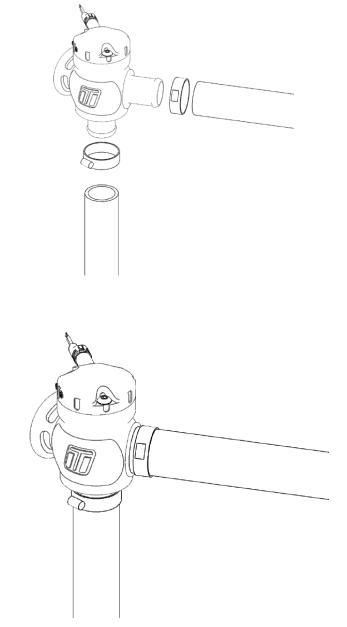

Once the valve has been mounted, connect the electrical plug into the OEM factory plug or into BOV controller and secure the wiring safely away from a heat source.

Congratulations, your EM Series BOV is installed and ready for use. Double check all electrical connections and mounting screws.



Remove Your EM series BOV

Remove the electronic plug from the EM series BOV and loosen the hose clamps on the inlet and recirculation hoses. Remove the BOV from the vehicles

NOTE!

Cosmetic engine covers may be required to be removed prior to the assembly being visible.


CAUTION!

The turbocharger assembly may require the vehicle to be raised on a hoist or jacked up and secured using vehicle jack stands, ensure your safety is not compromised.



Remove Electronic Actuator from your EM series BOV

Using a 11mm open end wrench in the flat sides of the solenoid, undo the actuator in an anti-clockwise direction when viewed from the end. Ensure the wrench is placed on the metallic portion of the flats and not on the plastic cover.

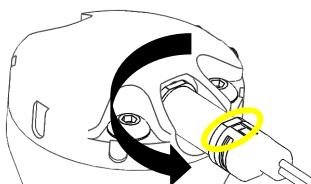


Ensure the cavity is free from debris using avoiding shifting dirt into the passages.



Install New Electronic Actuator into your EM series BOV


Ensure the O-rings on your new actuator are correctly seated in the grooves before installation

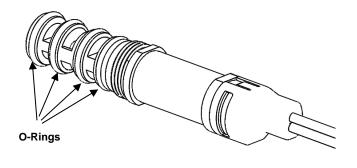

CAUTION!

Failure to ensure O-rings are seated correctly may lead to cutting of an O-Ring and unexpected results from the EM series BOV

Slowly insert the new actuator while turning in a clockwise direction to avoid tearing the O-rings

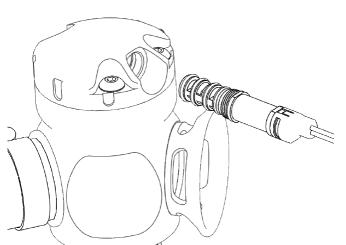

Tighten the new solenoid into the EM series BOV ensuring the wrench is on the metallic portion of the solenoid.


NOTE!


Tightening the solenoid on the plastic cover may result in unrepairable damage to the solenoid.



Mount your EM Series BOV

Slide hose clamps over inlet and recirculation hoses allowing some play between the clamp and the hose, press the BOV pressure hose and align BOV outlet with recirculation hose. Slide hose over outlet fitting and move hose clamps over the fitting close to the body of the BOV and tighten.

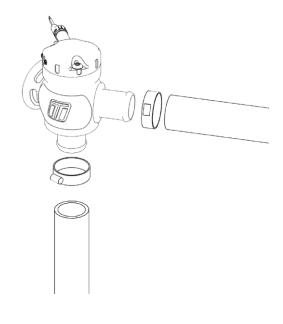

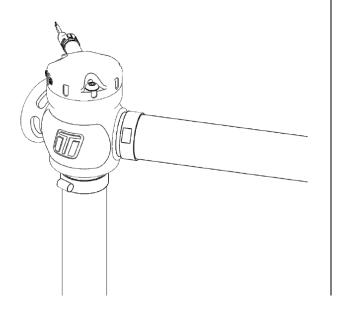

Once the valve has been mounted, connect the electrical plug into the OEM factory plug or into BOV controller and secure the wiring safely away from a heat source.

Congratulations, your EM Series BOV is installed and ready for use. Double check all electrical connections and mounting screws.

TROUBLE SHOOTING

- BOV not actuating Confirm electrical signal plug is connected appropriately, as the plugs are new, some force may be required to click the plug into place.
- Valve is staying open Confirm the valve has O-rings as they may have been dropped or lost during installation Boost pressure loss or lower than before Confirm the valve has O-rings as they may have been dropped or lost during _ installation