

T1|SOFT ROLL UP T0NNEAU COVER

Ч READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY

DAMAGE BEFORE INSTALLATION COULD LEAD TO REJECTION OF ANY CLAIM.

V.2019.05.15

TOOLS REQUIRED (not included) Ø Ratchet 10mm Phillip-Head

Socket


Screwdriver

Wrench

(ONLY MARKED ITEMS ARE INCLUDED)





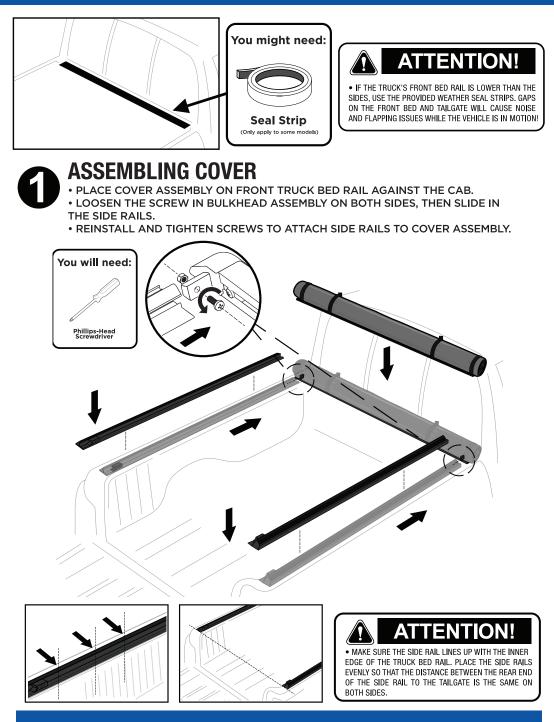





POSITIONING SIDE RAILS

• EVENTLY PLACE THE SUPPLIED CLAMPS ALONG THE SIDE RAILS.

• ATTACH THE CLAMPS TO THE SIDE RAIL AND THE TRUCK BED RAILS DO NOT TIGHTEN CLAMPS UNTIL COVER IS PROPERLY FITTED.

NOTE: FOR TOYOTA AND NISSAN MODELS, REFER TO **PAGE 7** FOR SUPPLEMENTAL INSTRUCTION ON UTILITY TRACK BRACKET INSTALLATION.

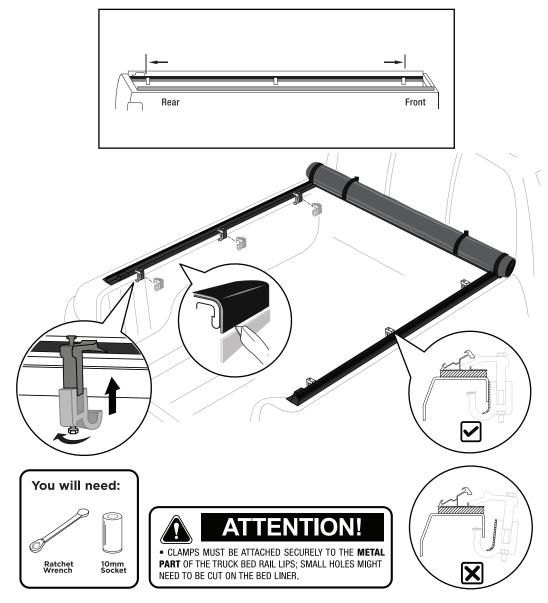


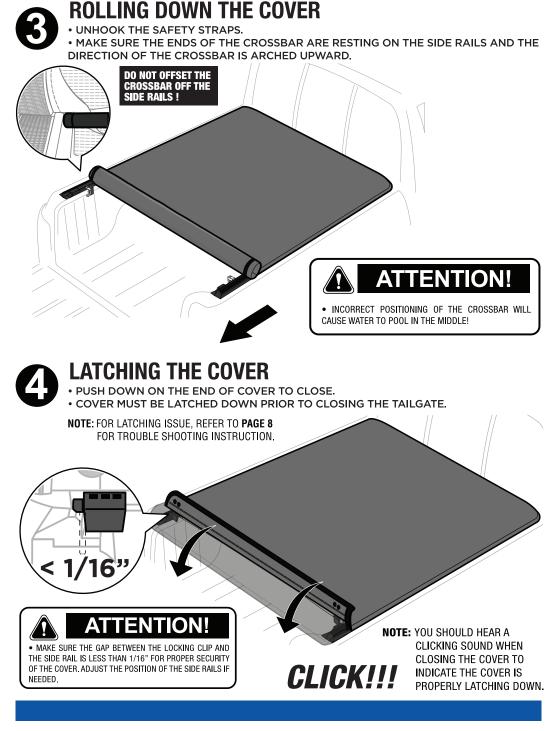




• PUSH DOWN ON THE END OF THE COVER,

 
PULL ON EITHER SIDE OF THE LATCH CABLE TO UNLATCH THE COVER.

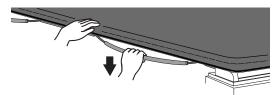

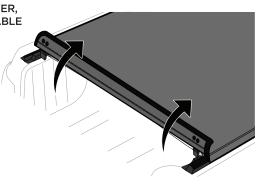




(TI) SOFT ROLL UP TONNEAU COVER

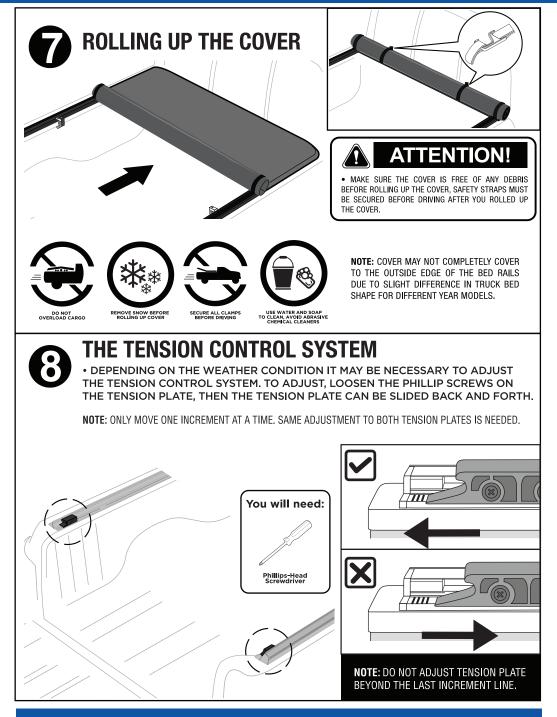

SPECIAL INSTRUCTIONS FOR ALTERNATIVE BRACKETS

SUPPLEMENT TO INSTALLATION INSTRUCTIONS (Only for models with utility track)

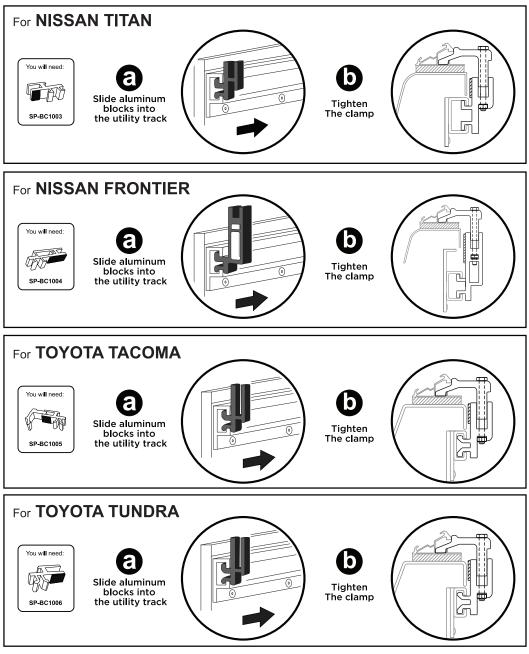


COVER DOESN'T STAY LATCHED?

9


😽 TYGER[®]

• MAKE SURE THE LOCKING CLIP ON BOTH SIDES ARE COMPLETELY INSERTED INTO THE CHANNEL ON THE SIDE RAILS TO AVOID END OF THE COVER BECOMING UNLATCHED.

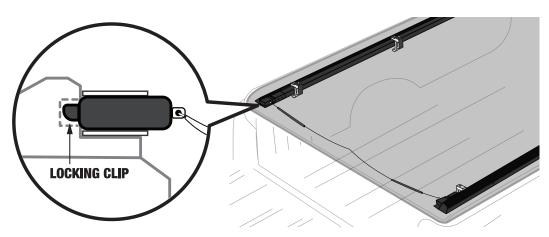




• IF COVER DOESN'T STAY CLOSED AND YOU FIND THE LOCKING CLIP IS NOT FULLY INSERTED.

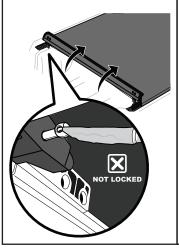



 • TRY MOVING THE TENSION PLATE TOWARDS THE TAILGATE ON BOTH SIDES, ONE INCREMENT AT A TIME.

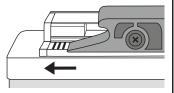



• MAKE SURE THE LOCKING CLIP ON BOTH SIDES ARE INSERTED INTO THE CHAN-NEL ON THE SIDE RAILS.

