



## BC15 EXTERNAL SPEAKER



### OWNER'S MANUAL



Thank you for purchasing Uniden's BC15 external speaker. This high quality external speaker is designed and engineered to provide optimum performance with Uniden CB radios and scanners.

## INSTALLING YOUR SPEAKER

The BC15 can stand on its own on stable surfaces or you can mount it for stability.

### CAUTION:

- ***Avoid mounting the speaker in direct sunlight or high temperature areas.***
- ***Avoid running the cable across sharp metal edges or moving parts.***
- ***Do not block air conditioning or heating vents.***
- ***Avoid airbag deployment zones to ensure proper performance and prevent injury.***

To mount the speaker, use the mounting bracket as a template to mark drilling holes. Drill holes and screw in the bracket. Align the speaker with the adjustment knob holes in the bracket and screw

in the adjustment knobs.

Insert the audio plug into the **EXT. SP** jack of your Bearcat CB or scanner.

Remove unwanted background noise from incoming transmissions with the noise filter button. Press the button once to turn the noise filter **ON**. The button remains down. Press it again to release it and turn the noise filter **OFF**.

## SPECIFICATIONS

Internal Speaker	15W Max. 8 ohm (MONO)
Operating Temp.	-4° F ~ +140° F (-20° C ~ +60° C)
Max. Input Level	15W (8 ohm) - Noise filter OFF 5W (1.8 ohm) - Noise filter ON
Audio Freq. Response	300 ~ 5000Hz
Speaker Cord	10 ft (3m) with 3.5 mm stereo plug (Left side connected only)
Dimensions	3.9 in. (W) x 2.4 in. (D) x 3.9 in. (H) 100 mm. (W) x 61.8 mm. (D) x 100 mm. (H)
Weight	17.6 oz (500g) - including bracket and mounting screws
Included in the package:	Mounting Bracket with Hardware