



BC7 EXTERNAL SPEAKER



OWNER'S MANUAL



Insert the audio plug into the **EXT. SP** jack of your Bearcat CB or scanner.

SPECIFICATIONS

Internal Speaker	7W Max. 8 ohm (MONO)
Operating Temp.	-4° F ~ +140° F (-20° C ~ +60° C)
Max. Input Level	5W (8 ohm)
Audio Freq. Response	300 ~ 5000Hz
Speaker Cord	6 ft (1.8m) with 3.5 mm stereo plug (Left side connected only)
Dimensions	3.5 in. (W) x 3.3 in. (D) x 2.4 in. (H) 90 mm. (W) x 83 mm. (D) x 60 mm. (H)
Weight	8 oz (225g) - including bracket and mounting screws
Included in the package:	Mounting Bracket with Hardware

Thank you for purchasing Uniden's BC7 external speaker. This high quality external speaker is designed and engineered to provide optimum performance with Uniden CB radios and scanners.

INSTALLING YOUR SPEAKER

The BC7 can stand on its own on stable surfaces or you can mount it for stability.

CAUTION:

- ***Avoid mounting the speaker in direct sunlight or high temperature areas.***
- ***Avoid running the cable across sharp metal edges or moving parts.***
- ***Do not block air conditioning or heating vents.***
- ***Avoid airbag deployment zones to ensure proper performance and prevent injury.***

To mount the speaker, use the mounting bracket as a template to mark drilling holes. Drill holes and screw in the bracket. Align the speaker with the adjustment knob holes in the bracket and screw in the adjustment knobs.

Discover other CB radios and components on our website.