


## CAS-TLC Cable Connection



\* The depiction of the radio in this diagram is a generalized depiction, your radio will look similar but not exactly the same.

### BT45 Interface Module

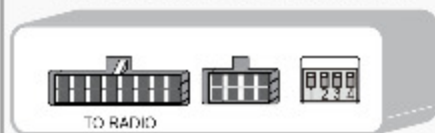

18 pin male

BT-TOY

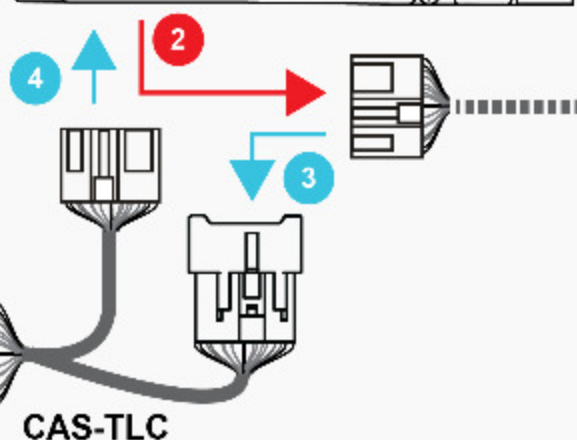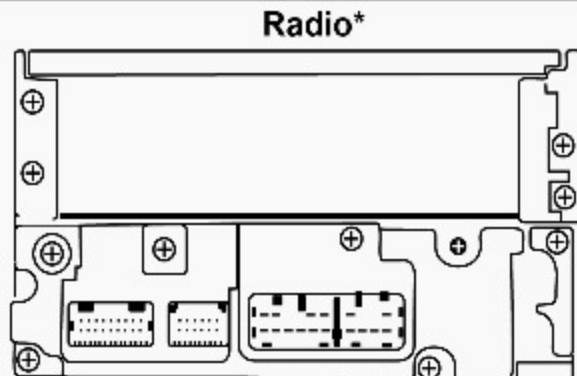

1. Connect the BT-TOY cable to one of CAS-TLC cable's 12-pin male terminal
  - If your radio has an unoccupied 12-pin port then skip to step 4
2. Unplug the factory 12-pin cable from the radio
3. Plug the cable from step 2 into the CAS-TLC cable's 12-pin male terminal
4. Plug the CAS-TLC's 12-pin female terminal into the radio's 12-pin port
  - If your radio started with an unoccupied 12-pin port then one of the CAS-TLC's terminal will remain unoccupied