



VAIS TECHNOLOGY

Owner's Manual

GSR
Generation 2

SiriusXM Satellite Radio interface

(SXV300 SiriusXM Tuner required)

GSR-UV01-MAN

UNIVERSAL

	Before You Start	3
	Installation, GSR-UVxx Firmware Update	4-7
Vehicle Specific User Interface	Alfa Romeo	8
	Dodge, Chrysler, Jeep, Fiat	10
	Ford	12
	Buick, Chevrolet, GMC	14
	Honda	16
	Hyundai, KIA	18
	Land Rover	20
	Mazda	22
	Mercedes-Benz	24
	Nissan	26
	Subaru	28
	Toyota	30
Volkswagen	32	
	User Interface - Channels, Presets, Categories (All Vehicles)	34

 **WARNING****DO NOT DISASSEMBLE OR ALTER**

Doing so may result in an accident, fire or electric shock

Do not block the airbag

Do not mount product or any added audio and/or video equipment where it can obstruct the operation of any safety devices such as the airbag.

Distraction warning

Do not let product or any added audio and/or video equipment distract you while you are driving.

BEFORE WIRING, DISCONNECT THE CABLE FROM THE NEGATIVE BATTERY TERMINAL

Before starting any installation work, you must wait 90 seconds after turning the ignition switch to the LOCK position and disconnecting the negative (-) terminal from the battery. The supplemental restraint system (airbag) is equipped with a backup power source. If installation work is started less than 90 seconds after disconnection of the negative (-) battery terminal, the SRS may deploy. When the negative (-) terminal cable is disconnected from the battery, the clock and audio systems memory will be erased. Before starting installation work, make a record of the clock and audio systems memory settings. When installation is complete, reset the clock and audio systems to their previous settings. Check power tilt, power telescopic steering column, front power seats, power mirrors, and power shoulder belt anchorage are equipped with a memory function. When installation is complete, it is necessary to readjust the features to their previous settings. Never use a backup power supply (such as another battery) during installation work to avoid losing these memory settings.

 **CAUTION****DO NOT SPLICE INTO ELECTRICAL CABLES**

Never cut away cable insulation to supply power to other equipment. Doing so will exceed the current carrying capacity of the wire and result in fire or electric shock.

DO NOT ALLOW CABLES TO BECOME ENTANGLED IN SURROUNDING OBJECTS

Cables or wiring that obstruct or get caught on places such as the steering wheel, shift lever, brake pedals, etc. can be extremely hazardous.

DO NOT INSTALL IN LOCATIONS WITH HIGH MOISTURE OR DUST

Moisture or dust may result in product failure.

HAVE THE WIRING AND INSTALLATION DONE BY EXPERTS

The wiring and installation of this product requires special technical skills and experience.

USE ONLY SPECIFIED ACCESSORY PARTS

Use of other than specified parts may damage product internally.

FOLLOW THE OPERATIONAL AND INSTALLATION MANUALS.

YOU SHOULD READ AND FAMILIARIZE YOURSELF THOROUGHLY WITH THE FOLLOWING INFORMATION PRIOR TO INSTALLING AND USING THIS UNIT. IN ADDITION, YOU MUST CAREFULLY READ AND FOLLOW THE INSTALLATION SCHEMATICS/INSTRUCTIONS FOR THE PRODUCT AND THE VEHICLE IN WHICH IT IS BEING INSTALLED. FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS MAY DAMAGE THE PRODUCT AND THE VEHICLE, WILL VOID THE PRODUCT WARRANTY, AND MAY VOID THE VEHICLE WARRANTY

CHECK YOUR LOCAL LAWS

Some States/Provinces or other governmental jurisdictions (such as cities) may have laws that prohibit the operation of a video screen within the sight of the Driver. If you have purchased such a product, you should use the product only in locations where it is legal to do so, and if you do use the product, set up the screen so it is only visible to passengers.

 
 **About SiriusXM Satellite Radio Operation**

The unit may refuse to change the channel if your reception is going ON and OFF.


Please wait until your reception stabilizes in order for the unit to allow you to change the channel easily.

Due to bad reception in some areas, SiriusXM Satellite Radio may not work and/or not able to display text.


What's Included

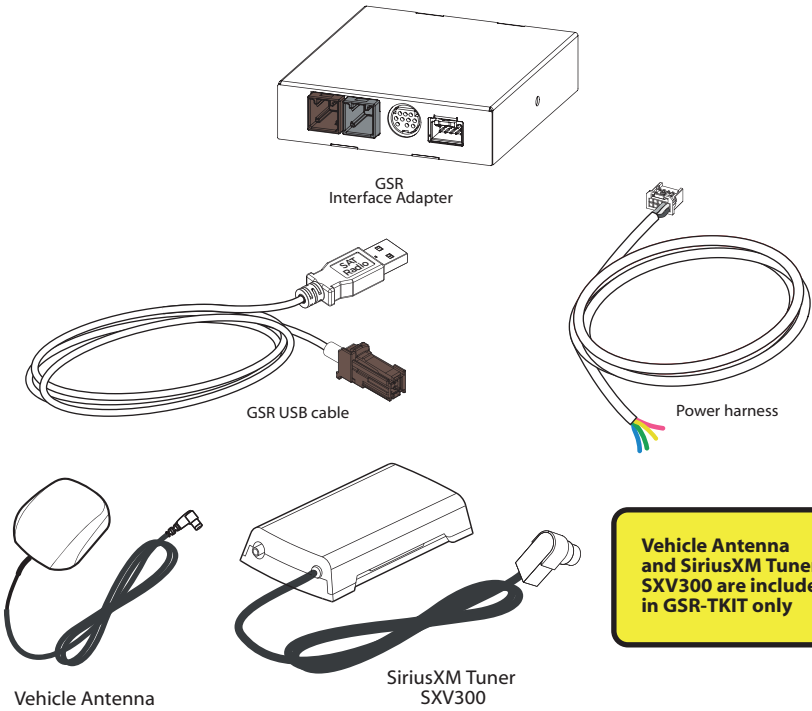

GSR Connectors and Ports

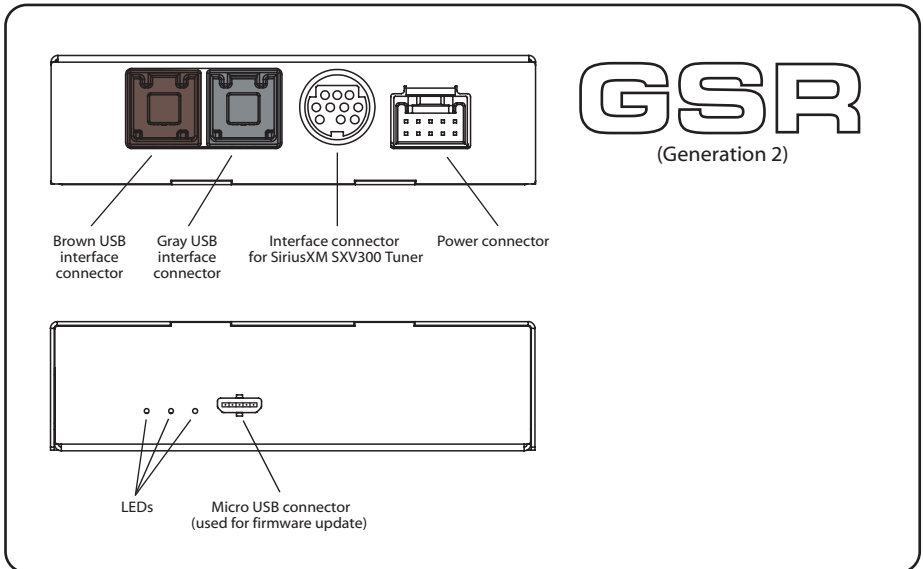 

Connecting GSR

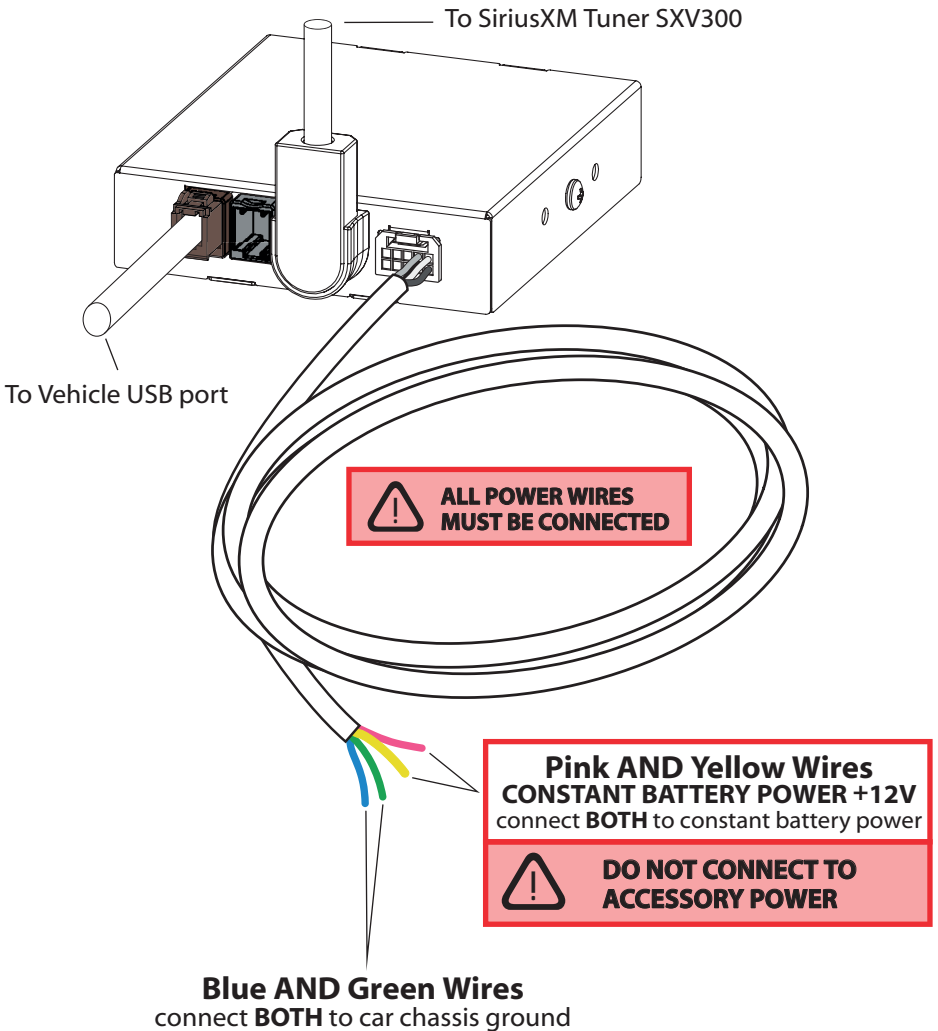 **CONSTANT BATTERY POWER ONLY**

⚠️ GSR-UVxx Firmware Update

 
GSR-UVxx Universal Unit is the *ONLY* Model you must flash

A vehicle-specific firmware update is **ONLY** necessary for a GSR-UVxx model. There is no need to update the firmware if you have a different model.

If you have a GSR-UVxx model, see below and the next page for information on configuring this unit for your vehicle.

We strongly recommend that you install the unit in an easily accessible location, so you can later update the firmware.

About GSRxx (Gen 2) firmware update

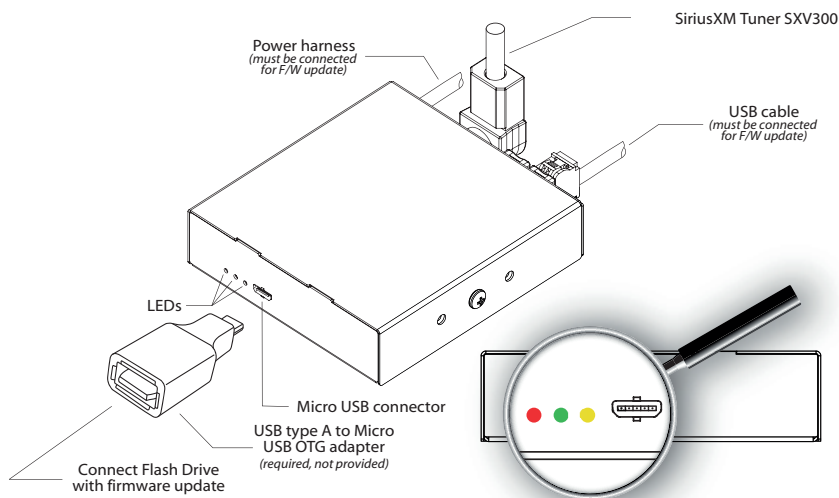


LED Guide

1. Red LED lights up and then Yellow and Green - Update was successful.
2. Red LED lights up, and then Yellow and Red LED - Corrupt file, no file, error during update.
3. Red LED lights up, and Red steady and Green blinking - update failed.
4. If Red LED never lights up, and LEDs just go to Yellow and Green LEDs then GSR didn't detect the flash drive and loaded normally.
5. Green LED is blinking - Firmware loading failed.




Alfa Romeo

 A

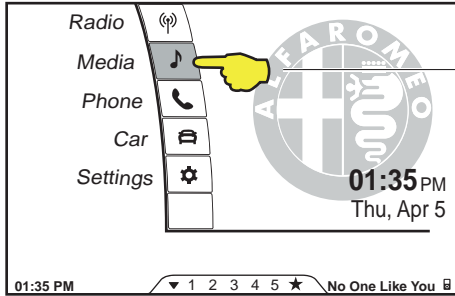


Use the Control Knob to select Media

 B

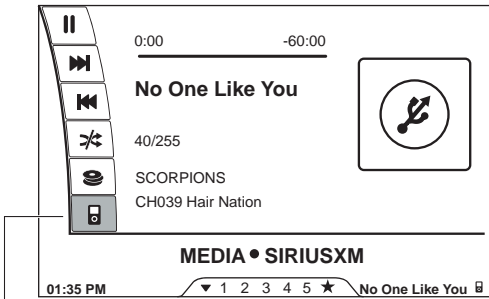

iPod is selected

 C

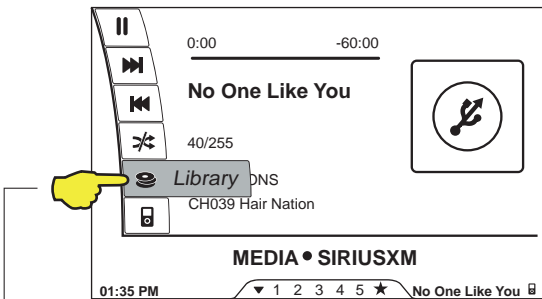


Use the Control Knob to select Library




Alfa Romeo

 D

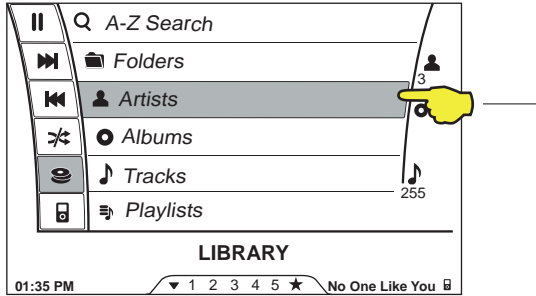

Use the Control Knob to select Artists

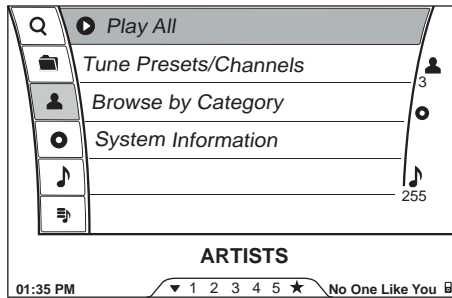 

Known Limitation!

Note that when you delete a preset, the preset is not removed from the presets list until you either turn the car off, or disconnect the USB cable.

“Track Seek ►►” or “Track Seek ◄◄” (on the radio or steering wheel) switch to next available channel.

 
Long Touch on “Track Seek ►►” or “Track Seek ◄◄” switch to next available Preset.






A


Select "iPod" Audio Source

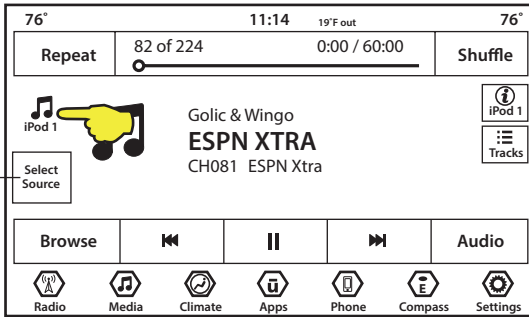


B

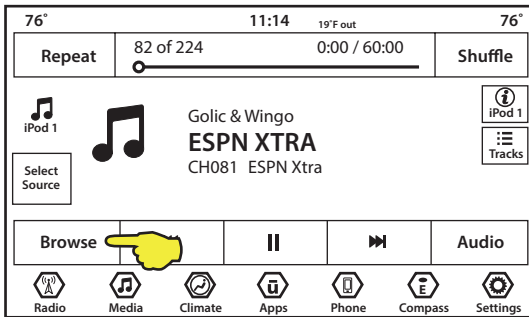 

C

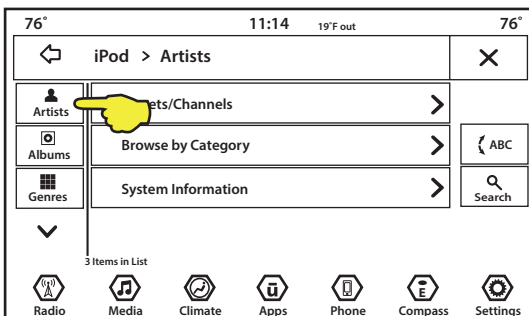 

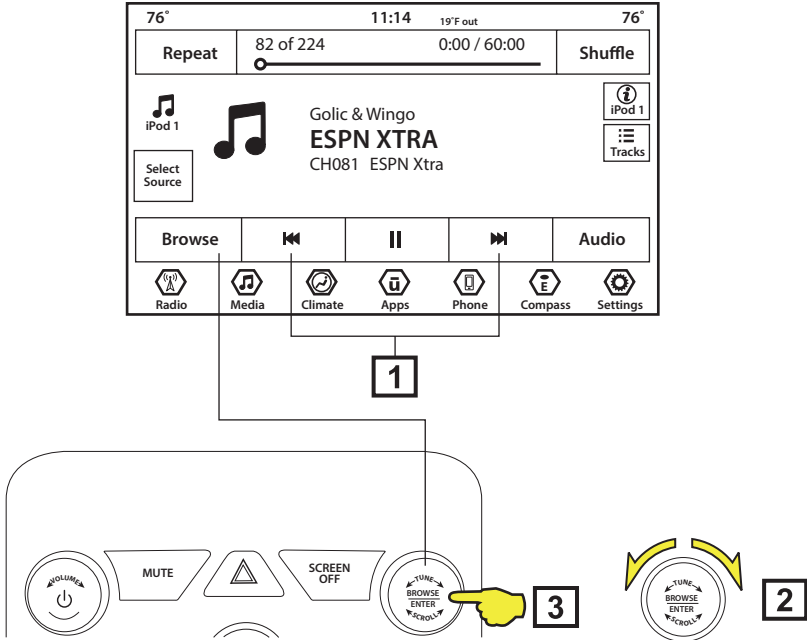 

- 1** "Track Seek ►►" or "Track Seek ◄◄" switch to next available channel.
Long Touch on "Track Seek ►►" or "Track Seek ◄◄" switch to next available Preset
- 2** Use Touch screen or Tuning Knob to "Browse"
- 3** Push Tuning knob to make selection.

 
 


Important



2014 Ford Focus radio shown. Display and controls varies depending on the car models and available equipment.

A

Select "USB" Audio Source

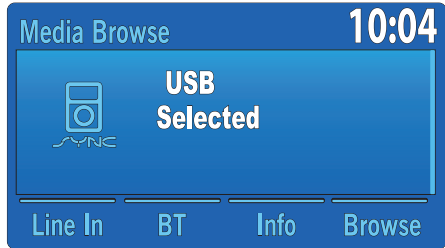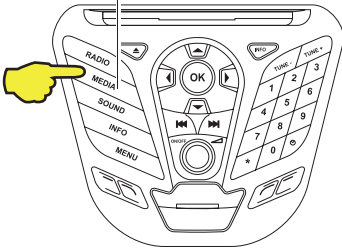



B

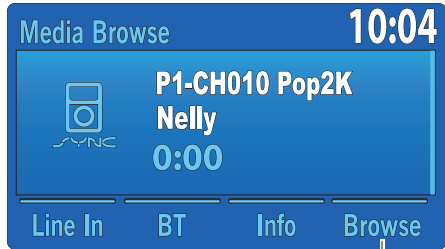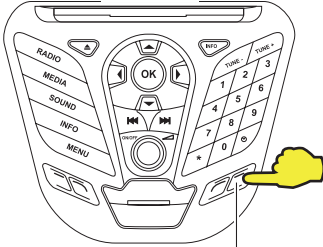  

Push to enter Browsing

  C

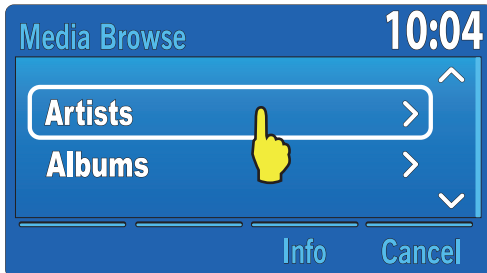

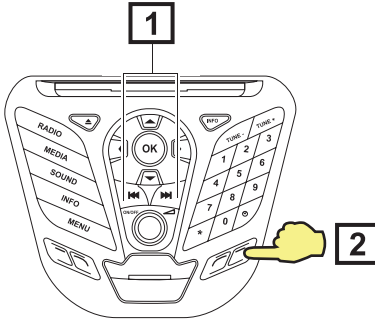


- 1** "Track Seek ►►" or "Track Seek ◄◄" switch to next available channel.
Long Touch on "Track Seek ►►" or "Track Seek ◄◄" switch to next available Preset.
- 2** Push "BROWSE" to enter Browsing.

Known Limitation!

Due to Microsoft SYNC limitation GSR can only Save/Replace/Delete 1 preset at the time.
To Save/Replace/Delete multiple presets factory radio has to be powered down or USB disconnected after each Save/Replace/Delete.

 Database Update. WAIT!

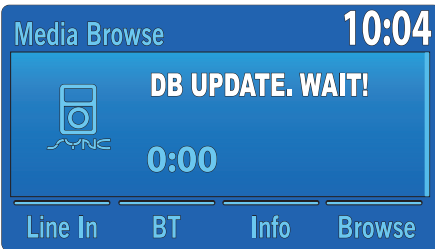

Known Limitation!

Any change in satellite subscription will result in "DB UPDATE. WAIT!" message.
You will need to reselect USB as a source, once it's done updating.



 
BUICK



CHEVROLET




A

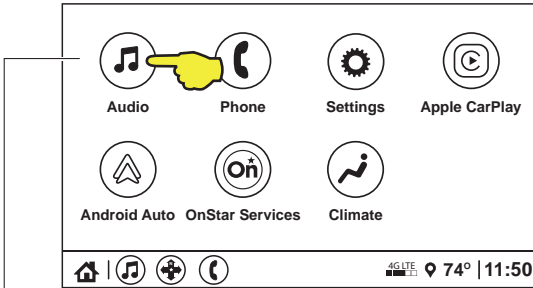


View all Audio Sources available

 B

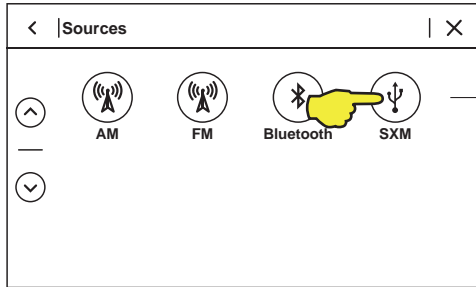

Touch to select "SXM" USB Audio Source

 C

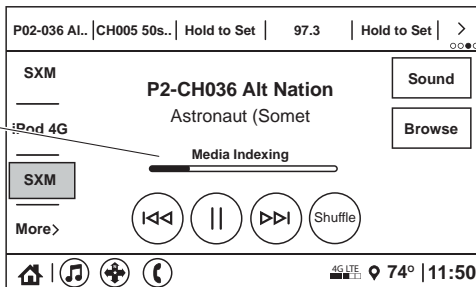


Wait for "Media Indexing" to complete



BUICK




 D

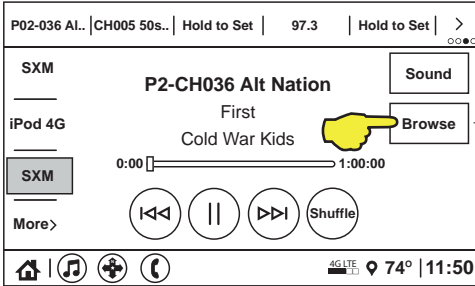


Touch to select Browse

 E

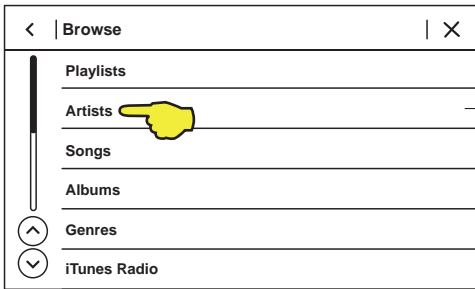

Touch to select Artists

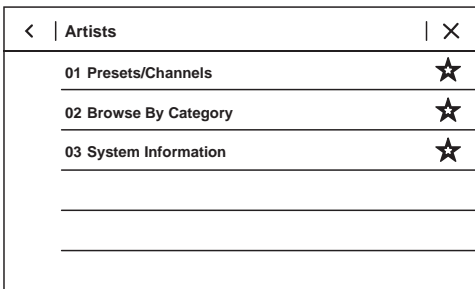 

“Track Seek **▶▶**” or “Track Seek **◀◀**” (on the radio or steering wheel) switch to next available channel.

Long Touch on “Track Seek **▶▶**” or “Track Seek **◀◀**” switch to next available Preset.





 
HONDA

Important


2017 Honda Civic radio shown. Display and controls varies depending on the car models.

A

Select "iPod" Audio Source

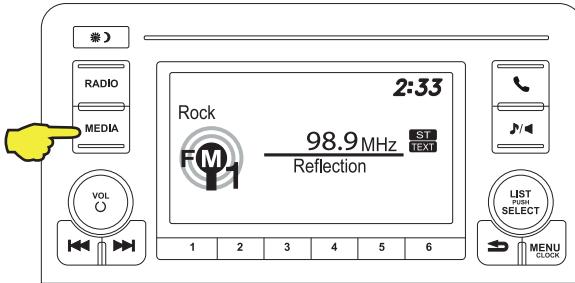



B

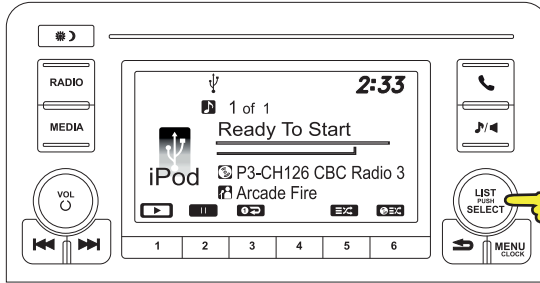 

Push "LIST" for Browsing

  C

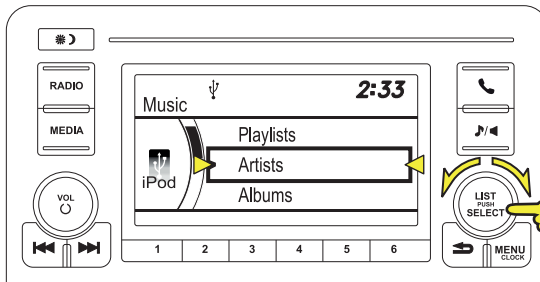

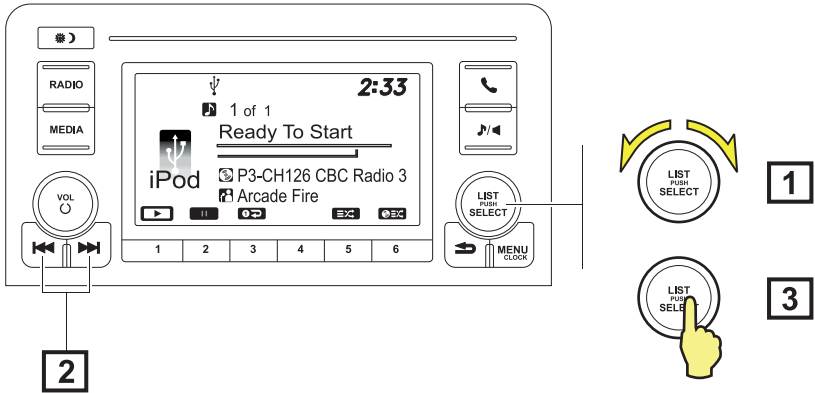


- 1** Tuning Knob - switch to next available channel, depending on direction of rotation. (Tuning knob may not be available while radio is loading channel list.)
- 2** "Track Seek ►►" or "Track Seek ◄◄" switch to next available channel.
Long Touch on "Track Seek ►►" or "Track Seek ◄◄" switch to next available Preset.
- 3** Push "LIST SELECT" to enter Browsing.



HYUNDAI




 A

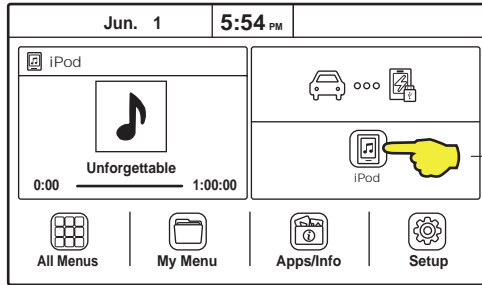


Touch to select iPod

 B

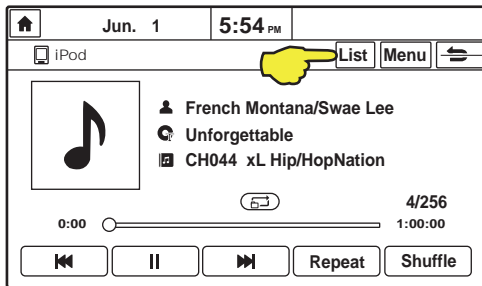

Touch to select List


 
C

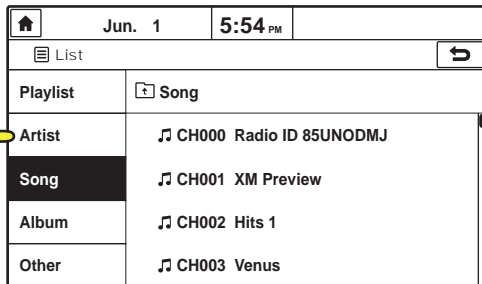

Touch to select Artist



  HYUNDAI

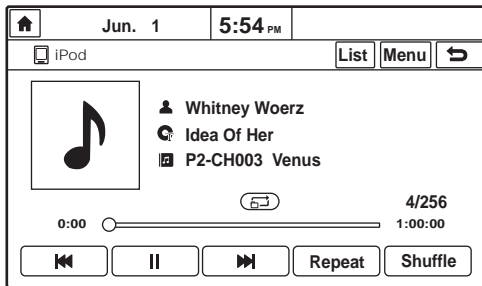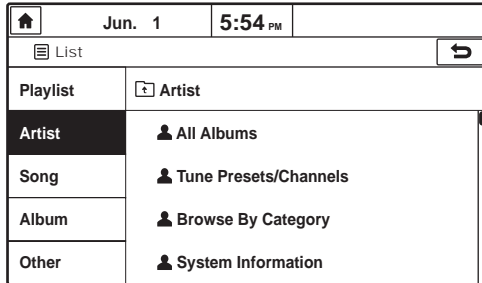
D


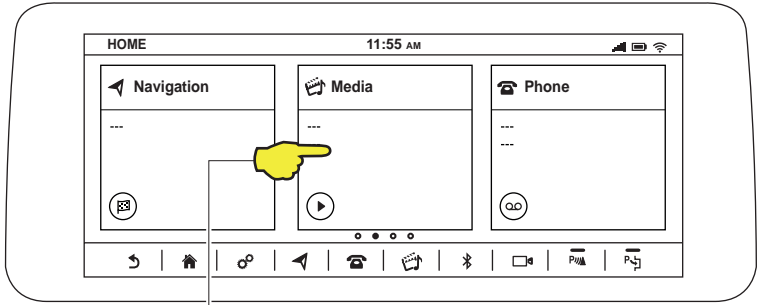 
“Track Seek ►►” or “Track Seek ◀◀” (on the radio or steering wheel) switch to next available channel.

Long Touch on “Track Seek ►►” or “Track Seek ◀◀” switch to next available Preset.



 


A



Touch to select "Media"

B

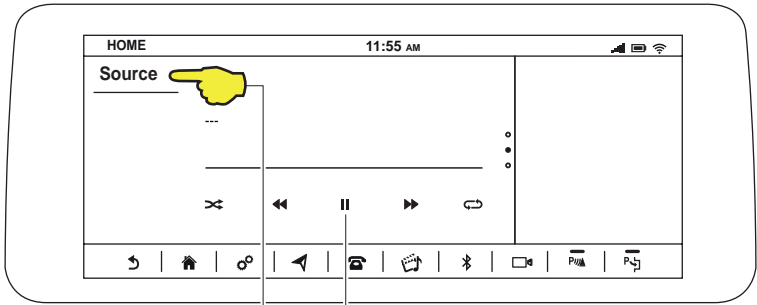


Touch to select "Source"


Mute/Unmute



 C

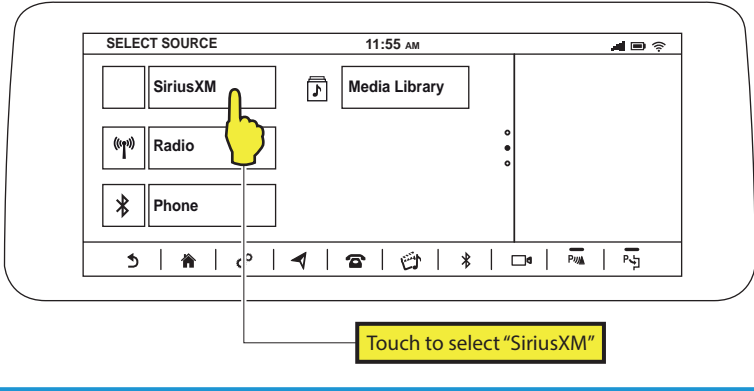

D

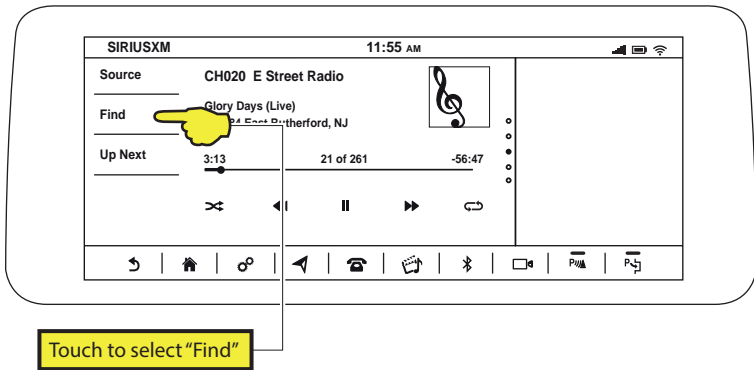 

"Track Seek ►►" or "Track Seek ◄◄" (on the radio or steering wheel) switch to next available channel.

Long Touch on "Track Seek ►►" or "Track Seek ◄◄" switch to next available Preset. 

Not available for 2018+ models.

 
Known Limitation!

Delete/Replace function does not refresh dynamically. In order to refresh "Presets List" after you Delete/Replace a preset. You need to go one level up and then back in to see refreshed list.




A


Touch to select desired Audio Source

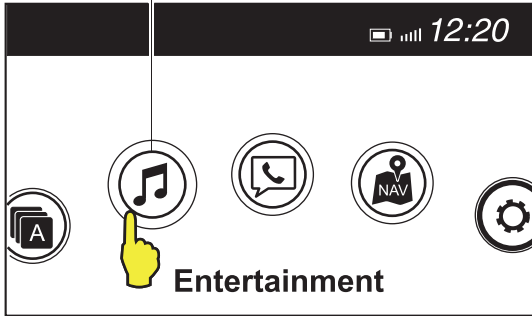

B


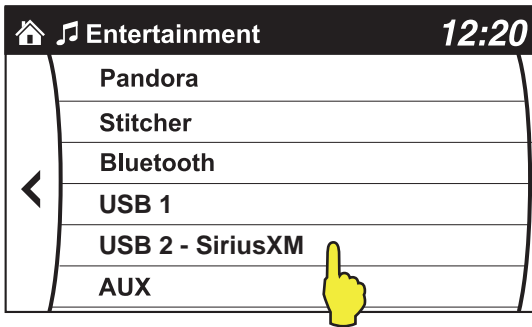 


C

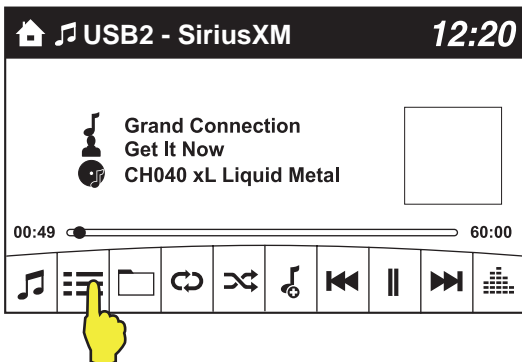 



D

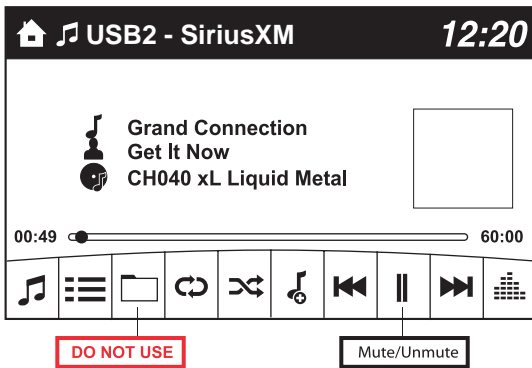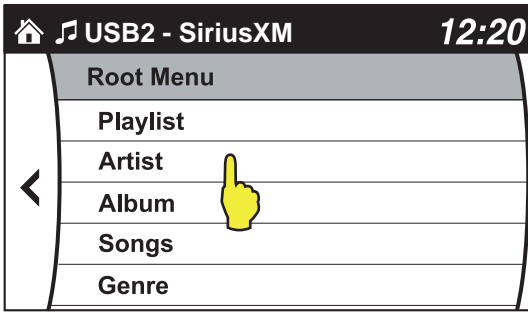  

On the radio or steering wheel:

Touch "Track Seek ►►" or "Track Seek ◀◀" to switch to next available channel.

Long Touch on "Track Seek ►►" or "Track Seek ◀◀" to switch between Presets.

 
 




Mercedes-Benz



A

View all Audio Sources available

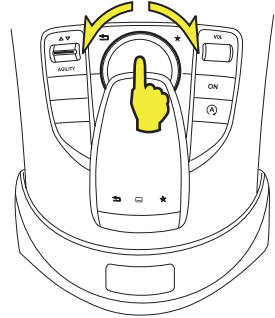
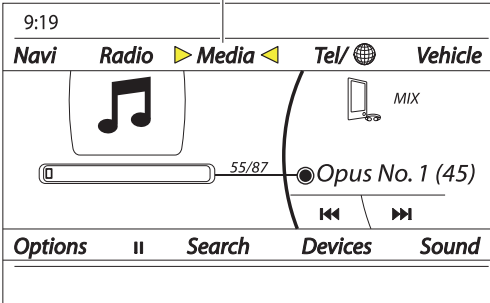


B

  Touch to select desired Audio Source

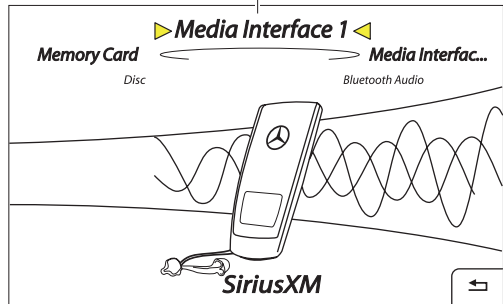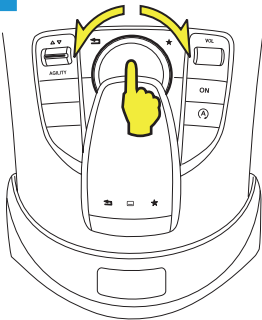


C

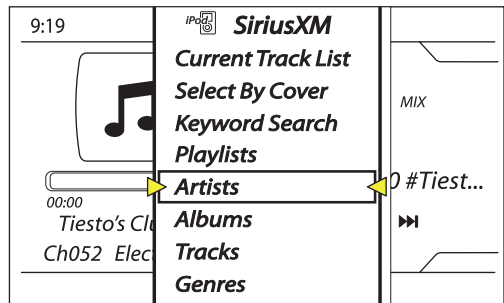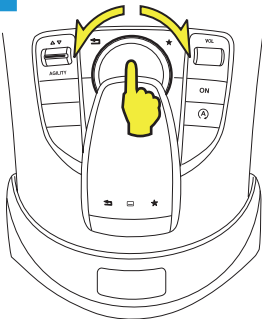  




Mercedes-Benz

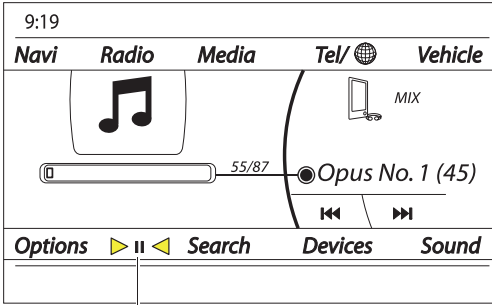 

Mute/Unmute

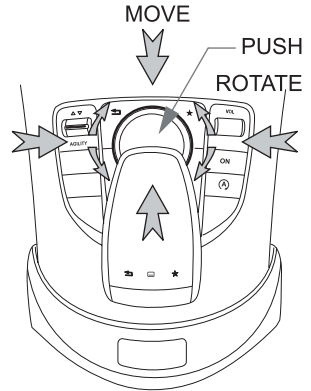 

"Track Seek ►►" or "Track Seek ◄◄" (on the radio or steering wheel) switch to next available channel.

Long Touch on "Track Seek ►►" or "Track Seek ◄◄" switch to next available Preset. 

 


Important

2019 Nissan Sentra radio shown. Display and controls vary depending on the car model and available equipment.


A

Select "iPod" Audio Source

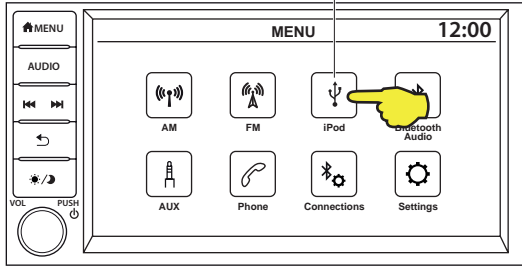


B

 
Select "iPod Menu"

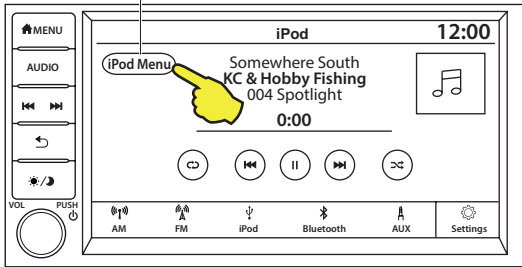

C

  Select "Artists"

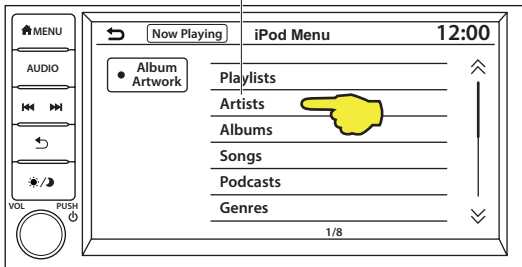

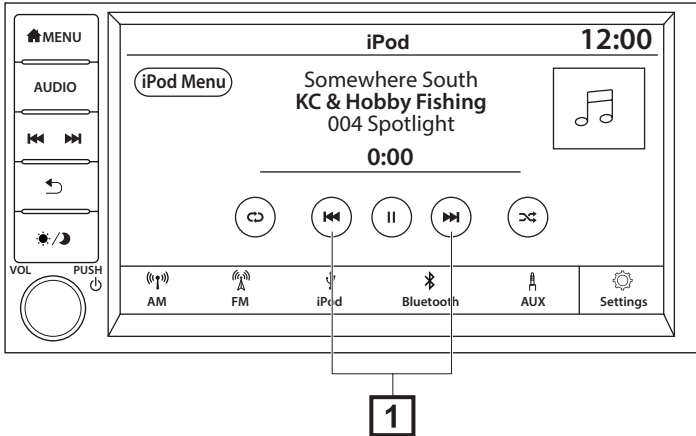


- 1** “Track Seek ►” or “Track Seek ◀” switch to next available channel.
Long Touch on “Track Seek ►” or “Track Seek ◀” switch to next available Preset.



Important

2017 Subaru Impreza radio shown. Display and controls varies depending on the car models and available equipment.

 A

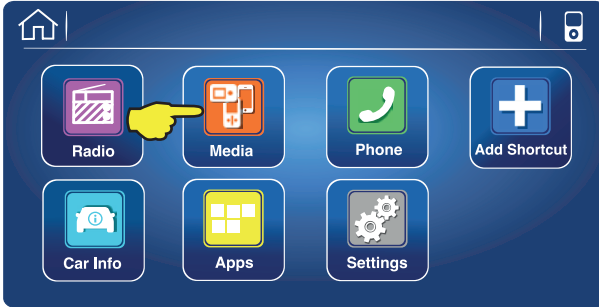


Home Screen

B



 C

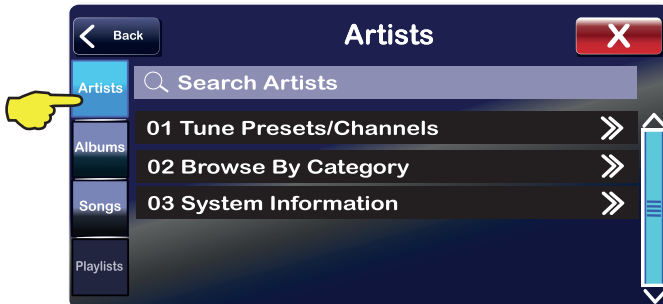




- 1** Tuning Knob - switch to next available channel, depending on direction of rotation. (Tuning knob may not be available while radio is loading channel list.)
- 2** Use Track Seek Forward or Track Seek Back switch to switch to next available channel. Long Touch on either track seek button to switch to next available preset.




A

 Touch to select Browse

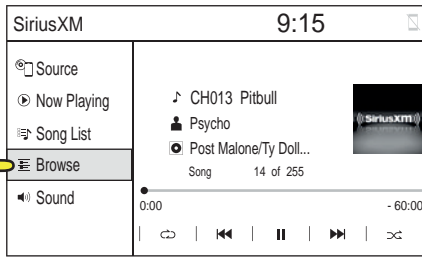



B

 Touch to select Artists

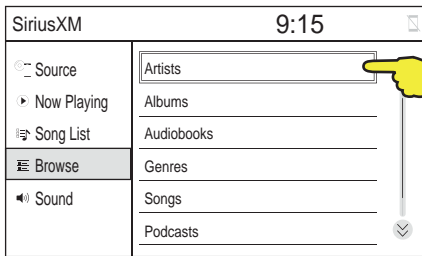

C

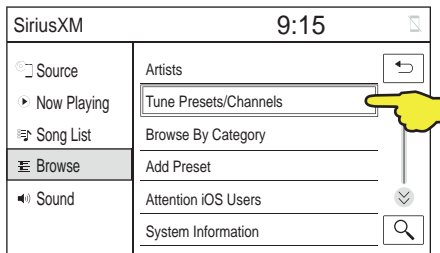 

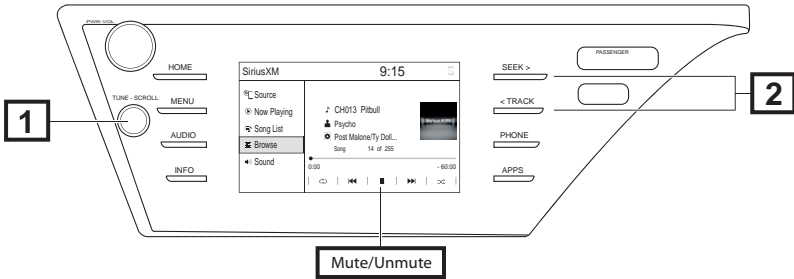 


1 Tuning Knob - switch to next available channel, depending on direction of rotation. (Tuning knob may not be available while radio is loading channel list.)

2 "Track Seek+" and "Track Seek-" switch to next available channel. Long Touch on "Track Seek+" and "Track Seek-" switch to next available Preset.

Volkswagen

 A

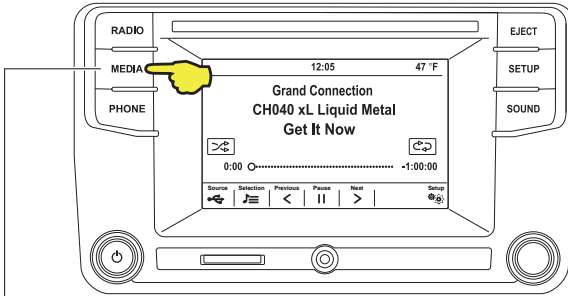


Touch Media to show Sources

B



Touch Source to select Audio Source

 C

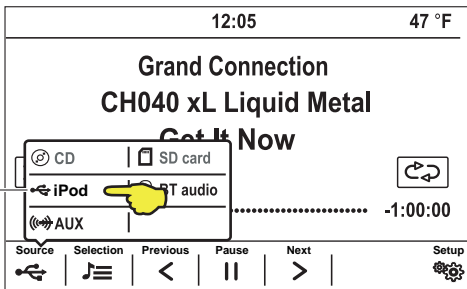

Touch to select iPod Audio Source

 
Volkswagen

D



Touch Selection to display Artists

E

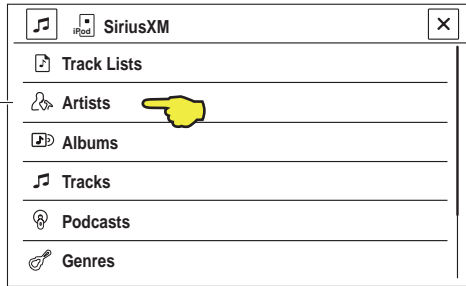

Touch to select Artists

“Track Seek ►►” or “Track Seek ◀◀” (on the radio or steering wheel) switch to next available channel.

Long Touch on “Track Seek ►►” or “Track Seek ◀◀” switch to next available Preset.



