
## 80° CV DRIVE SHAFT LUBRICATING PROCEDURE

## **SERVICE INSTRUCTIONS**

**Weasler**<sup>®</sup>

CROSS & BEARINGS

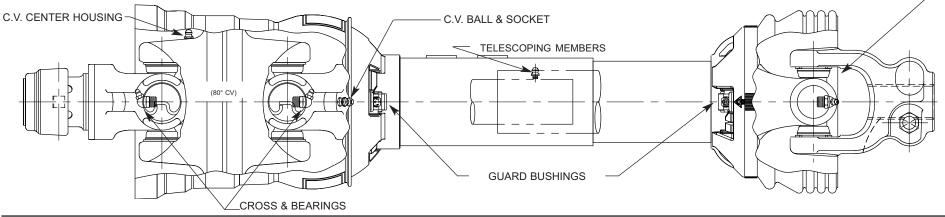

LUBRICATE ALL FITTINGS WITH A GOOD QUALITY LITHIUM SOAP COMPATIBLE E.P. GREASE MEETING THE N.L.G.I. #2 SPECIFICATIONS AND CONTAINING NO MORE THAN 1% MOLYBDENUM DISULFIDE.

AN E.P. GREASE MEETING THE N.L.G.I. #2 SPECIFICATIONS AND CONTAINING 3% MOLYBDENUM DISULFIDE MAY BE SUBSTITUTED IN THE TELESCOPING MEMBERS ONLY.



	STANDARD	EXTENDED LUBE	LEVER
LOCATION	<b>INTERVAL</b>	<b>INTERVAL</b>	ACTION PUMPS
CROSS & BEARINGS	*8 HRS.	50 HRS.	5
TELESCOPING MEMBERS	8 HRS.	50 HRS.	8-10
CV BALL & SOCKET	*8 HRS.	50 HRS.	5
CV CENTER HOUSING	24 HRS.	50 HRS.	30
C € & NON-ROTATING GUARD BUSHINGS (1000 RPM MAX.)	8 HRS.	50 HRS.	5
*CONSTANT ANGLE APPLICATIONS MAY REQUIRE A LUBE INTERVAL OF <sup>4</sup> HOURS			

ROTATING GUARD BUSHINGS SHOULD BE LUBRICATED UPON REPLACEMENT

## CAUTION!! REPLACEMENT PARTS ARE NOT LUBRICATED

REPLACEMENT PARTS MUST BE LUBRICATED AT TIME OF ASSEMBLY AND DURING USE PER THE LUBE RECOMMENDATIONS

UNCONTROLLED DOCUMENT 56-15146-07

On our website you can discover more driveline & axle parts.