

HANDHELD RADIO SCANNER

Quick Start Guide

TRX-1

START HERE!

Package Contents:



Scanner



USB Cable



Antenna



Protective TPU Case with 2 Inserts



Swivel Belt Clip

Also Included:

- MicroSD Card
- User Guide

See the User Guide for complete instructions



WHISTLER

INSTALL BATTERIES

1

Rechargeable Battery Alkaline Battery

Battery Type Selector

A low battery warning sounds every 30 seconds (default setting) when the batteries are low.

1. Slide open the battery compartment cover.
2. Set the Battery Type Selector:
 - ALKA – Alkaline
 - NI-MH – Rechargeable Ni-MH
3. Install four AA batteries, matching the polarity symbols (+ and -).
4. Replace the cover.

CONNECT ANTENNA

2

1. Align the antenna slots with the tabs on the antenna jack.
2. Press the antenna down over the jack and turn the antenna's base clockwise.

STEP-BY-STEP PROGRAMMING

3

1. Press the **POWER** button.
2. Use the **▲/▼/◀/▶** to set the date and time. Press **SEL** to save.
3. Select Browse Library.
4. Select country.
5. Select first letter of State/Province.
6. Select State/Province.
7. Select Counties/Cities.
8. Select first letter of County.
9. Select County.
10. Select Data Type **NOTE:** Police/Fire and Emergency services will be in "Categories" for smaller towns, "Systems" for larger ones.
11. Select desired agency, category or system available for the county.
12. Select desired subcategory. Investigate listings by pressing **▶** to go deeper into that selection. When the cursor switches from the right side of the screen to the left, you are at the bottom of a category. **NOTE:** When selecting a System, check at least one of the "Sites" in range, then go further into Categories to find objects.
13. Use the **SEL** button to check boxes for services you wish to monitor. Press **SEL** to un-check a selected service and at anytime press **◀** to go back. Once all desired objects have been checked, press **MENU**.
14. Select Import Selected.
15. Select desired Scanlist location for selected objects and press **◀** to save.
16. Press **SEL** to continue to main menu.
17. Select Scanlists from main menu. Use the **▲/▼/◀/▶** to rename the scanlist if desired. Confirm box beside desired scanlist is checked.
18. Repeat steps to add additional scanlists, or select Scan from the Main Menu to begin scanning.

NOTE: When traveling or for quick programming, refer to location based, ZIP code programming, of the User Guide.

Discover other portable radios on our website.