

HANDHELD RADIO SCANNER

Quick Start Guide

WS1040

START HERE!

Package Contents:



Scanner



Antenna



AC Adapter



PC/IF Cable



Rechargeable Battery Holder



Battery Holder



Belt Clip

Also Included:

- User's Guide

See the Owner's Guide for complete instructions



WHISTLER

1 INSTALL BATTERIES

1



Rechargeable Battery Holder



Alkaline Battery Holder

1. Slide open the battery compartment.
2. Place 4 AA batteries into the correct battery holder matching polarity symbols (+ / -):
 - Black – Alkaline (non-rechargeable)
 - Yellow – Rechargeable Ni-MH or Ni-Cd
3. Place the battery holder into the battery compartment. The battery holder fits only one way. Do not force it.
4. Replace the cover.

2 CONNECT ANTENNA

2



1. Align the antenna slots with the tabs on the antenna jack.
2. Press the antenna down over the jack and turn the antenna's base clockwise.

3 PROGRAM FREQUENCIES

3



Preset squelch between 10 and 12 o'clock position

We recommend programming your local radio systems using a Windows PC. You will need a membership in radioreference and a free 30-day download from either PSREdit or Starrsoft. This method does not require you to retype any frequencies or names and you do not need to know anything about trunking systems, you only need to know what you want to monitor from the radioreference lists.

If you wish to program by hand, look up your local frequencies at radioreference and refer to the owner's manual for detailed instructions.

Find out more about portable radios we have.