

Installation instructions

INSTALLATION INSTRUCTIONS

Under normal operating conditions, the cabin air filter should be replaced every 12 months or at Maintenance II as indicated on the DIC (Driver Information Center). In dusty areas, change the cabin air filter more often.

1. Open the hood.
2. Remove the windshield wiper arms, then weatherstrip from air inlet grille.
3. Remove air inlet grille panel rivets, then the air inlet grille panel, Fig. 1.
4. Remove cover retainer, then the cabin air filter, Fig. 2.
5. Install the new cabin air filter to the filter housing, then the cover retainer.
6. Install air inlet grille panel and rivets.
7. Install weatherstrip and wiper arms.
8. Close hood.

