

INSTALLATION INSTRUCTIONS SAFETY DROID[™] Model 1500

Your purchase of a WOLO SAFETY DROID is a perfect choice to warn pedestrians and bystanders when in the path of an oncoming forklift, providing a powerful safety warning light.

Before installation of the SAFETY DROID is attempted, it is important to read these instructions completely. The lives of people are dependent on a proper installation of the approaching forklift. The person installing this SAFETY DROID must have knowledge of the proper method for mounting and securing the safety warning light to the equipment, as well as knowledge of the forklift's electrical system. Again, read the installation instructions completely and note any messages marked "**IMPORTANT**" or "**WARNING**". A safe installation will prevent serious injury or damage to the equipment.

IMPORTANT: Most forklifts have an overhead guard, which has pre-drilled holes for work lights. The installer will select a mounting location on the overhead guard facing the front of rear of the forklift. Depending on whether the safety light is desired to project facing forward or backward when the forklift is in operation. For best protection it is recommended to use two SAFETY DROID'S, on facing forward and one facing to the rearward.

IMPORTANT: Before drilling any hole, the installer must carefully inspect the selected location to ensure that there are no components, wires and or any other parts that could be damaged. **WARNING:** The roof or overhead guard could have support members that span over the driver; NEVER drill into a support member!

IMPORTANT: The SAFETY DRIOD has an adjustable trunnion type bracket (u-bracket) that will mount with one bolt. This enables the installer or the forklift operator additional freedom to adjust, tightened and lock the warning light into any desired position once mounted.

MOUNTING: Fig. 1.

- Locate the desired mounting location, anywhere a ½" hole can be drilled. WARNING: The installer must inspect the selected location to ensure that there are no components, wires and or any other parts that could be damaged by drilling.
- There is a threaded bolt that extends from the bottom of the warning light's mounting bracket, allowing a simple through-the-hole mount. See fig. 1. **IMPORTANT:** Do not fully tighten the ½" bolt until the warning light is wired and light beam can be adjusted.


WIRING FOR FORWARD FACING: Fig. 2.



- 3. Red Wire: Is connected to (+) positive power source when the forklift's ignition is turn on such as: fuse block or strobe light. A 4-ampere fuse is recommend to be installed at the power source, (fuse not provided).
- 4. Black Wire: Is connected (-) negative (body ground), such as: any metal body bolt or the forklifts (-) battery post. IMPORTANT: Make sure all connections are free from corrosion or oxidation.

WIRING FOR REARWARD FACING: Fig. 2.

- 5. Red Wire: Is connected to (+) positive power source only when the forklift's is in reverse such as: back-up alarm or back-up lights. A 4-ampere fuse is recommend to be installed at the power source, (fuse not provided).
- 6. Black Wire: Is connected (-) negative (body ground), such as: any metal body bolt or the forklifts (-) negative battery post. **IMPORTANT:** Make sure all connections are free from corrosion or oxidation.
- 7. Installation is complete. Make sure all wires are securely fastened to the forklift using plastic wire ties or electrical tape (not provided).

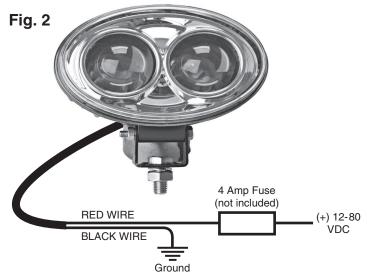

ADJUSTING LIGHT: Fig. 1.

- 8. Depending on the position of light, the optimal distance for the light beam is to project 7-8 feet to the front or rear of the forklift.
- 9. Loosen the bolt and nut that secures the u-bracket, adjust light beam and then re-tightened.
- 10. Adjust the light beam side to side by turning the light and then tightened the ½" mounting threaded bolt.

SPECIFICATIONS:

Operating Voltage: 12 ~ 80 volt DC Light Intensity: 12,000 Candela Partial Flux: 1250LM Total Luminous Flux: 45LM Operating Temperature: -40° C ~ +85° C Life: 50,000 hours Weather Rating:IP67 Built to protect against dirt and pressure washing Heat sink die cast aluminum Wire leads: 10 inches