




**PLEASE READ THE FOLLOWING
NOTICE BEFORE
INSTALLATION.**

1. Disconnect negative battery terminal.
2. Note location of all wires and connections before any disassembly.
3. Loosen cable nuts on old solenoid but do not remove nuts.
4. Remove wire and nut from one terminal and loosely attach to the new solenoid.
5. Unbolt old solenoid from mounting area and install new solenoid in same mounting position.
6. Install second cable from old solenoid onto new unit.
7. Check cable locations for any interference and tighten cable nuts on new solenoid- Torque to vehicle manufactures specification.
8. Install starter solenoid energize wire on terminal marked "S". If the original solenoid has three terminals do not use the "I" terminal.
9. Reconnect negative battery terminal.

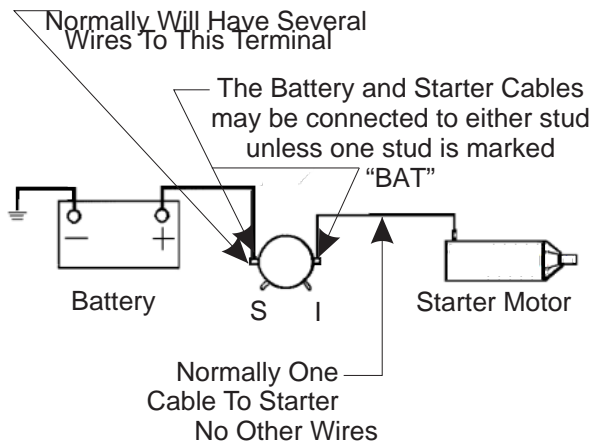

"S" Terminal-Start control Terminal
"I" Terminal-Ignition Voltage-Not
Used In Most Applications