


YAKIMA

Replacement Shock

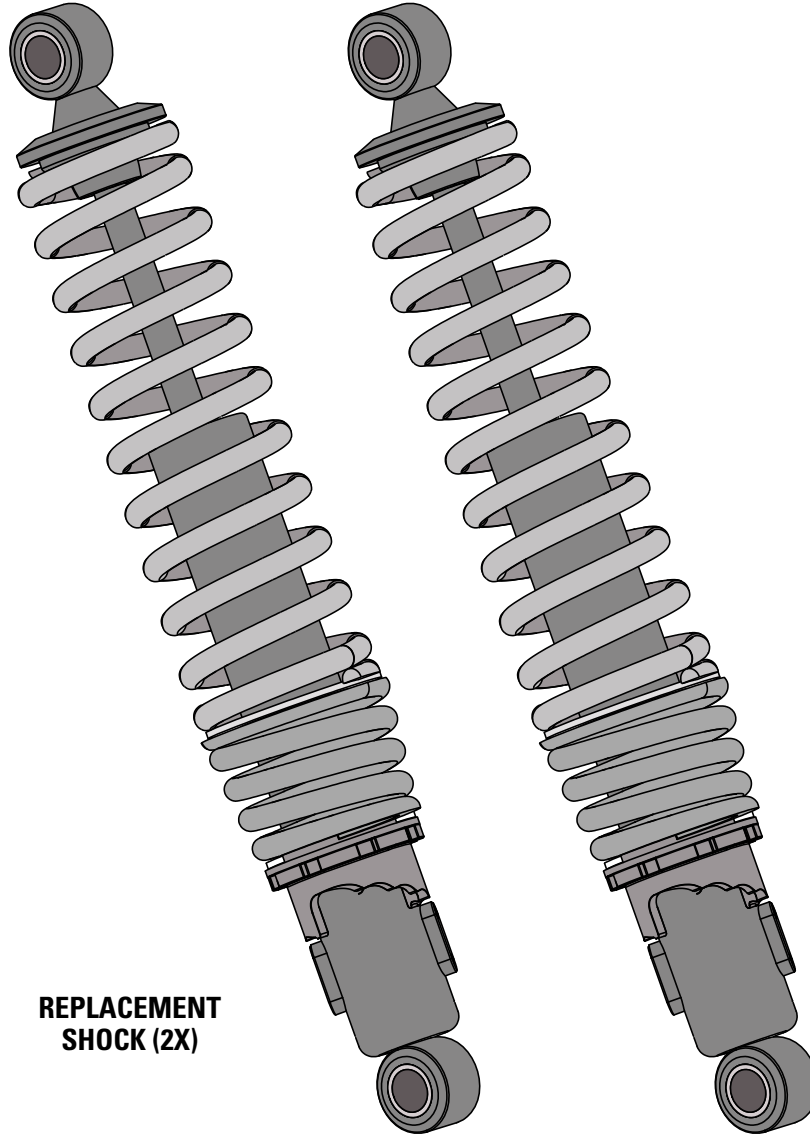

REPLACEMENT
SHOCK (2X)




IMPORTANT WARNING


IT IS CRITICAL THAT ALL YAKIMA RACKS AND ACCESSORIES BE PROPERLY AND SECURELY ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH TO YOU OR TO OTHERS. YOU ARE RESPONSIBLE FOR SECURING THE RACKS AND ACCESSORIES TO YOUR CAR, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR, AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS SUPPLIED WITH YOUR YAKIMA PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER.

1 POSITION THE TRAILER.


Carefully stand your RACKandROLL trailer up on end against a wall, or other supportive surface.

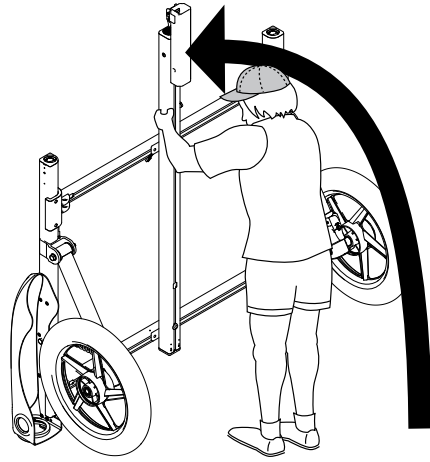


2 DISCONNECT FIRST MOUNTING POINT.

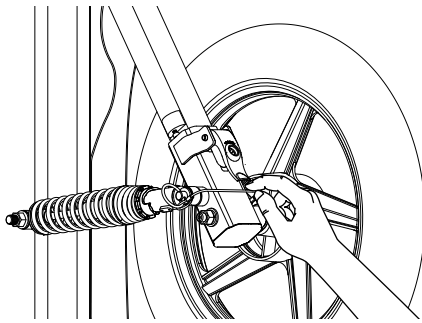

A Reach behind the shock mounting point.

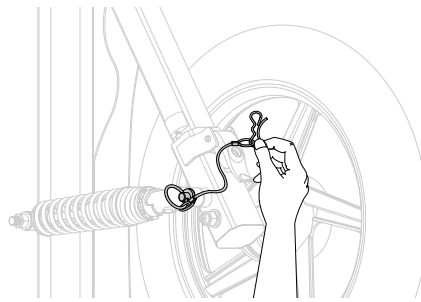


B Remove the safety pin.

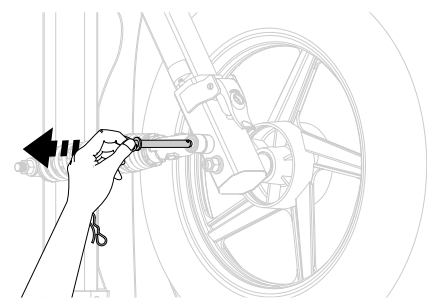


C Pull out the main pin.

3 REMOVE WHEEL.

Remove wheel according to the storage instructions found in your owners manual.

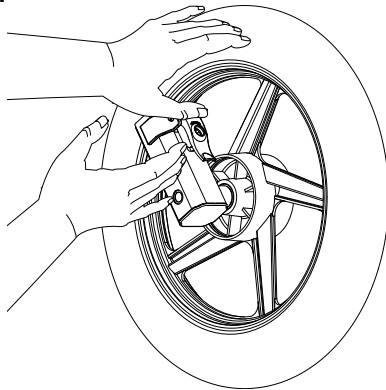


4 DISCONNECT THE SECOND MOUNTING POINT.

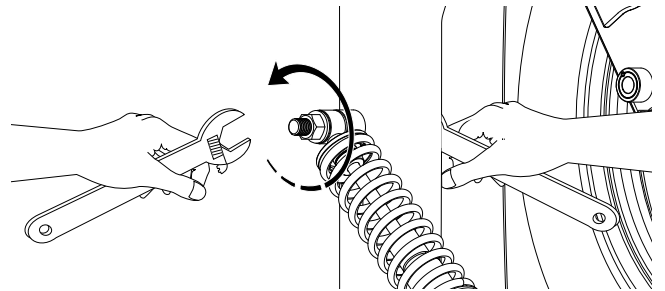


Use a set of wrenches to remove the nut and washer, set aside. Remove the shock.

5 INSTALL NEW SHOCK TO MOUNTING POINT.


Install shock, washer, and nut as shown using a set of wrenches. Refer to the existing shock on the other side to verify orientation. Tighten with firm resistance.

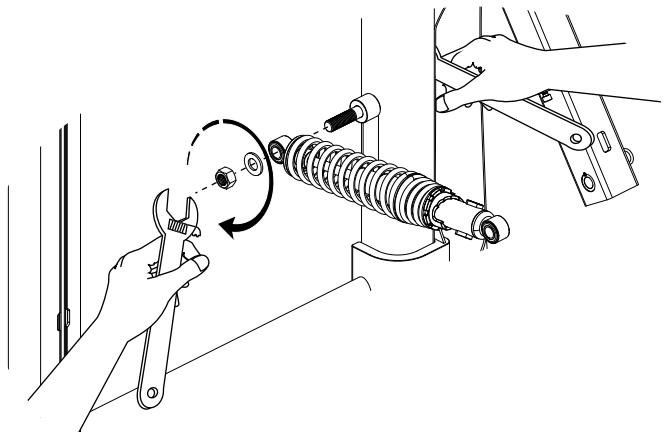

6 REPLACE WHEEL, POSITION SHOCK.

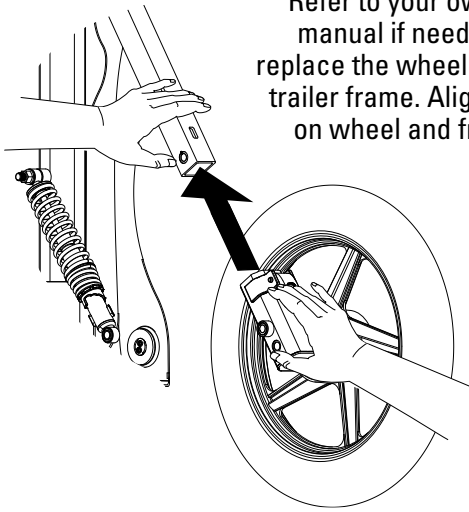

Refer to your owner's manual if needed to replace the wheel onto the trailer frame. Align holes on wheel and frame.

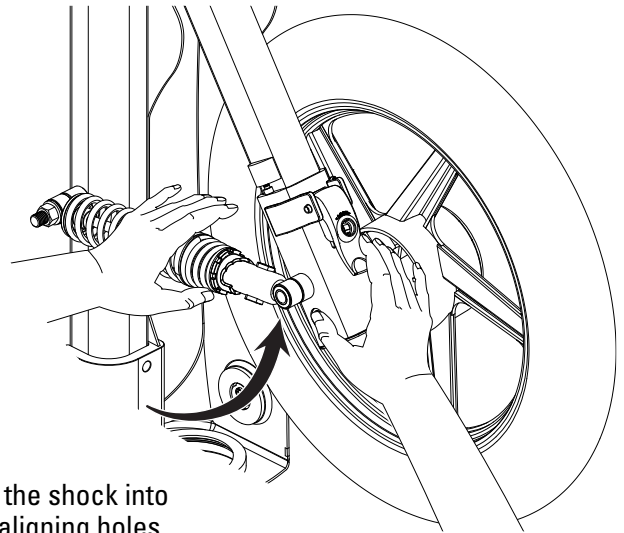


Swing the shock into place aligning holes.

7 REPLACE MAIN PIN.


Replace main pin through shock, wheel, and frame.

Help from a friend can make this step easier.

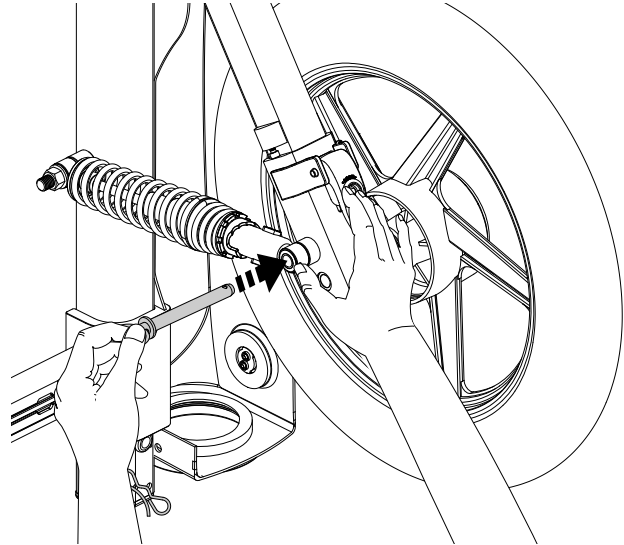

7 REPLACE SAFETY PIN.

Replace safety pin at rear of shock mounting point as shown.

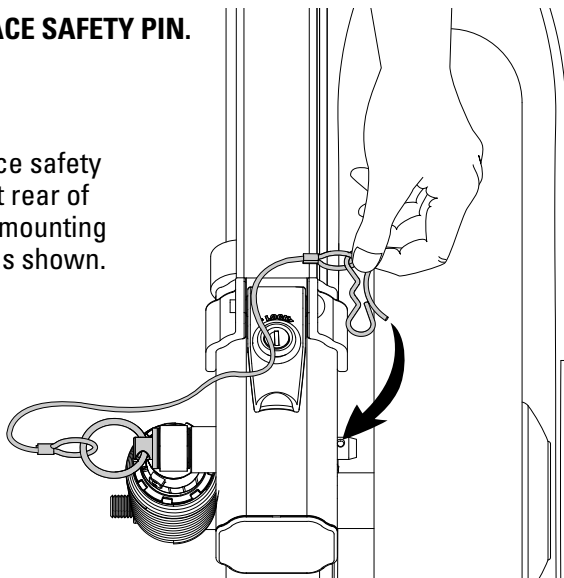

8 INSTALL SECOND NEW SHOCK.



Install your second new shock by following steps 1 through 7.

Read all safety warnings and recommendations on the following page.



BEFORE DRIVING AWAY:

Double check that the safety pins (bow-tie cotter pins) are installed at the rear of BOTH shock mounting points per the yellow warning labels.

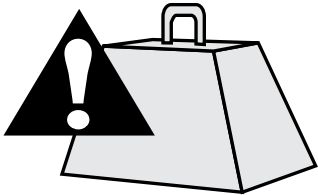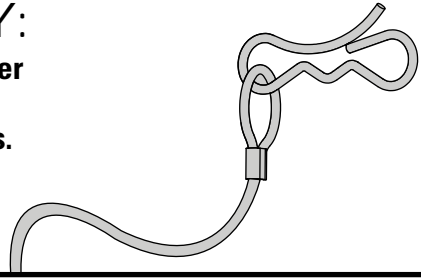

MAXIMUM LOAD LIMITS:



**DO NOT EXCEED
YOUR TRAILER'S
WEIGHT LIMIT!**

66" RACKANDROLL TRAILER.....	250 LBS. / 113 KG
78" RACKANDROLL TRAILER WITH STANDARD SHOCKS (SILVER AND BLUE).....	250 LBS. / 113 KG
78" RACKANDROLL TRAILER WITH HEAVY DUTY SHOCKS (ORANGE AND BLUE).....	350 LBS. / 159 KG