



YAKIMA

EasyTop

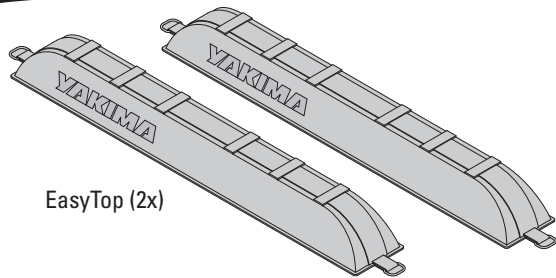

HD Strap (2x)

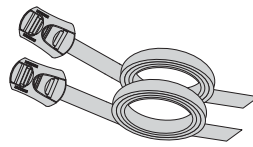

Weight limits

80 lbs / 36 kg


Load Width

36" capacity / 91 cm


Max Boat Length

14' long / 4.3 m

Accessories

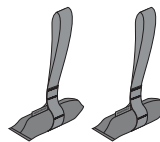

Hood Anchor Strap
Yakima Part #8007416

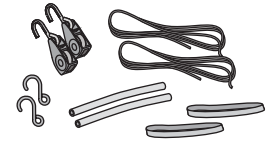

Bow Stern Tie Down
Yakima Part #8004031

Vehicle fit restrictions


- Does not work on vehicles with sliding, falcon, or gull-wing style doors.
- Not for use on panoramic glass-roofed vehicles.
- Do not set EasyTop directly on sun/moon roof.
- Do not route straps over side curtain airbag openings.

1



Thoroughly clean your vehicle's roof.


2

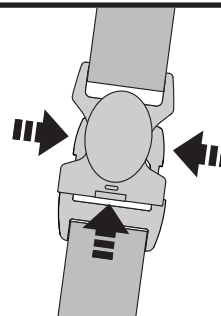


Open the buckle by pressing the side buttons, and the safety button at the same time.

2X

3

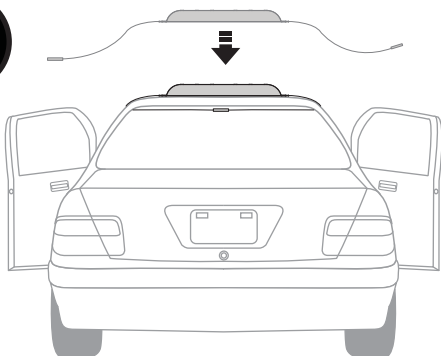


With your doors open place EasyTop on your vehicle. Space them a minimum of 24" apart.

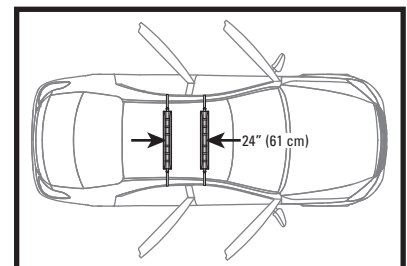

2X


4

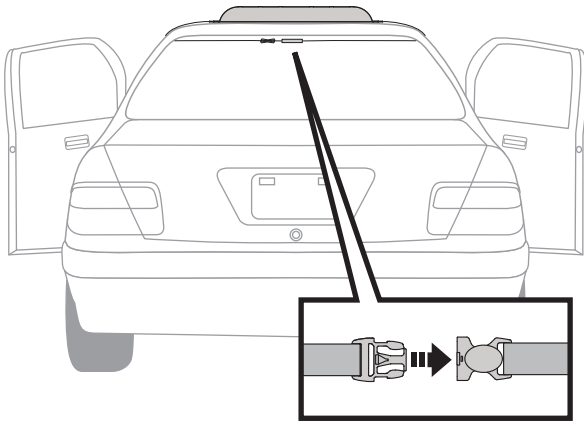

Route the straps inside the vehicle, and buckle them together. Pull hard to tighten the strap. Secure the loose strap in the built in loop.




2X

5

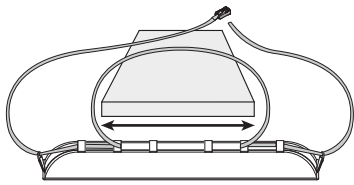

Route your HD straps as shown selecting the loops that most closely match the width of your load. Be sure to route the strap through the end rings.

- Center your load on the EasyTop.
- Use the HD straps to secure your load.
- Secure loose strap ends.
- Use the ropes to tie-down long loads to the front and rear of the vehicle.
- Once loaded check all straps and retighten if necessary.

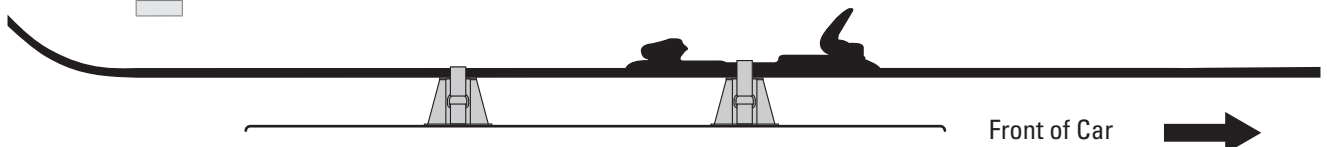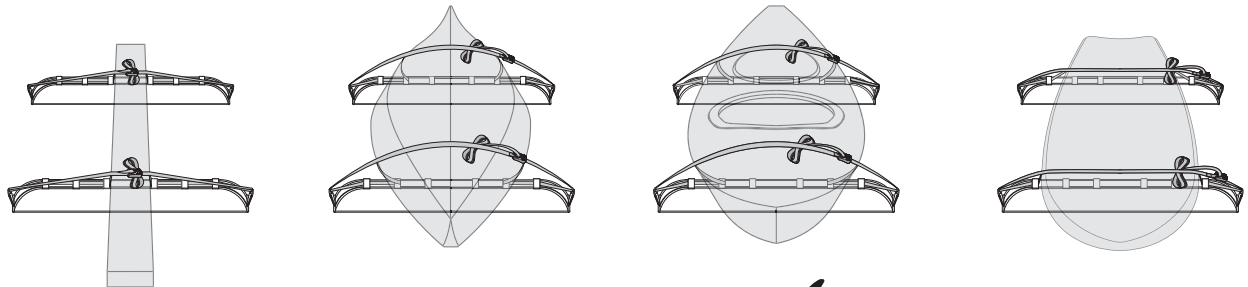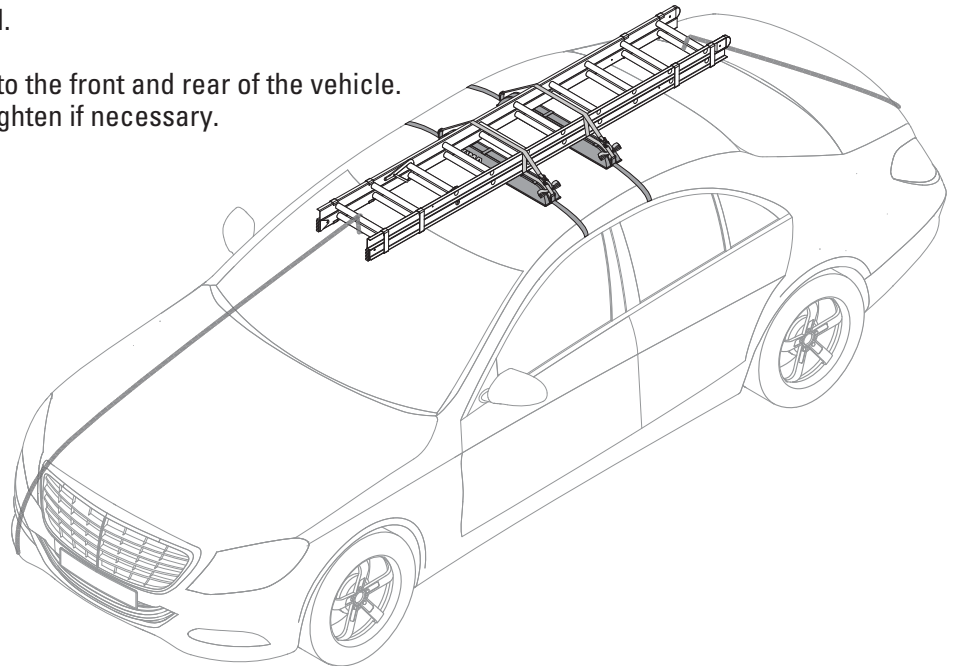

EN IMPORTANT WARNINGS

Rack Installation

Inadequately secured loads and incorrectly mounted roof racks and accessory racks can come loose during travel and cause serious accidents! Therefore, installation, handling and use must be carried out in accordance with product and vehicle instructions.

In addition to these instructions, review the mounting instructions for the roof rack accessories and the operating instructions of the vehicle.

These instructions should be kept together with the vehicle's operating instructions and carried in the vehicle when in use and en route.

For roof racks that do not specify the distance between the front and rear crossbars, the distance shall be at least 24 inches or as large as possible. Please note that changes (e.g. additional drill holes) to the base rack's attachment system are not permissible.

Check attachment hardware and load for tight fit and function:

- Before the start of any journey.
- After driving a short distance (30 miles or 30 minutes) following rack or load install.
- At regular intervals on longer journeys, or on bad terrain.
- After interruption of a journey during which the vehicle was left unsupervised (check for damage due to outside intervention).

Rack Loading

Do not exceed the maximum load specified for the roof rack, accessory rack or the maximum load recommended by the vehicle manufacturer.

Max Roof Load = weight of roof rack + weight of accessory racks + weight of load.

The roof rack or accessory rack may not project over the gutter. For cars without gutters over the outer edge, refer to local or national regulations.

Load shall be uniformly distributed with the lowest possible center of gravity.

Load should not substantially extend beyond the loading surface of the roof rack.

Vehicle Driving and Regulations

The speed driven must be suited to the load transported and to official speed limits. In the absence of any speed limits, we recommend a maximum speed of 80 mph (130 km/h).

When transporting any load, the speed of the vehicle must take into account all conditions such as the state of the road, the surface of the road, traffic conditions, wind, etc. Vehicle handling, cornering, braking and sensitivity to side winds will change with the addition of roof top loads.

Off-road driving is not recommended and could result in damage to your vehicle or your gear.

Maintenance

The accessory rack should be carefully cleaned and maintained, particularly during the winter months. Use only a solution of water and standard car wash liquid without any alcohol, bleach or ammonium additives.

Periodically inspect accessory rack for damage. Replace lost, damaged or worn parts. Use only original spare parts obtained from a stocking specialist, dealer or manufacturer.

Any changes made to the roof racks and accessory racks as well as the use of spare parts or accessories other than those supplied by the manufacturer will lead to the lapsing of the manufacturer's warranty and liability for any material damage or accidents. You should observe these instructions to the letter and only use the original parts supplied.