 

MAKINA Landing Pad #5


Refer to YAKIMA Control Tower instructions for important warning and load limitations, and YAKIMA's limited warranty.




 


You may need to remove your vehicle's factory <u>crossbars</u> and slats. Check to see if Landing Pad location will cause interference. Refer to your vehicle's owner's manual for details on factory rack removal.

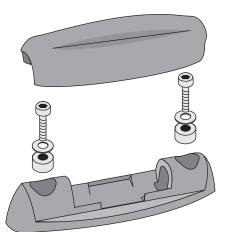

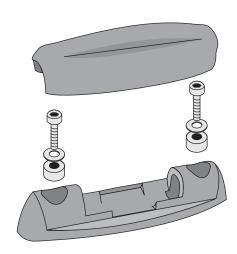

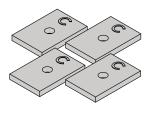




RECOMMENDED TOOLS:


- Measuring Tape
- 5mm Hex Wrench (included with control tower)



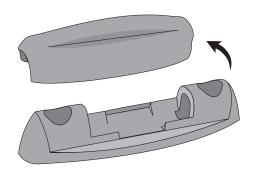

2

 Use existing nut-plates when possible. Four per track are required.




- Factory crossbars or accessories may need to be removed.
- IF THERE ARE FEWER than 4 plates per track, install additional plates.

B If y ma

If you need to install additional plates, you may need to remove end cap.

NOTE: Refer to vehicle owner's manual for details on end cap removal.

 - Loosen screw
- Remove cap.







NOTE: The "D" plate is for use on larger tracks. If the"D" plate is too wide for your tracks, use the "C" plate.




Replace end caps.

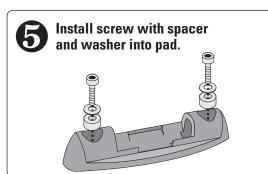

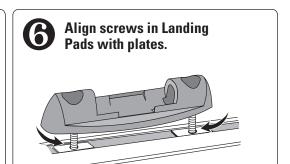

NOTE:

 If screws seem too short and are not engaging the plate, take out screw, remove plastic spacer, use washer only.




In some cases, it may be easier to assemble plates, screws, and bases before sliding onto tracks.






Engage the screw with wrench supplied. Do not fully tighten.

Consider where the most convenient placement of vour load would be before completing the installation.

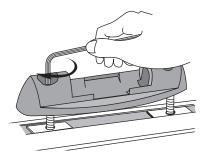



Arrange Landing Pads on the tracks in the approximate positions where Control Towers. positions where Control Towers will be attached.

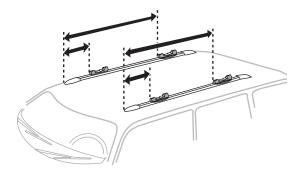

NOTE:

Do not fully tighten. Final adjustments will be made after Control Tower is installed.



CROSSBAR SPREAD:

The distance between the Yakima crossbars is determined by the accessories you wish to carry.

The Crossbar Spread Table (Fit List or Catalog) will tell you how much crossbar spread your accessories require.



YOU ARE NOW READY TO PROCEED TO CONTROL TOWER INSTRUCTIONS.