

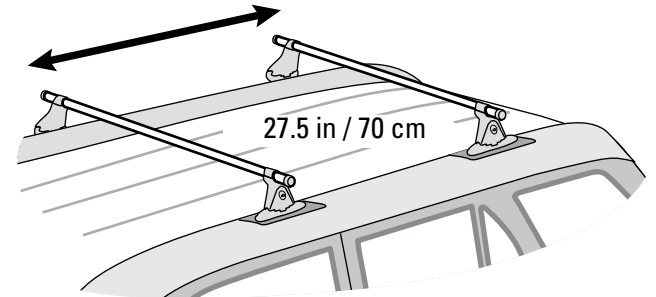
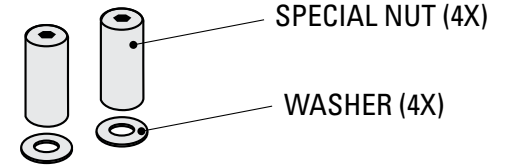
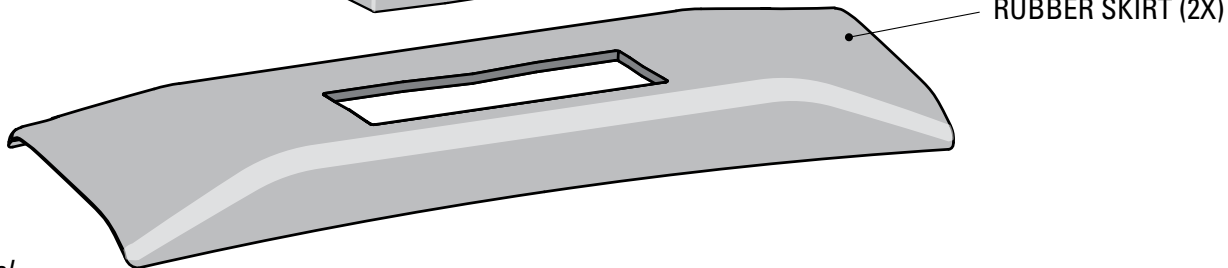
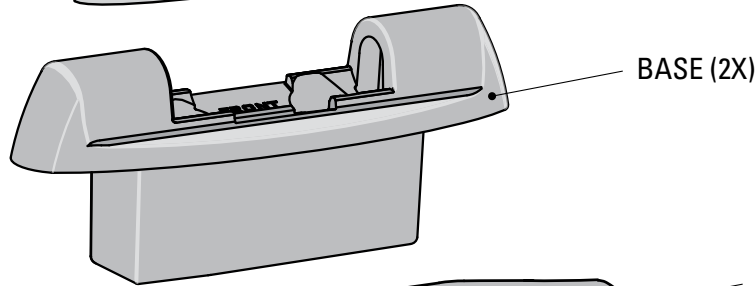


YAKIMA LandingPad #10

TOOL:
5 mm Allen wrench
(included in Control Tower kit)

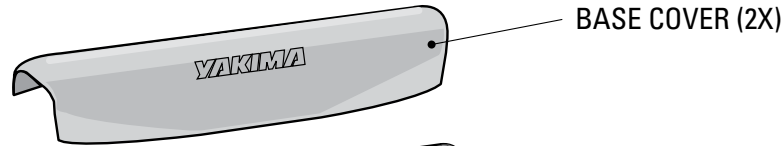

Note: Crossbar spread for this vehicle is fixed at 27.5 inches.

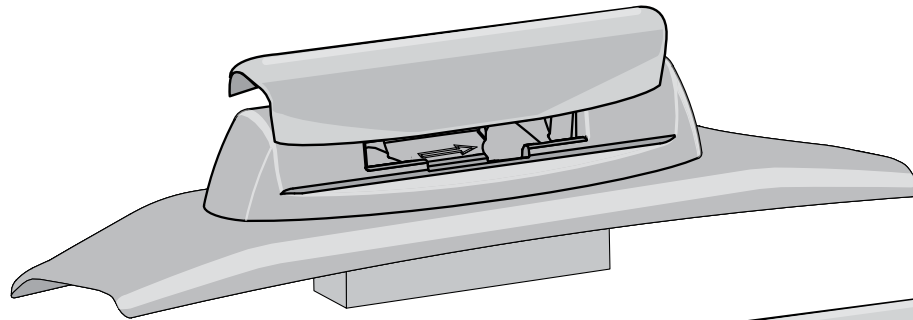


Refer to YAKIMA Control Tower instructions for important warning and load limitations, and YAKIMA's limited warranty.

1


If your vehicle has factory crossbars, remove them now, then proceed to step 3.

2**REMOVE THE FOUR COVER-PLATES.**

Use a flat tool to pry them off.


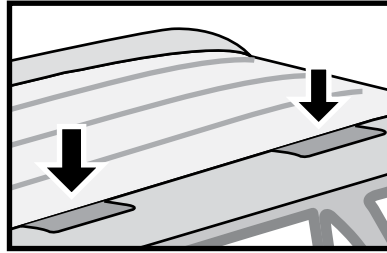


Access the small depressions on the edges of the plates.

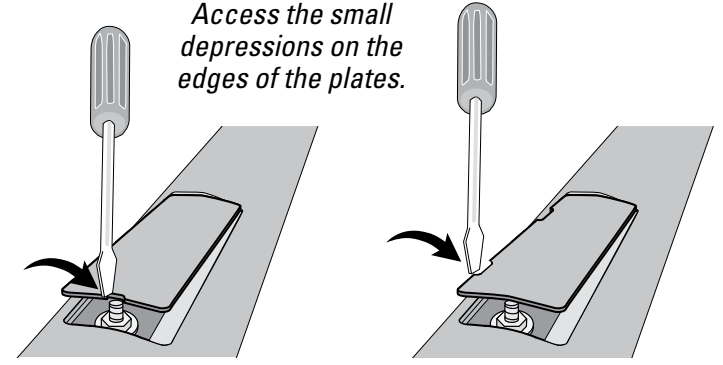**REAR****FRONT****3****LOCATE FACTORY STUDS.**

Due to factory paint, you will need to clean the factory threads via this process:

- Apply some form of lubricant (oil or grease).
- Thread on special nut by hand.
- Tighten with tool until you feel resistance, then turn another 1/4 turn.
- Remove nut and clean debris with wire brush or towel.
- Repeat process until threads are free of paint.

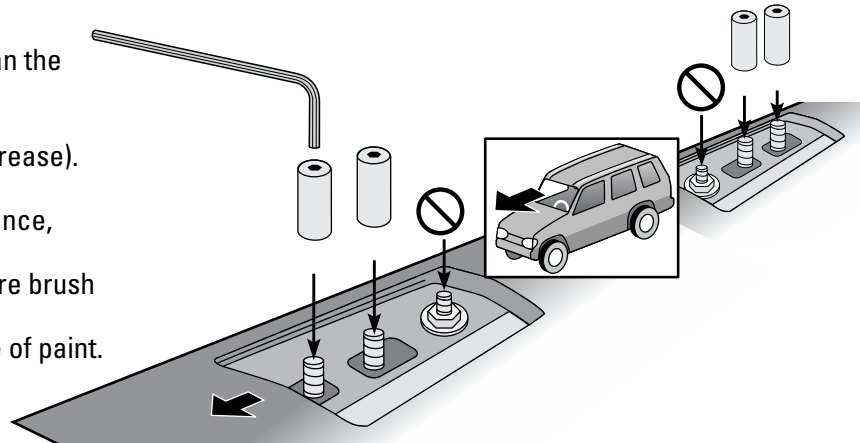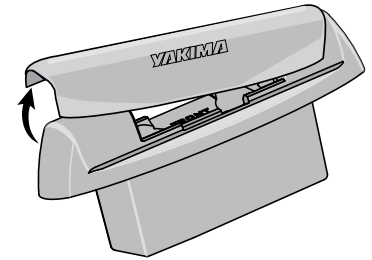
**4****Remove the covers from the bases.**

When the racks are not installed, use the covers to keep the bases free of debris.

5**COMBINE BASES, WITH SKIRTS, INSTALL INTO TRACK.**

- Combine bases with skirts.
- Arrows facing toward front of vehicle.

 
← FRONT OF VEHICLE



- Tall side of skirt facing outboard (away from center of vehicle).

← OUTBOARD  **OUTBOARD →**


- Install special nuts and washers onto designated studs (refer to Step 3).

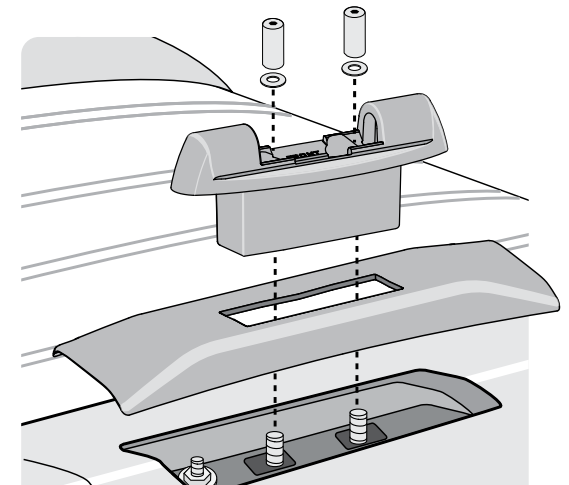

6 Using wrench from Control Tower kit, tighten special nuts completely.



- Pull rear side of base toward you as you tighten the special nuts as shown.
- Make sure bases are fitting tightly into track.

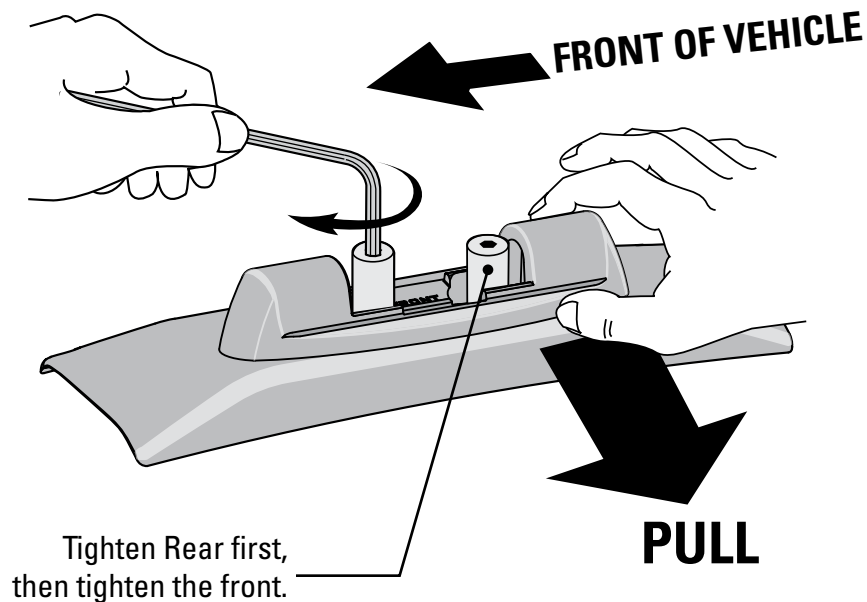

7 READ THESE WARNINGS!



Make sure Control Towers, with bars installed, seat completely with Landing Pad. If they do not seat properly, repeat step 6 with special attention to pulling rear side of landing pad toward you as you tighten the special nuts.



Be sure all hardware is secured according to instructions. Failure to perform safety checks before driving away can result in property damage, personal injury, or death.

Attachment hardware can loosen over time. Check and tighten if necessary, before each use.



- **DO NOT EXCEED WEIGHT LIMIT: 165 lbs. (75 kg)**
 - **Consult your YAKIMA dealer or fit list to see load limitations for accessories.**
- Remove your YAKIMA rack and accessories before entering automatic car washes.*

8 Continue with Control Tower installation.