

YAKIMA

SKS* LOCK CORE INSTALLATION

CONTENTS



Control Key
(flat edge)



Lock Core



Locking Keys


1

Use a key to dislodge the black plastic plug from the lock housing.




2

Insert the flat-edged Control Key into the lock core.

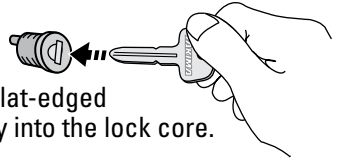

3

Use the inserted key to install the locks into the lock housings.

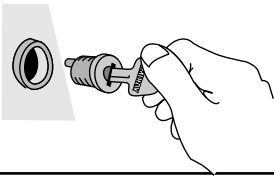


IMPORTANT—

You may need to rotate the small hole inside the lock housing so that the point on the lock core will align.


On some housings, you must rotate the moving parts behind the housing.

Refer to the rack or accessory instructions.

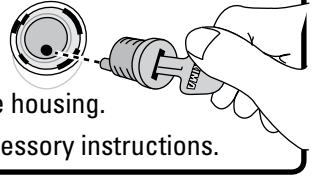

4

Push the core all the way into the housing. Hold the core with the tip of your thumb as you pull out the flat-edged Control Key. The lock should remain in the housing.

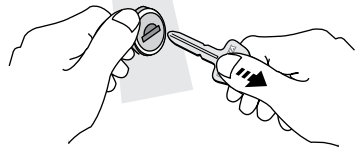

5



Use the locking keys to LOCK UP.

NOTE: If you wish to remove the core, the lock must be in the unlocked position, and you must use the flat-edged Control Key. Insert the Control Key completely to pull the core out.