



It Chops

Chop small to medium fire wood with the 5 inch steel hatchet head.



It shaves tinder

Quickly create tinder by shaving fire wood with the 5 inch steel hatchet head.



It saws

Slice logs 4 inches in diameter with the 15 inch steel saw blade.



It hammers

Ideal for pounding any size tent stakes into hard ground with the mallet head.

Unique Features:



Snap Down Cam

Self-adjusting tension compensator keeps saw blade tight while sawing wood.



Safety Sheath

In addition to protecting the axe head, the safety sheath doubles as the saw handle with its' integrated non-slip, rubber over-mold grip.



Saw Blades

The AxeSaw comes equipped with a 15 inch saw blade (included) which easily stores inside the axe handle. The handle can store an additional saw blade (not included) for a total of two (2) blades.

Attaching the Saw Blade:




Step 1

Loosen the thumbscrew and open safety sheath.



Step 2

Attach blade, close the sheath, and tighten the screw.

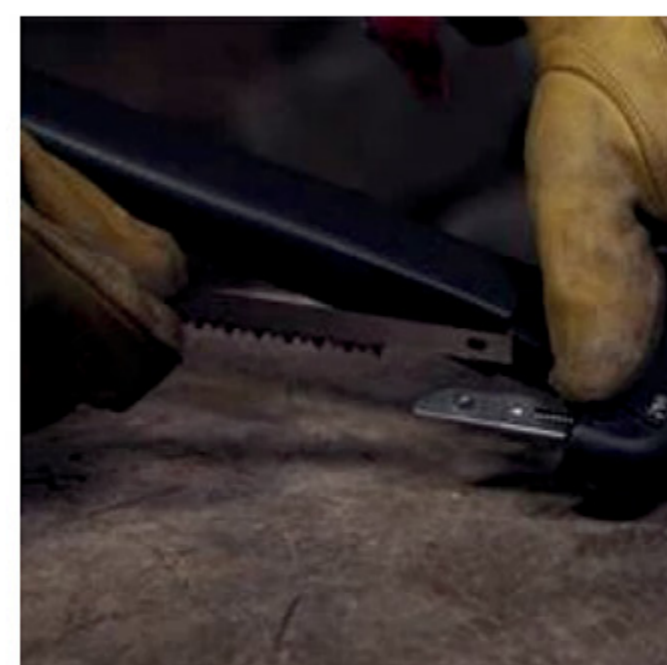

Step 3

Attach the other end of the blade to the tensioner handle and close cam lever.



Step 4

Use sheath as a handle and cut away.