



1) Keeping the striker plate perpendicular to the lid, adjust the striker location left and right to align the pin with the latch as shown below. The red dot shows the preferred location

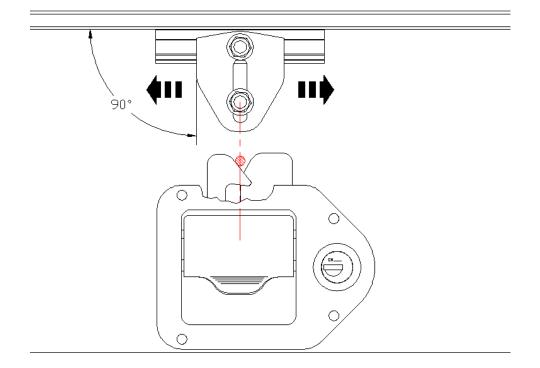

- 2) When the striker pin is correctly centered, tighten to top bolt to set the location.
- 3) Set the pin depth to ensure that the head will clear the latch.

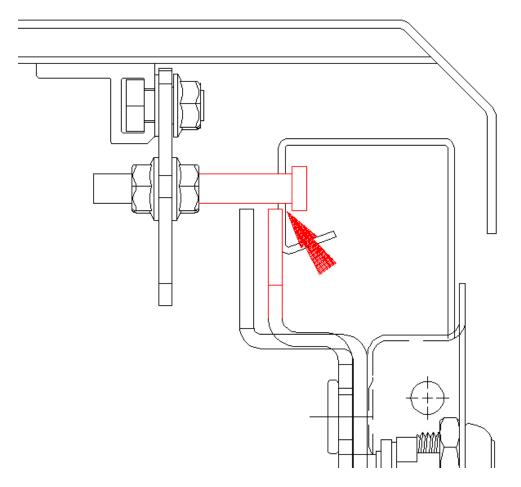

4) Tighten the pin in the lowest location, and close the lid. If the lid is able to move up and down when latched, the latch pin needs adjusted. Adjust the pin up the approximate amount the lid is able to move and retighten.

