

Dual 12" 160 watt Fan Assembly Instructions


- 1. Do not remove label from underside of shroud as this will void the products limited warranty.
- 2. We do not recommend the use of nylon tie kits or any other "through core" mounting methods for this fan assembly. The 160 watt motors used in this dual fan assembly are too heavy and produce too much starting torque to be supported by the radiator fins. We recommend purchasing a prefabricated mounting kit MARADYNE® MFA107 or fashioning metal brackets that will attach to at least four of the six ¼ 20 nylon reinforced nuts pressed in the back of the shroud and then bolted to the U-channels of the radiator/heat exchanger (See Fig 1.). 1" X ¼-20 bolts are recommended to attach the brackets to the shroud. Bolts must NOT be long enough to contact the radiator/heat exchanger. See Fig 2 for bolt pattern.
- 3. The fans contained in this assembly are assembled in puller configuration from the factory. While these fans can be reversed to be pusher fans, We do not recommend using this assembly as pusher fans on the front side of the radiator due to the large amount of ram air that is blocked by the shroud. Fans used as pushers should only be used as a last resort when there are no other options for mounting. See Fig 3.
- 4. We recommend the use of a thermostatic fan relay harness with at least a 25 Amp relay and fuse for each fan in the assembly. Recommended wire harnesses:


 MARADYNE® MFA111 Dual fan adapter along with one of these, MARADYNE® MFA100 (Adjustabale temperature switch), MARADYNE® MFA102 (185° temperature switch for carbureted engines) or MARADYNE® MFA103

 (195° temperature switch for fuel injected engines). Recommended wire gauge is

SPECIFICATIONS		
MOTOR (2)	160 watt HEAVY DUTY	
AIR FLOW @ 0" STATIC	2,600 CFM	
SIZE	26" w x 15" h	
DEPTH	3.62"	
AMP DRAW	24.8 (12.4 per fan)	

14 AWG.

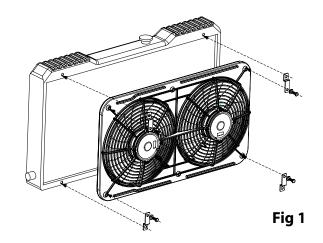

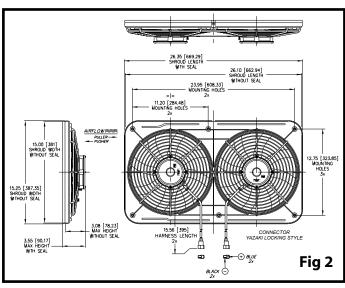

BLADE REVERSING INSTRUCTIONS FANS SHIP IN PULLER CONFIGURATION

STEP 2:	
WITH ANOTHER PERSON, CAREFULLY PULL THE BLADE OFF THE MOTOR SHAFT, WE RECOMMEND ONE PERSON HOLD THE BLADE OF THE MOTOR SHAFT, WE RECOMMEND ONE PERSON HOLD THE BLADE OF THE WORLD THE BLADE OF THE WORLD THE BLADE OF THE WORLD TH	STEP 3: REPLACE CLIP BY PUSHING CLIP INTO GROOVE ON MOTOR SHAFT. ENSINE SAFTY CATOR SHAPS OVER THE MOTOR SHAFT, PUSHER CONFIGURATION SHOULD LOOK AS SHOWN.
PILL BLAE. HEASSMALE	PUSHER MRING: BLACK (+) POS BLUE (-) NEG
TO MOTOR.	Ein 2