

JumpBoost™ V6



User's Manual



CHARGE UNIT FOR 48 HOURS BEFORE FIRST USE.

We are constantly improving our products so specifications are subject to change without notice.

CONTENTS

Important Information 5

General Warnings..... 5

Storage..... 5

Proper Disposal..... 5

Product Features 6

Specifications 6

Front View 7

Rear View 8

Battery Status 9

Charging the JumpBoost..... 9

 AC Charging 9

 DC Charging in Your Vehicle or Boat 9

Jump Starter 10

 Warnings 10

 Procedure 10

DC Output Socket..... 12

USB Power Port 12

Worklight..... 12

User's Manual—Read before using this equipment

Thank you for purchasing the JumpBoost™ V6 by Wagan Tech®. With normal care and proper treatment, it will provide years of reliable service.

IMPORTANT INFORMATION

- Please read and understand all warnings, cautions, and notes included in this manual before using the JumpBoost™ V6. Follow instructions provided by your vehicle manufacturer and other devices intended to be used with this unit. Keep these instructions for future reference.
- Make sure the JumpBoost is fully charged before first use. We recommend 48 hours for initial charge.

GENERAL WARNINGS

- This appliance is NOT intended for use by persons with reduced physical, sensory, or mental capabilities.
- Children or persons lacking in experience and knowledge also should NOT operate this appliance unless he/she has been given supervision or instruction concerning the proper usage and warnings of the appliance by a person responsible for their safety.
- For proper and safe operation of any accessory outlet, do not place anything in it except the plug of the accessory to be used.
- Use only the chargers, cables, and clamps provided. Unauthorized parts may damage the unit.
- This product has no consumer serviceable parts. Do not attempt to open the unit's enclosure, doing so will void the warranty.

STORAGE

This unit may be stored in any position. Make sure the clamps are securely tucked away in their original positions. Store in a cool, dry area. If the unit is not used for a prolonged period of time, recharge every 3 months.

PROPER DISPOSAL

- Appliance, accessories, and packaging should be recycled in an environmentally friendly manner. Plastic parts are coded for purposes of separation when recycling.
- Accumulators and battery-powered electrical appliances contain materials which are harmful to the environment. Do not dispose of batteries and/or electric/electronic appliances in normal household refuse. When the battery has reached the end of its lifetime, please take the entire unit to a battery recycling facility.


PRODUCT FEATURES

- Powerful jump starter with heavy-duty cables and clamps.
- LED indicator for checking battery status.
- DC accessory outlet for powering DC appliances.
- USB power ports for charging mobile devices.
- Long-lasting LED work light.
- AC/DC recharging adapter & DC recharging cable (fused) included.


SPECIFICATIONS

| | |
|---|---------------------------------|
| Battery | AGM Sealed lead acid, 12V, 7 Ah |
| Peak Amps | 600A |
| Starting Amps | 200A |
| Jumper Cables | 5 AWG, 24-inch |
| DC Socket | 12V, 11A max, 132W |
| USB Power Port (x2) | 5V, 2.4A (shared) |
| Work Light | 4 LEDs |
| Charging Time (AC) | 14 hours |
| Charging Time (DC—with engine running) | 12 hours |
| Dimensions (inches) | 9.8 × 5.8 × 11.3 |
| AC Charging Adapter Output | 15V, 500mA DC |

FRONT VIEW

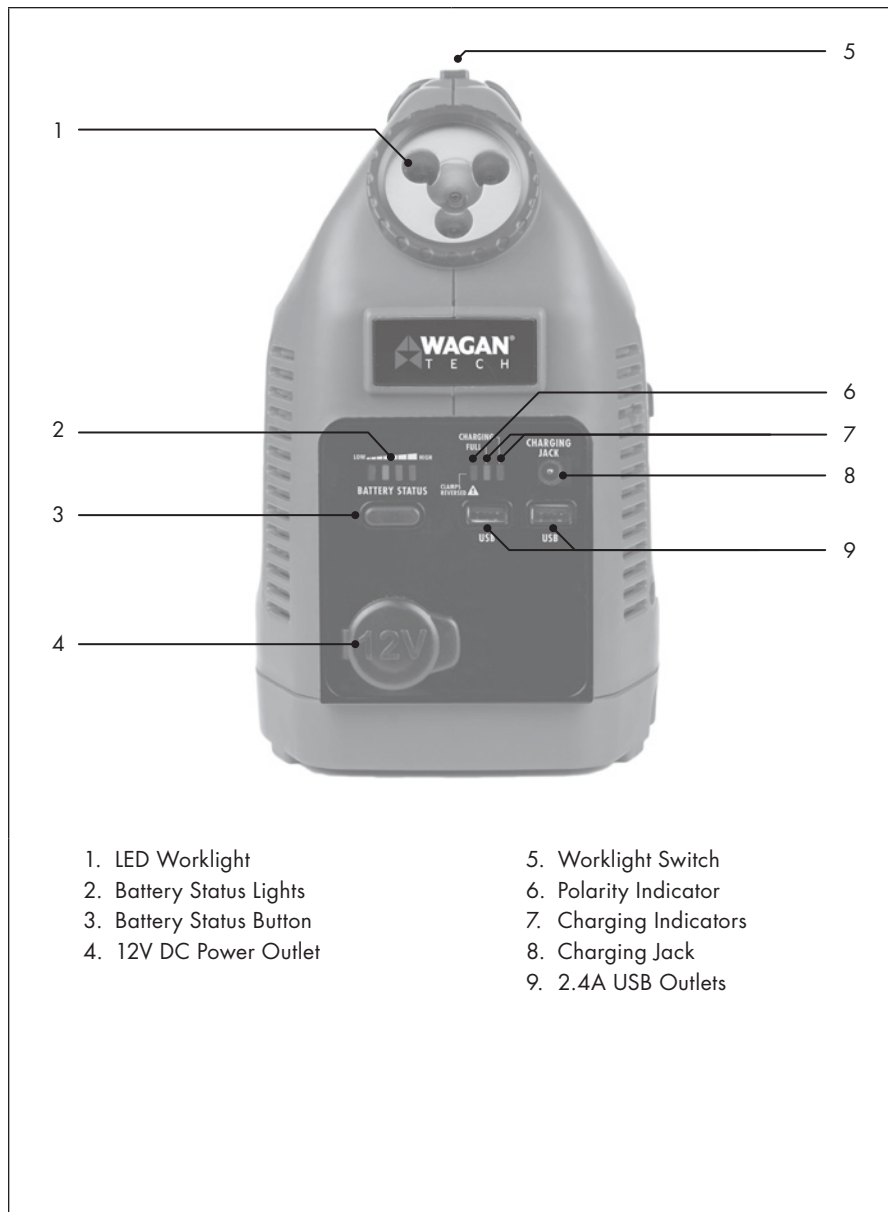

REAR VIEW

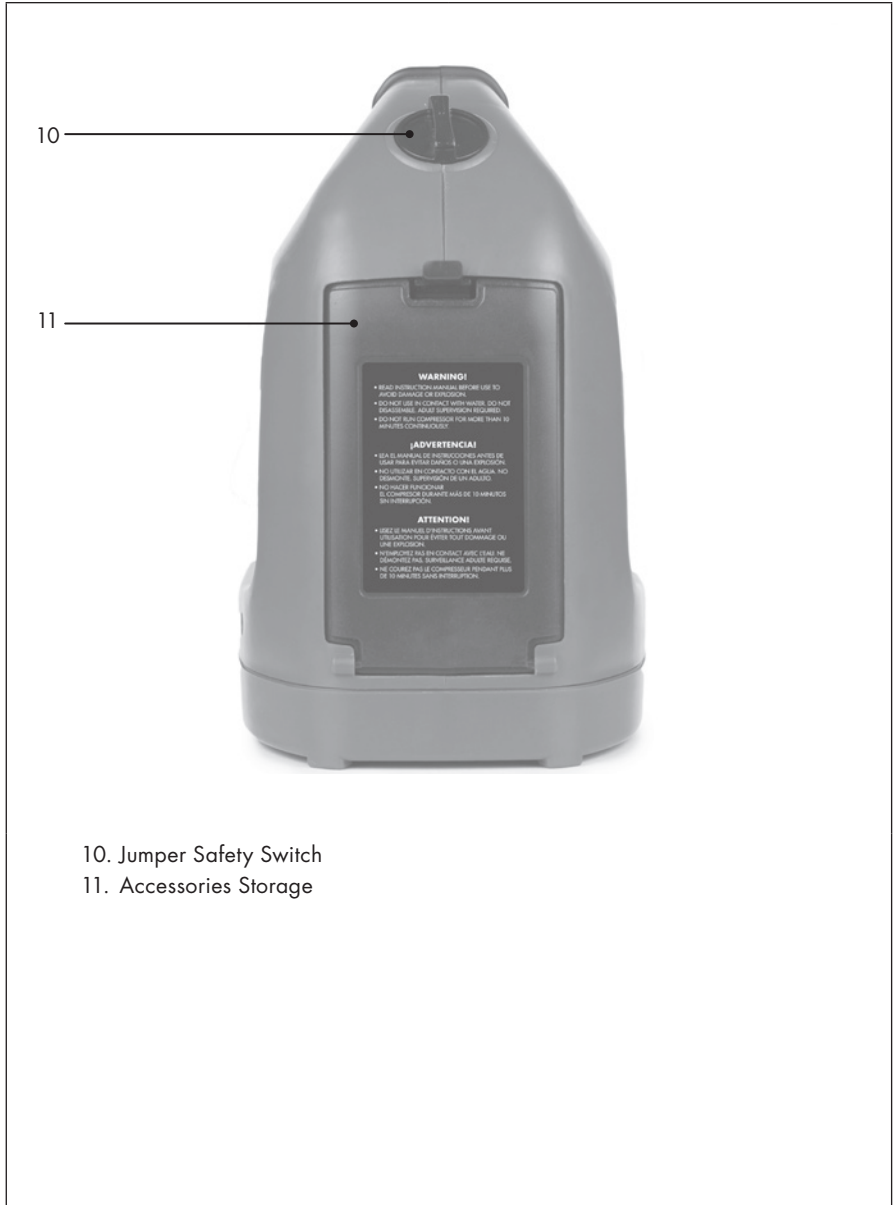

10. Jumper Safety Switch

11. Accessories Storage

BATTERY STATUS

The color LED indicators on the front of the unit provide the current state of charge on the internal battery. It is the user's responsibility to periodically monitor the battery's status and recharge every 3 months in addition to recharging after each use.

1. Disconnect any input or output power cords and turn off all switches.
2. Press and hold the Battery Status button.
3. Observe the color LED indicators to determine battery status.
 - Red (only): Battery is discharged. Charge immediately.
 - Red and Yellow: Battery should be charged before jumpstarting a vehicle
 - Red-Yellow-Green: Partially discharged; recharge when practical.
 - Red-Yellow-Green-Green: Battery is fully charged when all lights are lit

CHARGING THE JUMPBOOST



ELECTRICAL SHOCK! Exposure to water may cause electrical shock. Exposure to water and excessive moisture will also damage the unit and void the warranty.

Charge your JumpBoost in an upright position for a full 48 hours before initial use. Continue to maintain the life of your JumpBoost (as with all lead-acid batteries) by fully recharging the unit every 3 months even if the JumpBoost has not been used.

AC Charging

Only use the AC charging adapter supplied with this unit. Make sure the supplied AC/DC charging adapter is to be powered by the correct voltage (110V AC or 220V AC depending on your country/region).

1. Make sure all JumpBoost switches are off.
2. Plug the DC end of the AC/DC charging adapter into the JumpBoost's charging jack.
3. Connect the AC end of the AC/DC charging adapter to the wall outlet.
4. The Charging Indicator will light up during the charging process. The JumpBoost can be charged continuously via AC adapter without damaging the internal battery.
5. When charging is complete, the Full indicator will illuminate. Disconnect the adapter from the AC outlet first, then from the charging jack.
6. Press the Battery Status Button and observe the Battery Status Indicators for the state of charge on the unit's internal battery.

DC Charging in Your Vehicle or Boat

Only use the DC charging adapter supplied with this unit. Your vehicle **engine must be running** while charging the Battery Jumper. **Do NOT exceed 12 hours** of continuous charging time.

1. Make sure all Battery Jumper switches are off.
2. Plug the small end of the DC power cord into the JumpBoost's charging jack.

3. Plug the large end of the DC power cord into an accessory (cigarette lighter) socket.
4. The Charging Indicator will light up red during the charging process. **Do NOT charge for more than 12 hours at one time.**
5. When charging is complete, the green Full indicator will illuminate. Disconnect the power cord from the accessory socket first, then from the unit's charging jack.
6. Press the Battery Status Button and observe the Battery Status Indicators for the state of charge on the unit's internal battery.

JUMP STARTER

Warnings

- Lead-acid batteries can release explosive gasses. Failure to follow instructions may cause property damage, explosion hazard, and/or personal injury.
- Do not smoke while jump starting.
- Jump start a vehicle or boat in a well ventilated area.
- Do not attempt to jump start a frozen battery.
- This product is not intended for use in the rain or temperatures above 113°F.
- Do not let the jumper cables or other attached appliances get wet.
- Do not wear vinyl clothing when jump starting—friction can cause static electricity sparks.
- Remove all metal jewelry to avoid short circuits.
- Always use safety glasses when jump starting battery. Keep battery terminals clean and be careful to keep corrosion from coming in contact with eyes—acid can cause blindness and/or severe burns.
- Never allow red and black clamps to touch or connect to the same piece of metal—this can cause short-circuits, power arcing, and/or explosion.
- Make sure someone is available to give assistance if needed.
- Keep out of reach of children.

Procedure

CAUTION: If the engine fails to start after three attempts, discontinue jump start procedure. Excessive engine cranking can damage the vehicle's starter motor. Look for other problems that may need to be corrected or call for professional service.

1. Review the jump starter warnings.
2. Put the vehicle's gear in "park" position and make sure the brake is set.
3. Turn off the vehicle ignition and accessories (e.g. radios, lights, air conditioners), and disconnect all devices such as GPS and mobile phones or tablets.
4. Turn off all JumpBoost switches and disconnect all accessories.

User's Manual—Read before using this equipment

5. Determine the polarity of the vehicle's battery terminals. The positive (POS, P, +) battery terminal is usually larger in diameter than the negative (NEG, N, -) terminal. If you are unsure, you should refer to the vehicle owner's manual.
6. Determine the ground system of your vehicle.
 - If vehicle to be started has a negative ground system (this is most common):
 - a. Connect the red (+) cable clamp first to the vehicle's positive (red) battery terminal.
 - b. Next, connect the black (-) clamp to the vehicle chassis or a solid, non-moving, metal vehicle component or body part. **DO NOT** clamp directly to negative battery terminal or a moving part.
 - If vehicle to be started has the positive battery terminal connected to chassis (this is rare and usually found in older car models from the 1950s or earlier):
 - a. Connect the black (-) clamp first to vehicle battery's negative (black) terminal.
 - b. Connect red (+) clamp to vehicle chassis or a solid, non-moving, metal vehicle component or body part. **DO NOT** clamp directly to positive battery terminal or a moving part.
7. Observe the color of the Reverse Polarity Protection Indicator to see if the clamps are properly connected.
 - If the light is RED and the unit is beeping, **DO NOT TURN ON THE JUMPER SAFETY SWITCH!**
 - a. Cable clamps need to be reversed.
 - b. Disconnect the black clamp first then the red clamp.
 - c. Reconnect and observe the indicator again.
 - If the light is not illuminated and there is no beeping, turn on the Jumper Safety Switch.
 - a. Inside the vehicle, turn on the ignition switch and attempt to start the engine.
 - b. Crank a maximum of 3 seconds. If the engine does not start, wait 3 minutes before the next attempt.
 - c. After the engine starts, turn off the Jumper Safety Switch.
 - d. Disconnect the clamps in the reverse order of connection prior to jumpstarting. Be sure that the cables and clamps are securely stored.
8. Recharge the JumpBoost as soon as convenient.

DC OUTPUT SOCKET

The DC accessory socket can power a DC load up to 11 Amps. Overloading the socket will result in tripping a self-resetting circuit breaker. Removing the overload automatically restores power to the DC socket. For proper and safe operation of the 12 Volt DC power accessory outlet, do not place anything into it except the 12V DC plug of the accessory to be used.

1. Check the required current draw of the appliance/device to be powered and make sure it does not exceed the JumpBoost's maximum wattage.
2. Open the dust cover from the DC socket.
3. Insert the 12V DC accessory plug into the socket.
4. Operate the appliance as usual.
5. After use, disconnect the accessory plug from the DC socket.
6. Replace the dust cover.
7. Recharge the JumpBoost as soon as convenient.

USB POWER PORT

1. Connect a user-supplied USB cable to either of the USB power ports on the JumpBoost.
2. When charge is complete, disconnect the USB cable from the JumpBoost.
3. Recharge the JumpBoost as soon as convenient.

WORKLIGHT

1. Press the light switch on the top of the unit to turn the light on or off.