

YAKIMA FatCat Evo 4 & 6

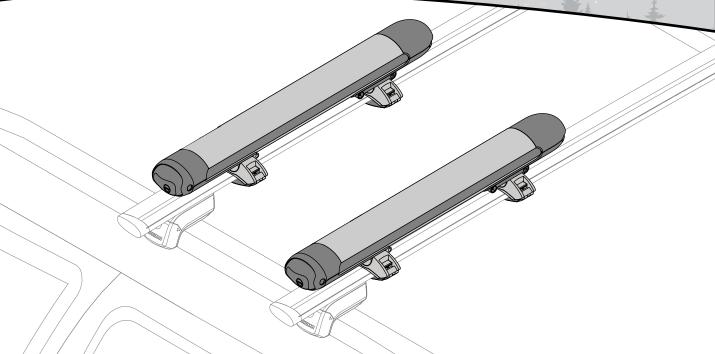

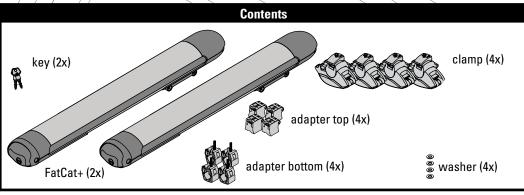





Crossbar spread

Skis and boards under 67": 12" - 24"

Skis and boards over 67": 12" - 36"

The distance between supporting bars should be adjusted so that when the bindings strike the ski rack, the skis cannot slip out on the other ski rack.

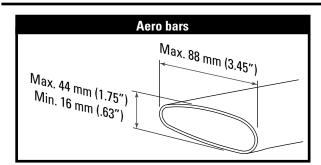


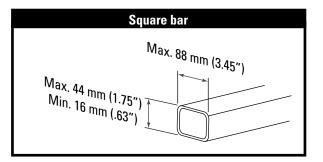

INSTALLATION



For round/square bar installation go to page 5.

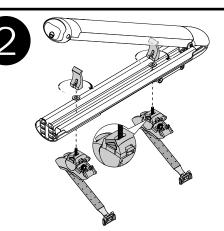


Press the button to open the FatCat Evo.
Loosely attach the clamps by partially threading the knobs on. Keep them in the vertical position.
Be sure to include the washers.




Remove the knobs from the clamps.




Optional FatCat Evo 6 ONLY: If the usable space on your crossbar is 24" or less, or you want to bias the mount toward one side of your vehicle, use mounting position B.

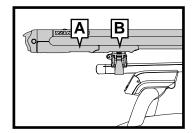


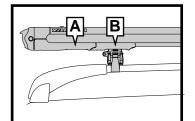


4X

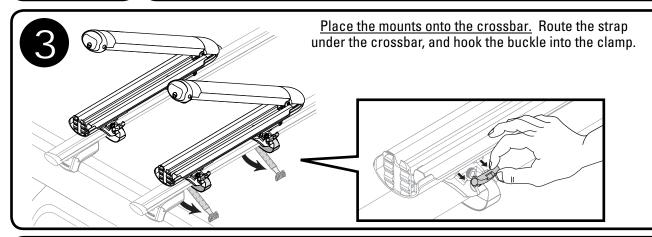



2X

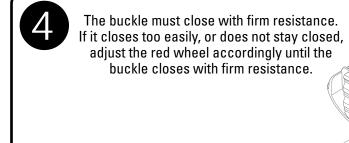


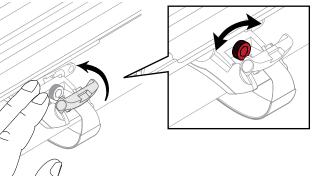

4X

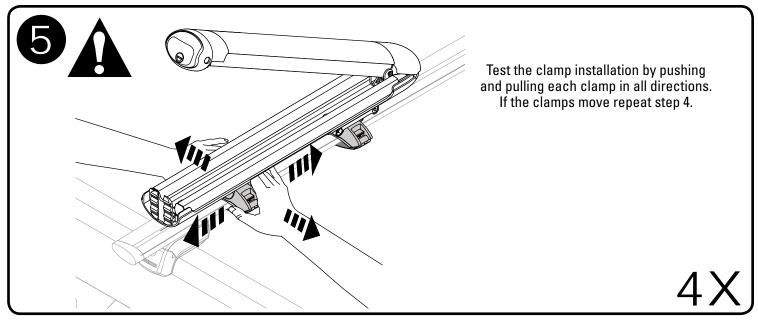


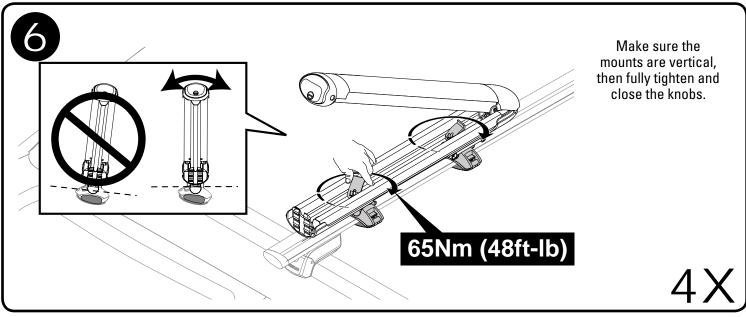

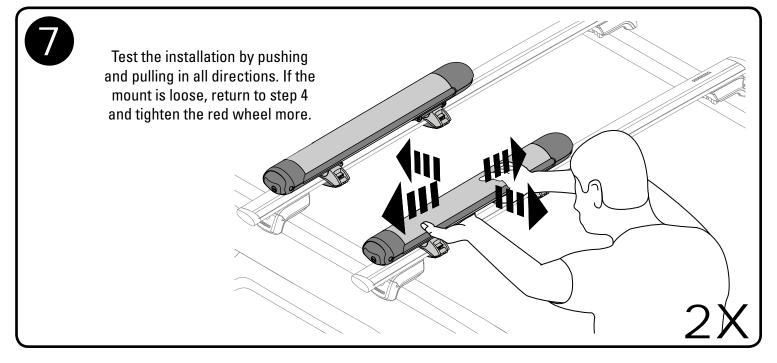



Press the buttons and open the mounts. Load your skis keeping the tips toward the rear of the vehicle. Load bindings between the mounts. Close mounts with firm pressure.

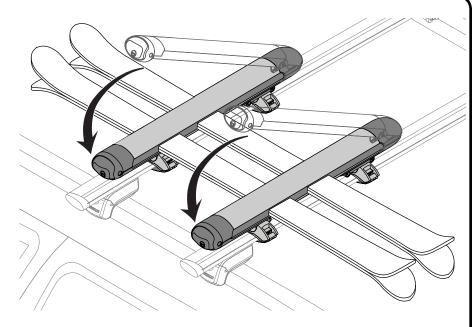


Note: In some cases you may need to close the mount between your bindings. Position them fore/ aft to best avoid hatch contact.




If your bindings contact the vehicle use the SkiLift feature. Go to page 5, or page 7 for round or square bars.


2X


2

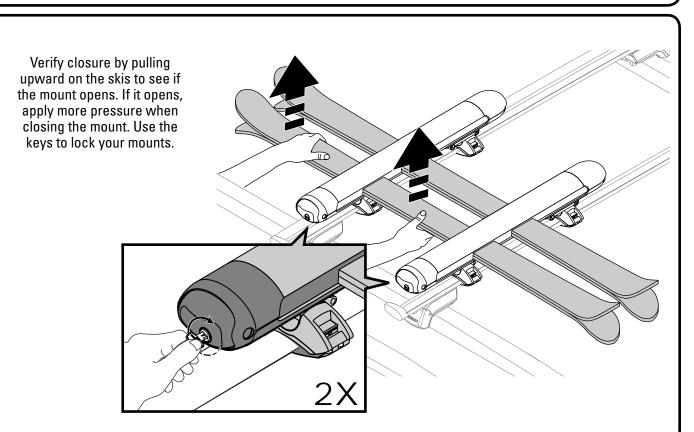



ROUND/SQUARE BAR

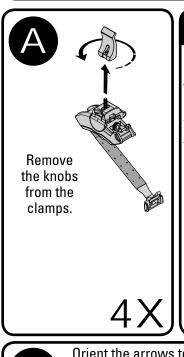


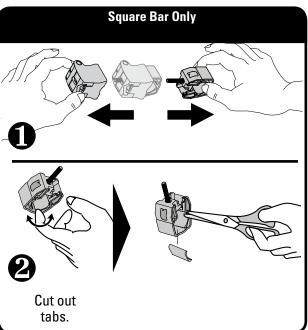


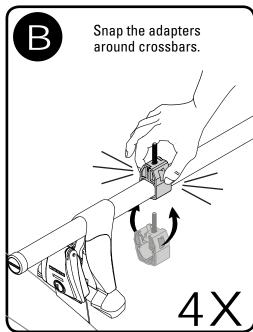

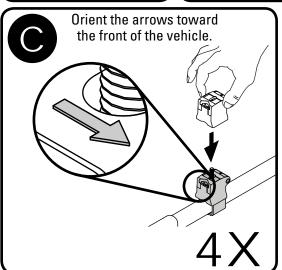

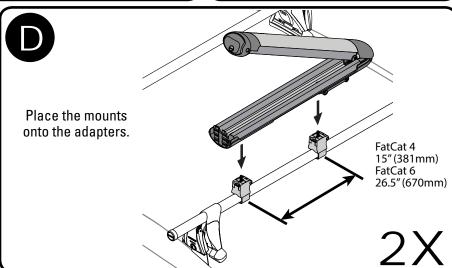

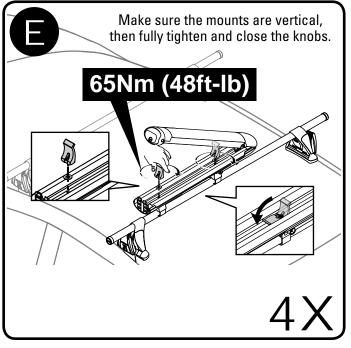


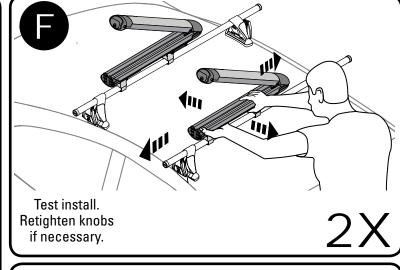






Got to page 4 for loading instructions.


SKI LIFT

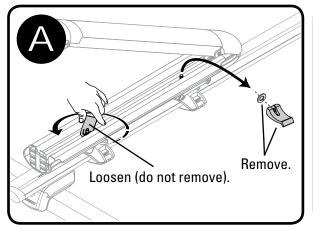


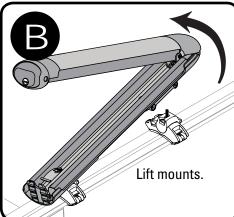


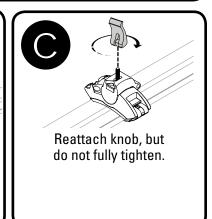

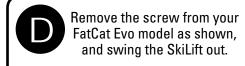


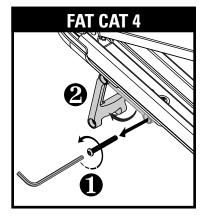

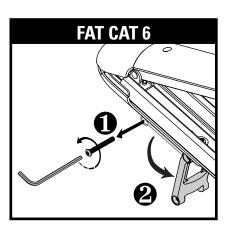


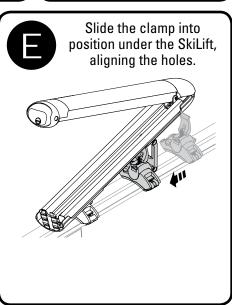



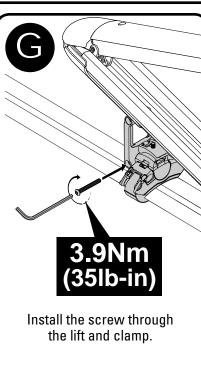




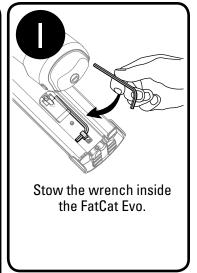



Tighten and close the other knob.


Got to page 4 for loading instructions.


ROUND/SQUARE SKI LIFT

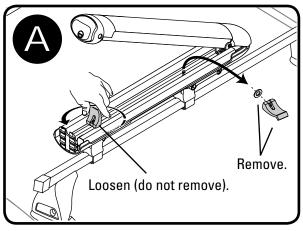


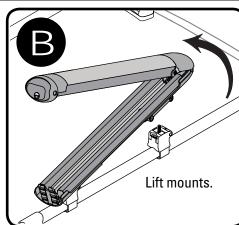


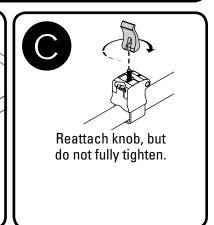


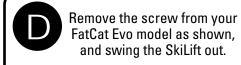


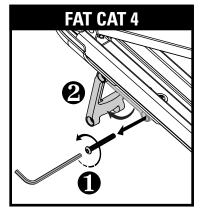

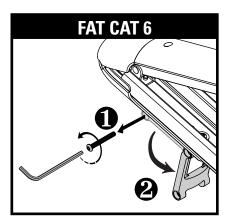


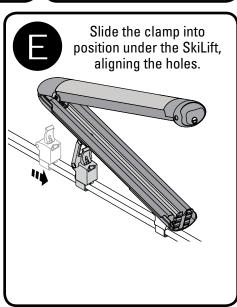


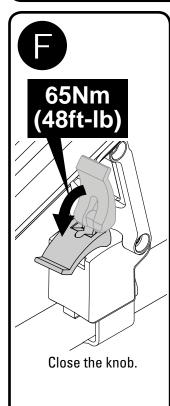

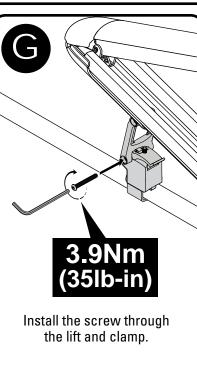



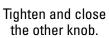

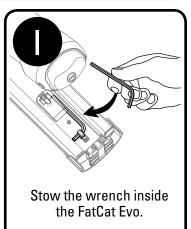




UNLOADING


- 1. Unlock the mounts.
- 2. Press the button to open the mounts.
- 3. Carefully remove your skis or boards.
- 4. Close and lock the mounts.

REMOVAL

- 1. Open and loosen knobs (do not remove them).
- 2. Unhook the buckle, and release the strap.
- 3. Carefully lift the mounts from your vehicle.

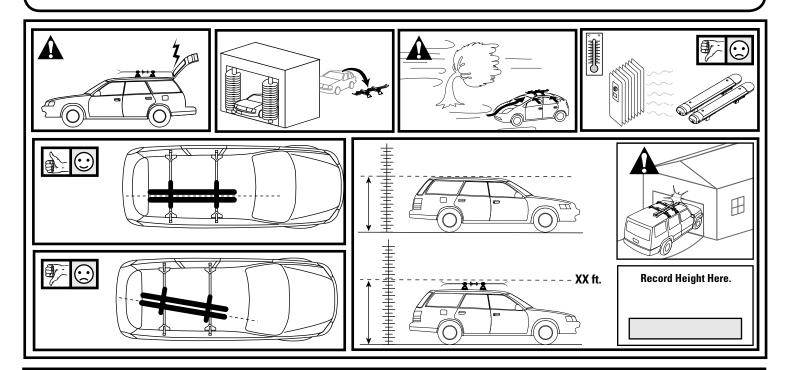



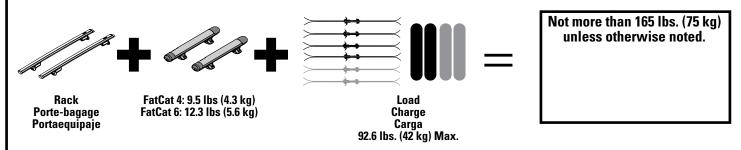

Check the Yakima Fitlist, or go to fitlookup. yakima.com for your roof's weight limit.