

LoadWarrior Extension YAKIMA

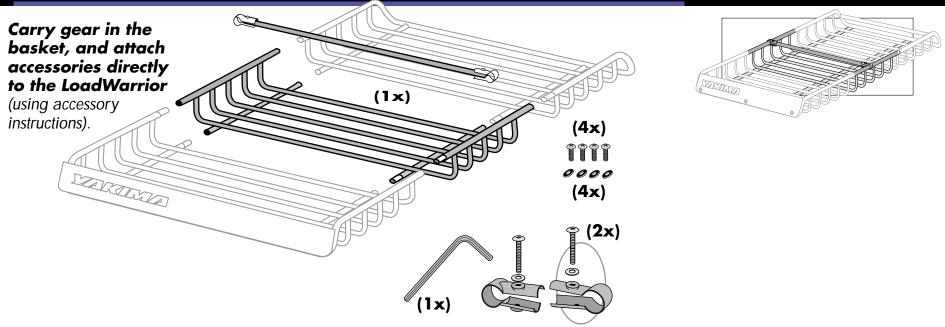





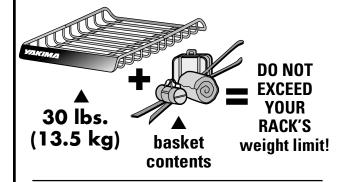


DO NOT EXCEED
BASKET CONTENT WEIGHT LIMIT:
140 LBS. (63 KG)



- Remove it from your car.
- Disassemble the brackets and set them aside.
- Separate the two basket halves by removing the screws at the joints.





NOTE: Always replace machine screws (from Extension) into same holes when reassembling.



You may find tapered screws with your LoadWarrior.

MACHINE **SCREWS**



TAPERED **SCREWS**

DO NOT insert the tapered screws from LoadWarrior into your Extension's holes.







• IF YOU HAVE FIXED BARS:



IF YOU HAVE "Q TOWERS"

OR BARS THAT CANNOT MOVE...

Continue to STEP 6.





Q TOWER OWNERS: NEVER REPOSITION THE Q TOWERS!


• IF YOUR BARS MOVE:


IF YOU HAVE BARS THAT CAN BE MOVED... Move the bars apart to a range of 30" to 50".





TIGHTEN YOUR CROSSBARS IF YOU LOOSENED THEM.




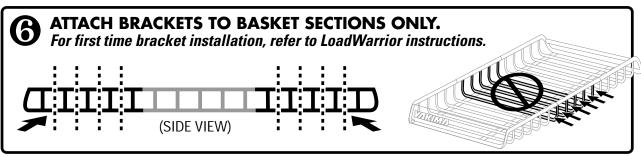


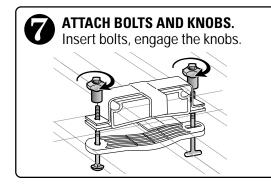


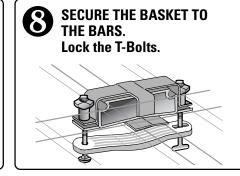


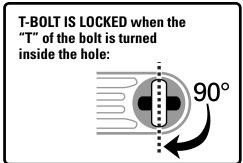


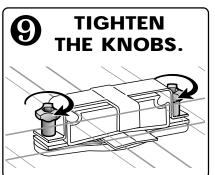

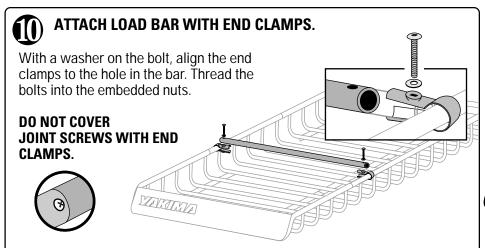


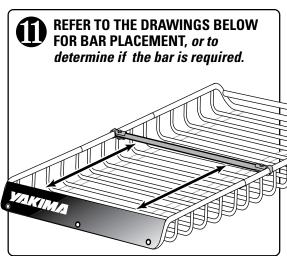


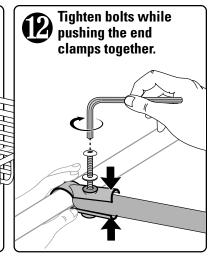

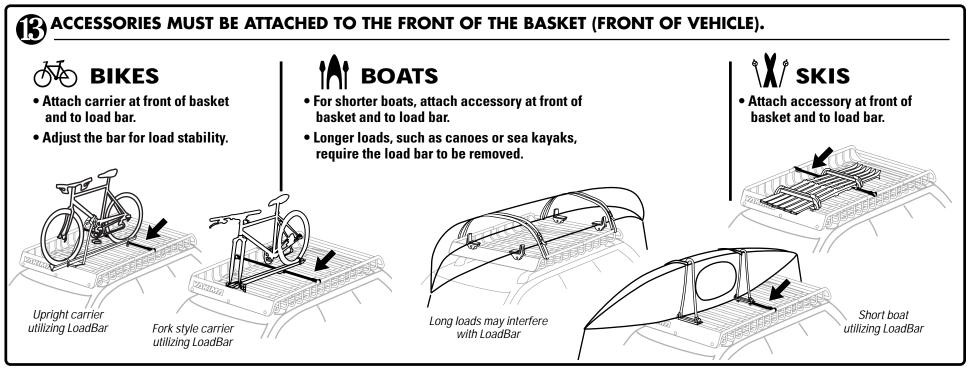





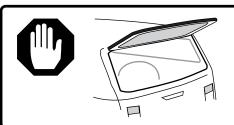

USE CAUTION WHEN OPENING YOUR HATCH.

On some vehicles, hatch interference is unavoidable.