



## AMERICAN CAR CRAFT INSTRUCTIONS

### C5 Corvette Stock Exhaust Filler Panel Perforated

#### Part #032005



#### **PART INCLUDED:**

1-Stainless Panel

2-1/2" #8 Self Tapping Screws

**NOTE:** Your new exhaust port filler panel is designed to fit over the exhaust and is sandwiched between the exhaust pipes and the urethane bumper. (See pics. 2&3) Your new panel comes to you with a protective liner. Do not remove until your installation is complete!

1. Your new panel comes to you flat – in order to achieve a nice snug fit it will be necessary to slightly curve the filler panels' left and right side. (See pic. 1).
2. Carefully place your filler panel over the exhaust pipes until it reaches the black fiberglass underbody between the pipes. With your forefinger, force the bottom section of the filler panel until the bent tab snaps under the car. (See pics. 2, 3, 4&5).


**PLEASE NOTE:** We have made a small change to these which will allow the panel to be more visible. To make the installation a bit easier, enlist the help of a second person to handle the sides while you push it in place in the center.

3. At this point the panel fits pretty snug. You will notice slight gaps at the right and left corners. Simply pull the panel to form its shape until it contours to the shape of the car. (See pics. 6, 7, 8&9).
4. Once you are satisfied with the shape line up your panel so that it sits in the center and your right and left corners line up with the urethane bumper. (See pic. 10).
5. You have been provided with two washer head self-tapping screws. Fasten your filler panel in position at the two mounting holes located at the underside of the panel. (See pics. 11&12).
6. Complete your installation by removing your protective liner. (See pic. 13).

**Thank you and enjoy your purchase!**



A

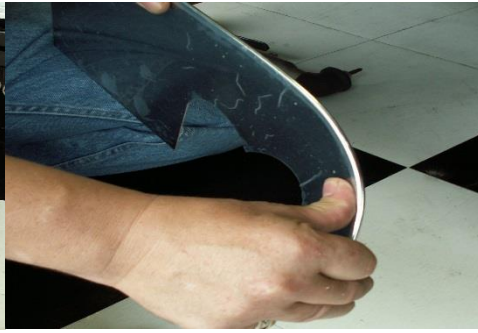

1



2




3



4



5

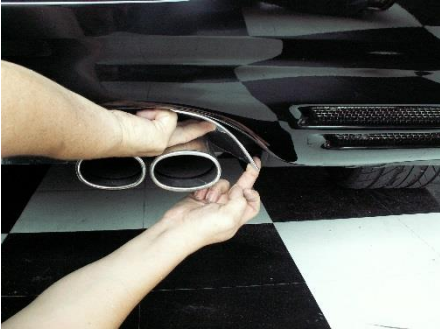

6



7



8



9



10



11



12



13