




AMERICAN CAR CRAFT INSTRUCTIONS

C5 Corvette Emblem Trim Ring 2pc

Part #032037

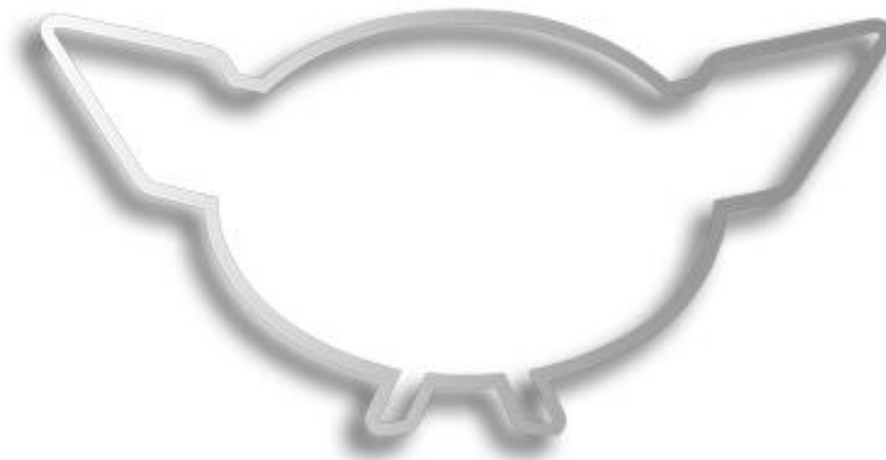

PARTS INCLUDED:

2-Stainless Emblem Bezels
1-Tube of Adhesive Promoter

1. Clean the area around each emblem with household rubbing alcohol to remove any wax and dirt then swipe the area once with the adhesive promoter tube provided.
2. Place each bezel into position to familiarize yourself with each placement before removing the liner. It WILL BE necessary to HAND FORM the bezels to CONFORM to the shape of the car doing this will prevent any possibility of the bezel popping loose or lifting long term.
3. Once they are fitted properly peel the release liner from the back of each bezel and carefully set them nice and evenly around each emblem. Press firmly to set.

DO NOT GET WET FOR 24 HOURS.

Thank you and enjoy your purchase!