




AMERICAN CAR CRAFT INSTRUCTIONS

C7 CORVETTE MASTER CYLINDER COVER POLISHED WITH RIBBED SLOTS

PART#053039 patent pending

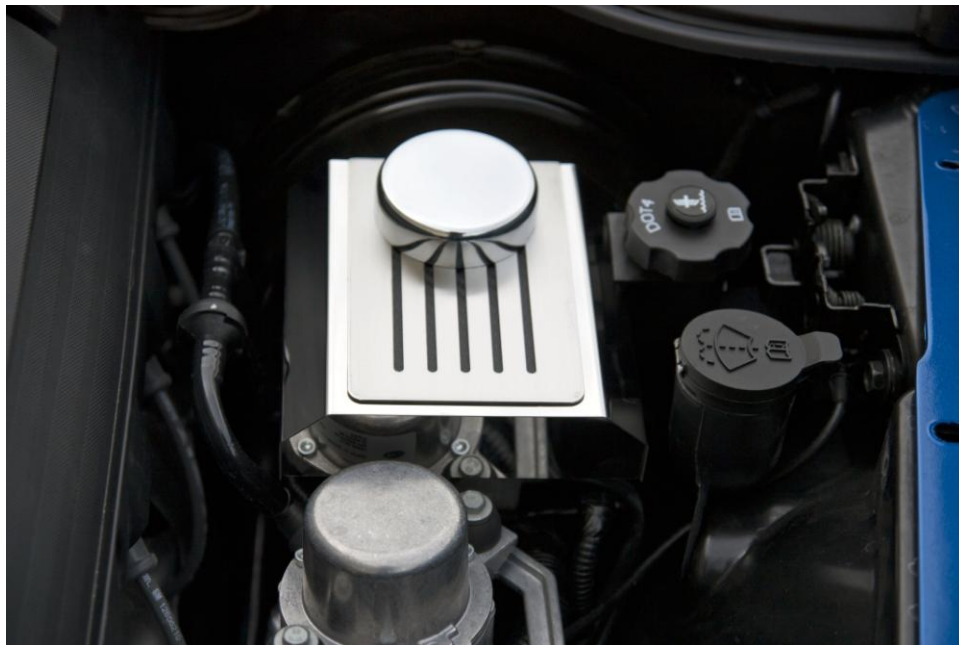

PARTS INCLUDED:

- ___1-Stainless Cylinder Cover w/Hook and Loop Fastener Attachment Cookie**
- ___1-Adhesive Promoter Packet**
- ___1- 3/4 Chrome Cap Cover w/Hook and Loop Fastener Attachment Cookie**

Your new accessory comes to you with a clear protective liner. This liner will help to keep your new parts clean during installation. You will be instructed when to remove the liner during the detailed installation.

THIS COOL LITTLE COVER IS A NICE WAY TO JUST ABOUT INSTANTLY TRANSFORM YOUR STOCK MASTER CYLINDER RESERVOIR INTO A CUSTOM ACCESSORY WHICH WILL LOOK GREAT IN ANY C5 or C6 CORVETTE.

1. Thoroughly clean the top surface of the reservoir and the fluid cap with household rubbing alcohol to remove any road grime and dirt. Then swipe the areas with the adhesive promoter provided. Remove the factory fluid cap.
2. You will notice that your new cover has a hook and loop fastener attachment cookie mounted to the underside of it. Remove the cookie half and install it directly to the prepared surface of the reservoir.
3. Place the new cover over the reservoir pressing down gently to set in position. Replace the factory fluid cap and remove the protective liner.
4. You have been provided with a chrome cap cover that also has a hook and loop fastener attachment cookie. Simply remove the cookie half and mount it to the factory fluid cap pressing firmly to set. Then press the chrome cap in place.

NOTE: Care must be taken when cleaning your cover. It is a good idea to lightly dust your cover with a clean soft cloth first in order to prevent any particles from scratching it. Then wipe (using a new clean soft cloth) with a good quality streak free glass cleaner. SEE ENCLOSED CARE SHEET!