




## AMERICAN CAR CRAFT INSTRUCTIONS

---

### 2011-2012 MUSTANG GT 5.0 POLISHED BCM COVER PART #273051

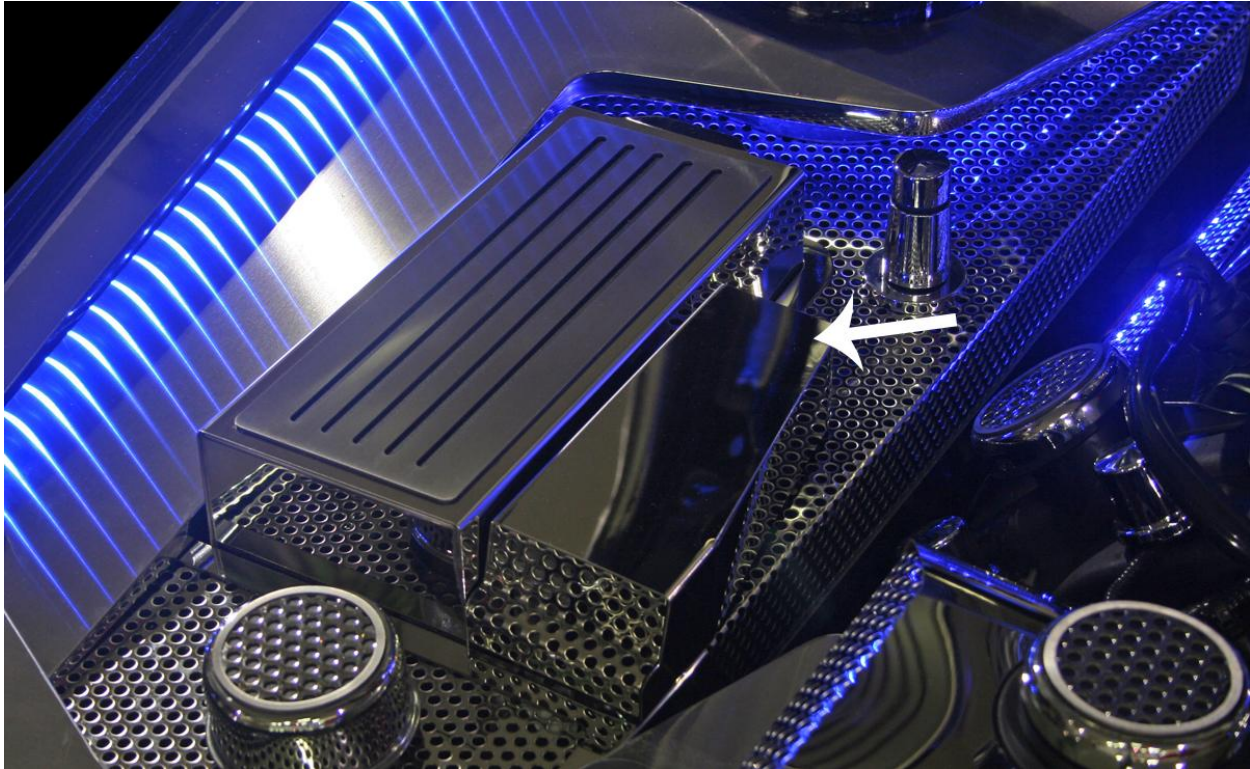

#### **Parts Included:**

- 1-Polished Stainless Cover
- 1-Self Stick Stainless Bracket w/Hook and Loop Fastener
- 1-Adhesive Promoter Pack

**Introduction:** This unique cover has been design to compliment the ACC 4pc Fender Covers and is very simple to install.

**Liner Information:** Your new accessories will come to you with a protective surface liner. Leave this liner in place until the installation is complete to prevent finger prints and or possible scratches during installation.

1. You have been provided with a self-stick stainless steel bracket that contains a hook and loop fastener strip. It is this hook and loop fastener strip that will allow you to remove and replace the BCM cover as needed. To install this bracket you must first set the new cover in place to get yourself acquainted with just how it is intended to sit in place. At this time you will notice that the BCM unit itself is attached to a relatively heavy bracket to

the left side of the unit. It is this bracket that you will install the additional bracket to which will secure the new BCM cover.

2. Thoroughly scrub clean the side of the BCM bracket to remove any and all road grime and or dirt. Then swipe that area with the adhesive promoter provided. This chemical is not a cleaner but an adhesive accelerator which will insure that the new BCM bracket will attach permanently and securely. Once you have prepped the area simply peel the red release liner from the back of the new bracket and then set it directly to the BCM bracket in such a way as to allow the new cover to attach to the hook and loop fastener so that it is level and secure.
3. Now that the new bracket has been properly installed simply remove the release liner from the hook and loop fastener half and then set the new stainless cover so that it makes contact with the hook and loop fastener half. Then remove the new cover so you can further set the hook and loop fastener by hand to insure a good and thorough bond. Now simply remove the protective liner and place the new cover back into position to finish the installation.

**Thank you for your purchase!**