




AMERICAN CAR CRAFT INSTRUCTION

C5 Corvette Stock Air Tube Cover

PART # 033043 patent pending

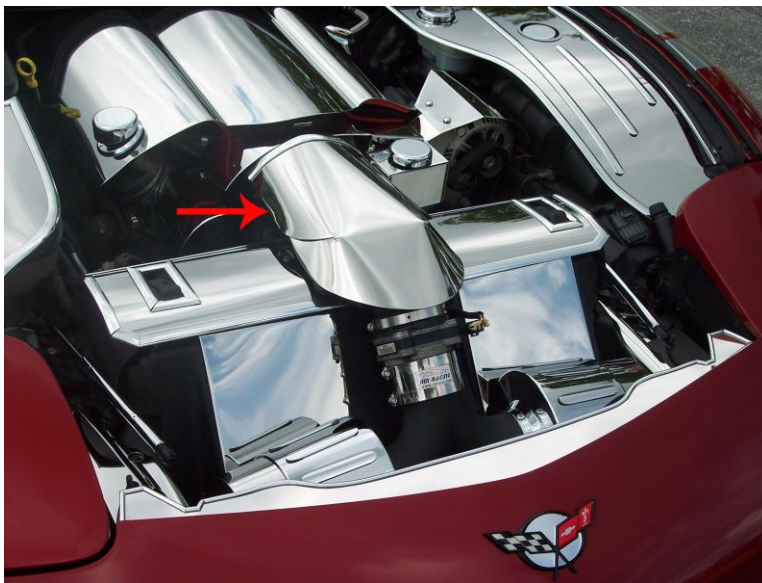

THIS COVER IS DESIGNED TO FIT THE STOCK FACTORY AIR TUBE.

PARTS INCLUDED:

- 2- Stainless Oval Head Screws
- 1-Stainless Factory Air Tube Cover

Your new stainless air tube cover comes to you with a clear protective liner. Do not remove until step 3.

1. Position your new cover over the factory air tube and make note of its position. It may be necessary to mold slightly by hand in order to achieve a nice proper looking fit. Once you are satisfied with the fit and position mark the two holes directly to the air tube with a silver marker or scratch awl.

2. Remove cover and poke a hole directly into the air tube with a scratch awl at the two points that you have just marked. NOTE: Poking a hole as apposed to drilling a hole will

not create any shavings that might fall into the mass flow sensor. The factory tube is made of ABS plastic and will allow you to poke the hole.

3. Reposition the air tube cover and screw it into position with the two stainless oval head screws (provided). Once the cover is secured remove the protective liner.

Note: Care must be taken when cleaning your cover. It is a good idea to lightly dust your cover with a clean soft cloth first in order to prevent any particles from scratching it. Then wipe (using a new clean soft cloth) with a good quality streak free glass cleaner

Thank you and enjoy your new purchase.

AMERICAN CAR CRAFT