




AMERICAN CAR CRAFT INSTRUCTIONS

C6 Corvette GM Licensed Rear Tag Frame Part #042110

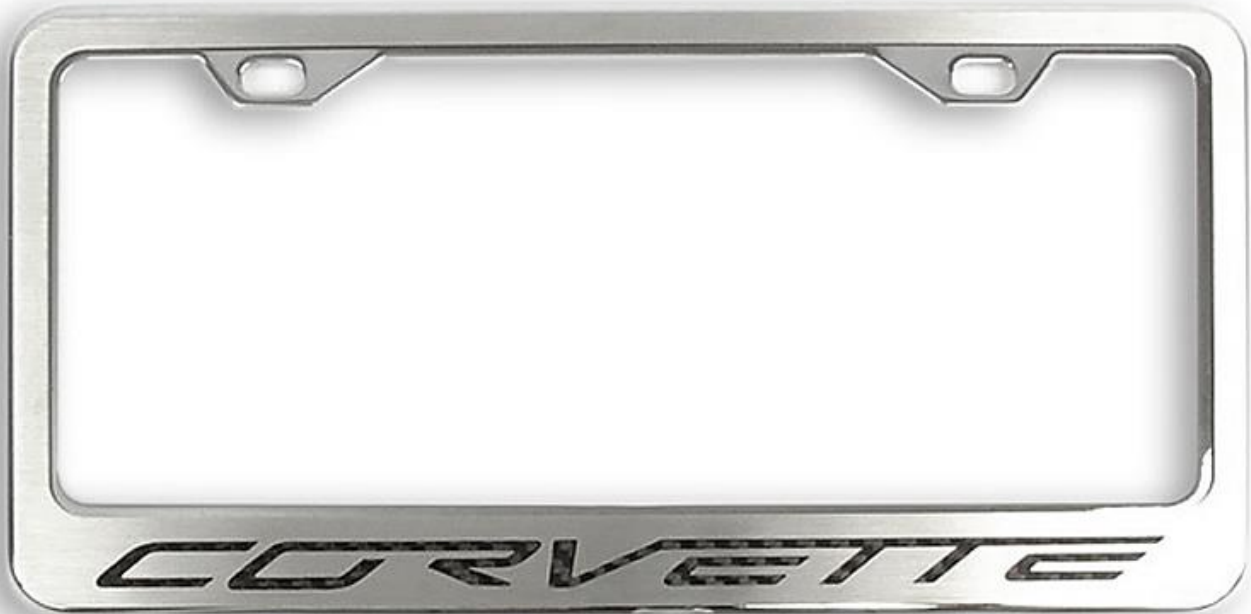

PARTS INCLUDED:

- 1-Chrome/Stainless/Carbon Fiber Tag Frame
- 2-M6-1.00x20mm Metric Hex Head Cap Screws
- 2-124NC 10mm Chrome Screw Covers

1. Remove screws from stock license frame.
2. Install new Tag Frame and install new hardware.
3. Snap Chrome Screw Covers over screw head.