




AMERICAN CAR CRAFT INSTRUCTIONS

C6 2006-2013 Z06 FUEL RAIL COVERS PERFORATED REPLACEMENT STYLE

PART #043087

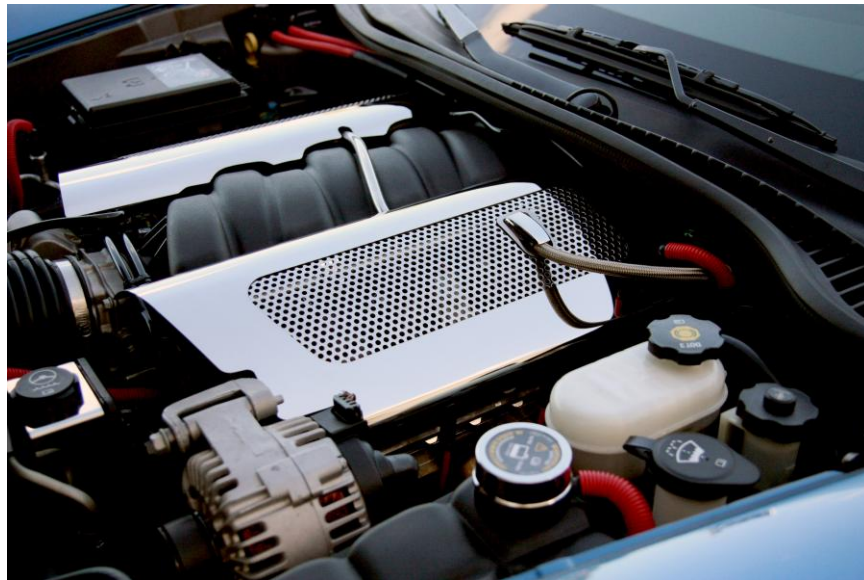

Parts Included:

- 2- Stainless Installation Brackets w/Hook and Loop Fastener attached
- 4- Clip nuts
- 4-3/4 washer head type screws
- 1-3/8" Vacuum Cap
- 1-Adhesive Promoter Packet
- 1-Decorative Chrome Cap w/ butyl attachment putty
- 2- Stainless Perforated Replacement Covers

Liner Information: Your new accessories will come to you with a protective surface liner. Leave this liner in place until the installation is complete to prevent finger prints and or possible scratches during installation.

1. Remove the two factory fuel rail covers and set aside.
2. Starting with the driver's side and remove the wire harness secured at the two tabs protruding from the factory fuel rail. You can do this by pulling up on the harness to release it at the two attachment points of the harness. Tuck the harness down and out of the way. You have been supplied with two identical installation brackets. These brackets come to you bent in such a way as to allow you to install them at the two holes locations you just exposed at the side of the fuel rail. You have been provided with four clip nuts two for the driver side and two for the passenger side. Now that you have exposed the holes in the fuel rail tabs slip the clip nuts over these two areas so the threaded half of the clip nut faces towards the engine. You have been provided with two stainless steel attachment brackets. The two brackets are slightly bent so that when you align the holes in the brackets with the holes in the fuel rail they will roll over the top of the fuel rail providing an attachment point for the new

fuel rail cover. After you have successfully formed the brackets simply install the new bracket with the two washer head type screws provided. After it's nice and tight tweak the shape of the bracket so that it sits nice and snug to the fuel rail.

3. Using a fuel line removal tool detach the fuel line and cap the fuel rail with the 3/8" vacuum cap provided. This will help to reduce the amount of fuel that will spill out of the fuel line. Soak up any fuel that may have pooled with a paper towel. (The fuel line removal tool is an inexpensive tool available at any auto parts store for just a buck and change.) You will also need to unclip the small stainless steel safety clip before you can detach the fuel line.
4. Your factory fuel rail covers contain two small rubber attachment sockets attached to the underside of each cover. With a little force remove these sockets and then install them on the new stainless covers.
5. Now that you have successfully installed the attachment brackets and rubber sockets remove the release liner from the hook and loop fastener strip attached to the brackets to expose the adhesive. Apply a single swipe of adhesive promoter to the underside of the new covers where this hook and loop fastener strip will make contact, allow a few seconds to dry. Set the new covers onto the attachment spindles provided for the factory covers and gently push down to snap the new cover on and then roll the top side of the new covers so that they make contact with the exposed adhesive on the attachment bracket and firmly press down. Once you have made that contact remove the cover so that you can set the hook and loop fastener strip with your fingers more efficiently. Then reinstall the new cover. At this time you will need to take a look at the overall fitment of the cover to determine if you need to shape the new cover by hand to make sure it is sitting in a good position and nice and snug to the engine. Although you should not have to make any extreme changes you will always need to tweak the shape a little to get just the right fit. A properly fitting cover will sit nice into the scalloped areas of the plenum and sit nice and snug to the engine. If the new cover seems to sit a little high or seems to have an excessive gap between the plenum and new cover this can be adjusted by removing the new cover once more and then force the attachment bracket downward and more tightly to the fuel rail. Then simply reinstall the new cover. Once you have achieved a nice close and snug fit you can now simply snap on the fuel line by removing the vacuum cap and then push the line in place until it snaps on securely. To make sure your line is in place properly pull the line with some force demonstrating that the line has been successful installed. A properly reinstalled fuel line will require the removal tool to allow you to detach it.
6. Now that you have successfully installed the new cover and fuel line you can apply the decorative fuel line cover. This small chrome piece will contain butyl putty already applied to the underside. Simply remove the release paper strip and then firmly press it into position. Remove the blue protective liner to finish the driver side fuel rail cover installation. The passenger side cover installs in exactly the same way less the fuel line. Simply follow the same procedure then remove the protective liner.

Thank You and Enjoy Your Purchase!

AMERICAN CAR CRAFT

When it comes to quality chrome trim and accessories, American Car Craft is the brand you can depend on.