




AMERICAN CAR CRAFT INSTRUCTIONS

Camaro True Flame Fuel Rail Covers Polished Part #103012

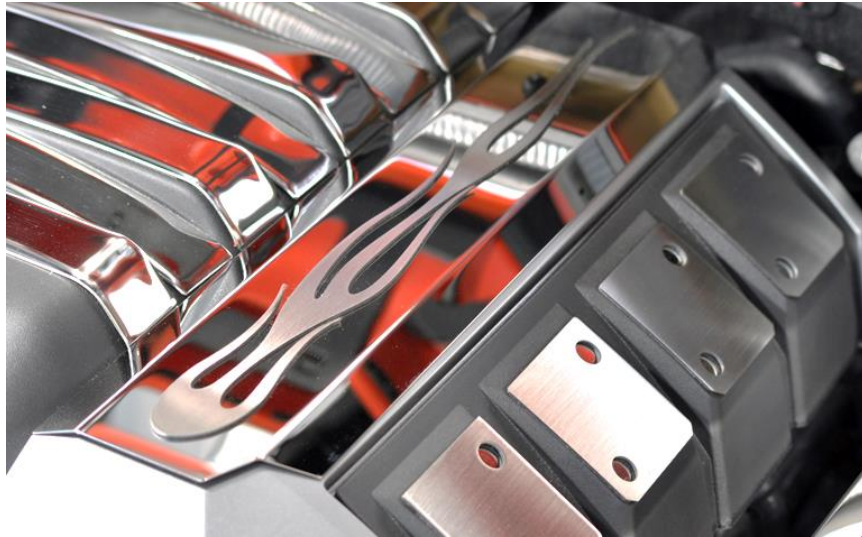

PARTS INCLUDED:

- 2-Stainless Fuel Rail Covers
- 1-Pack of Adhesive Promoter

Your new covers come with a protective liner; do not remove liner until installation is complete.

1. Thoroughly scrub clean the area to be mounted with alcohol to remove any and all road grime and wax. Then swipe the entire area with the adhesive promoter provided.
2. Before you permanently attach the new covers place each of them in position to check the overall fitment and make any subtle adjustments by hand until they sit just right.
3. Once you are satisfied with the fit simply peel the red release liner from the back of the new cover and then firmly press them in place. Remove the protective liner.

Thank you and enjoy your purchase!