


Camaro Stock Air Filter Box Cover

PART#103020 patent pending

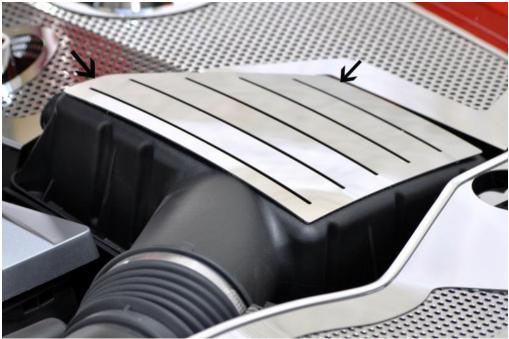

PARTS INCLUDED:

1-Stainless Factory Air Box Cover 1-Adhesive Promoter Pack

Your new cover comes with a protective liner; do not remove liner until installation is complete.

- 1. Thoroughly scrub clean the top surface of the factory air filter box with alcohol to remove any and all road grime and dirt. Then swipe the entire cleaned area with the adhesive promoter provided.
- 2. Before you permanently attach the new cover set it in place to get acquainted with its position and also to see where you may need to gently hand form the panel to contour to the shape of the factory cover. This contouring will be very mild and will be easy to achieve by gently shaping the panel by hand until it sits perfectly onto the factory air box without forcing any part of into lay flat.
- 3. Once the panel fits just right simply peel the red release liner from the back of the unit and then carefully and slowly set the panel into position and then press firmly to set. Remove the protective liner to finish the installation.

When it comes to quality chrome trim and accessories, American Car Craft is the brand you can depend on.