

AMERICAN CAR CRAFT

PONTIAC G8 STAINLESS FRONT HEADER PLATE INSTALLATION INSTRUCTIONS PART#G8HP300

PARTS INCLUDED:

1-Stainless Header Plate

2-Thick Washers

8-6mm Allen Style Button Head Bolts

8-Flat 1 " Decorative Chrome Cap Covers

Your header plate comes to you with a protective liner. Do not remove liner until prompted by instructions.

1. REMOVE THE FOUR BLACK PLASTIC RETAINERS FROM THE CENTER OF THE HEADER AREA

NOTE: THESE WILL NOT BE REUSED.

2. REMOVE THE FOUR HEADLIGHT BRACKET BOLTS SECURING THE TWO HEADLIGHT

NOTE: THESE WILL NOT BE REUSED.


PLACE THE TWO THICK WASHERS PROVIDED OVER THE TWO HOLES CLOSEST TO THE HOOD LATCH.

3. PLACE THE NEW STAINLESS COVER OVER THE HEADER AREA AND ALIGN ALL THE HOLES. ALTHOUGH IT SHOULD NOT BE NECESSARY YOU MAY NEED TO TWEAK THE OVERALL SHAPE OF THE NEW PANEL BY HAND IN ORDER TO ACHIEVE A NICE CONTOURED FITMENT.

4. SECURE THE NEW HEADER PLATE USING ALL EIGHT OF 6MM ALLEN STYLE BUTTON HEAD BOLTS PROVIDED. BE CAREFULL NOT TO OVERTIGHTEN THESE BOLTS AS THEY WILL HAVE A TENDANCY TO STRIP AT THE FOR CENTER HOLE LOCATIONS AND ALSO CAUSE AN UNSIGHTLY DISTORTION IN THE PANEL.

JUST SNUG WILL WORK FINE.

YOU HAVE BEEN PROVIDED WITH EIGHT FLAT DECORATIVE CROME CAPS .ONCE YOU HAVE THE HEADER PLATE NICE AND SECURED. REMOVE THE PROTECTIVE LINER AND THEN SILICONE THESE CAPS TO THE BOLT LOCATIONS USING CLEAR 100% SILICONE. BE CAREFULL NOT TO APPLY TO MUCH SILICONE AS THIS WILL HAVE A TENDANCY TO OOZE OUT AND MAKE A MESS. JUST A SMALL DAB WILL WORK FINE. ALLOW AT LEAST A COUPLE OF HOURS FOR THE SILICONE TO SET.

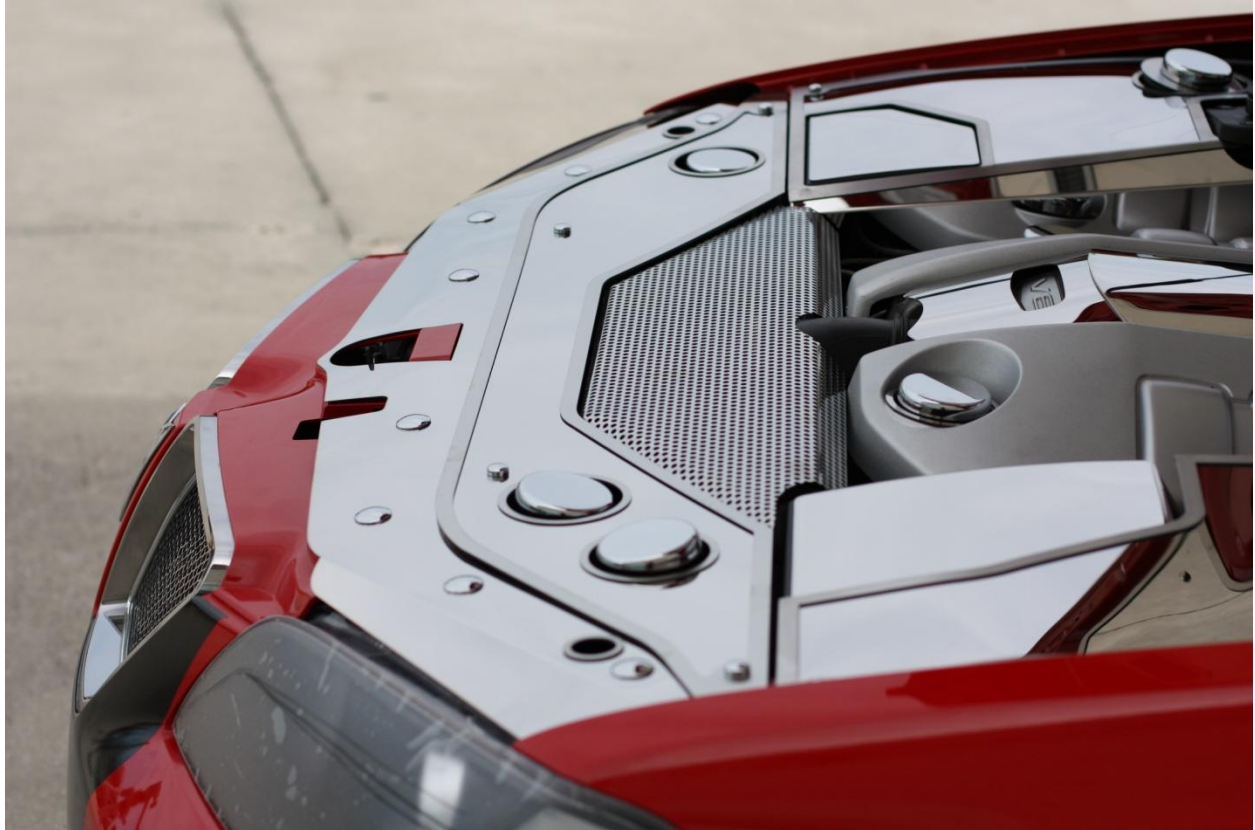

Thank you and enjoy your purchase!

CARE AND MAINTENANCE:

Note: Care must be taken when cleaning your header plate. It is a good idea to lightly dust your panel with a clean soft cloth first in order to prevent any particles from scratching it. Then wipe (using a new clean soft cloth) with a good quality streak free glass cleaner. SEE CARE SHEET!