




AMERICAN CAR CRAFT INSTRUCTIONS

2011-2012 Mustang Hood Panel "Vanity Plate"

PART #273037

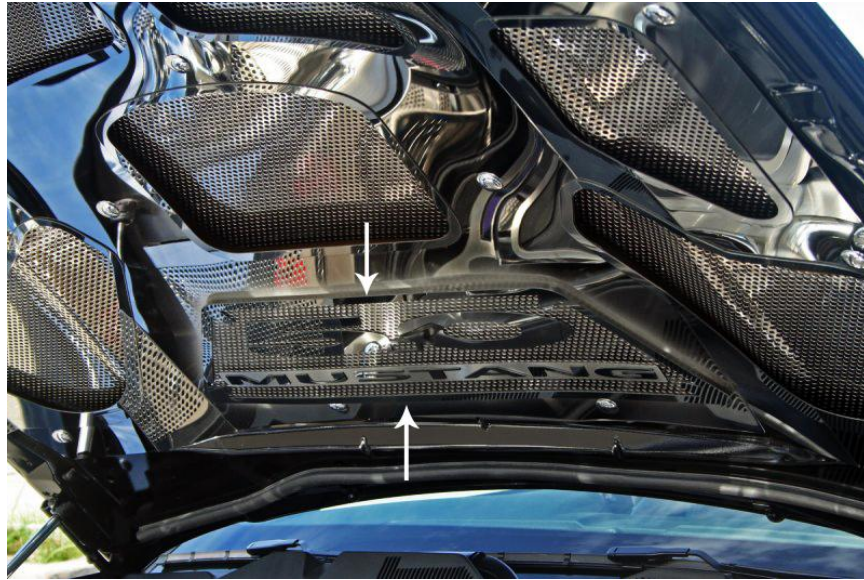

Parts Included:

6-Rivets

1-9/64" Drill Bit

NOTE: THIS PART ONLY MOUNTS TO AMERICAN CAR CRAFT CUSTOM STAINLESS STEEL - HOOD PANEL.

1. Align and measure for placement of vanity plate.
2. Mark holes for drilling.
3. Drill (6) - 9/64" holes.
4. Rivet vanity plate to hood panel.

Thank you and enjoy your purchase!