




## AMERICAN CAR CRAFT INSTRUCTIONS

---

### *2011-2012 Mustang Hood Panel "Vanity Plate"*

**PART #273037**

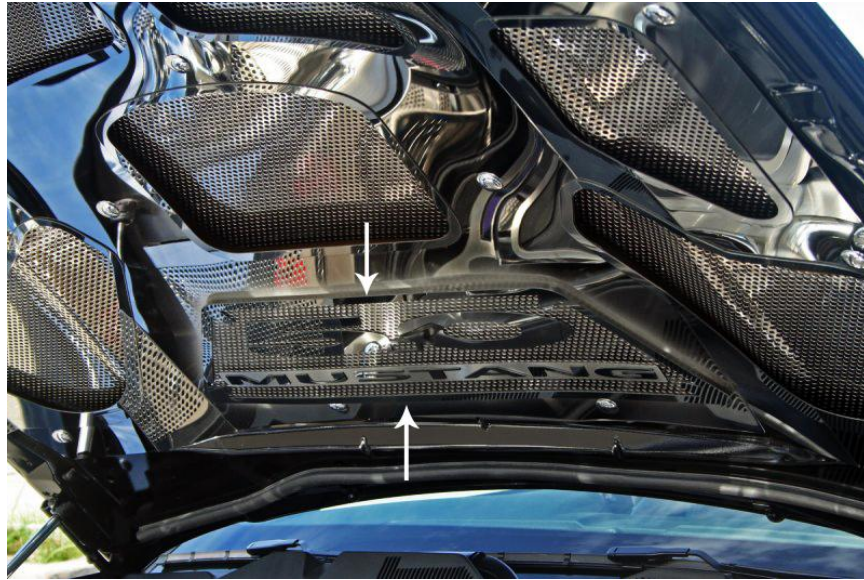

#### **Parts Included:**

6-Rivets

1-9/64" Drill Bit

**NOTE: THIS PART ONLY MOUNTS TO AMERICAN CAR CRAFT CUSTOM STAINLESS STEEL - HOOD PANEL.**

1. Align and measure for placement of vanity plate.
2. Mark holes for drilling.
3. Drill (6) - 9/64" holes.
4. Rivet vanity plate to hood panel.

**Thank you and enjoy your purchase!**